

FEATURED ACCESSORIES

NEW

FELTING EMBROIDERY SET

920402096

ForDESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series

With the HUSQVARNA VIKING® Felting Embroidery Set, you can create the most amazing felted embroideries. The effect is created when embroidering without threads but with...

NEW

YARN EMBELLISHMENT FOOT SET

920403096

ForDESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER™ SE, DESIGNER™ SE Limited Edition,
SAPPHIRE™ 960Q

With the HUSQVARNA VIKING® Yarn Embellishment Foot Set, you can easily create decorative yarn embellishment when sewing. The embellishment...

UPDATE

NOW WITH TWO VERSIONS!

CIRCULAR ATTACHMENT

920392096

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

Not forDESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

Your Circular Attachment is the perfect tool when you want to make unique embellishments on your sewing projects, garments and quilts...

YOU AND YOUR SEWING MACHINE

Welcome to the HUSQVARNA VIKING® world of clever, creative accessories that will save you time and make your sewing and quilting easier and more professional. These tools will open the door to your own sewing studio with more possibilities than you could ever imagine! Most of the accessories have been developed out of the joyful creativity in our own sewing studio in Huskvarna, Sweden where ideas are born and improved. Visit our interactive sewing room at [www.husqvarnaviking.com!](http://www.husqvarnaviking.com) where you will find hints and instructions for various sewing techniques from our own Sewing Stars. If you are looking to sew the perfect gift, garment or something for your home, there are plenty of ideas to download. Let us inspire you at [www.husqvarnaviking.com!](http://www.husqvarnaviking.com)

This User's Guide groups HUSQVARNA VIKING® accessories into sewing categories, plus there are accessory kits for special sewing categories. Be sure to experiment with your accessory feet for additional applications and visit the website for even more ideas. HUSQVARNA VIKING® presser feet and accessories fit virtually all HUSQVARNA VIKING® sewing machines. Look at page 5 to determine the machine group number for your HUSQVARNA VIKING® sewing machine model. Look through the following pages for inspiration on how easy it is to develop your sewing skills and create exciting projects with accessories from HUSQVARNA VIKING®.

TABLE OF CONTENT


HUSQVARNA VIKING® Sewing and Embroidery Machines	4
HUSQVARNA VIKING® Embroidery Software Programs	6
Utility Garment Sewing	12
Home Dec Sewing	28
Decorative/Crafting Sewing	38
Heirloom Sewing	56
Quilting	68
Embroidery	86
Additional Accessories	100
Overlock Sewing and Embellishing	108
Overlock Sewing and Coverstitch	124
INSPIRA™ Needles	136






HUSQVARNA VIKING®
SEWING AND EMBROIDERY
MACHINES


To determine which presser feet and accessories fit your model of HUSQVARNA VIKING® sewing machine, identify your model from the illustrations on this page. The number in a square will identify each of the accessories that will fit your HUSQVARNA VIKING® sewing machine. Step by step instructions teach you how to use each foot, plus project ideas are pictured for your inspiration. If your sewing machine model is not included below, visit our website www.husqvarnaviking.com for more information.

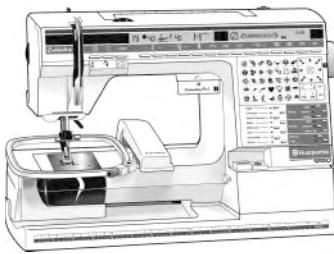

① ORCHIDEA™, I250, #1+, I200, I100, I090, I070, I070 S, I050.

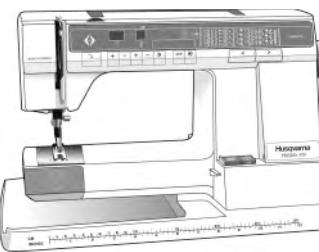


② 990 S, 990, 980, 960, 950 S, 950, 945, 940.

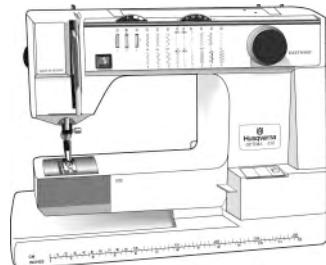


③ 630, 620, 610, I90, I85, I80, I50, I20.




④ 105, 100, 95, 90.

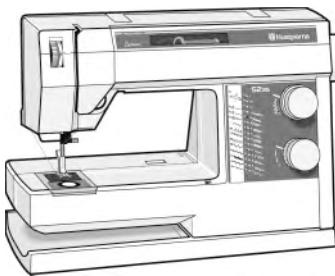

⑤ PRELUDE™ 360, PRELUDE™ 340, DAISY™ 335, 330, 325, 320, 315, 310, HUSQVARNA VIKING® 250, 230, 225/215, 210, 205, SCANDINAVIA™ 100, EDEN ROSE™ 250M, TRIBUTE™ 140M, EMERALD™ 122, 118, 116.

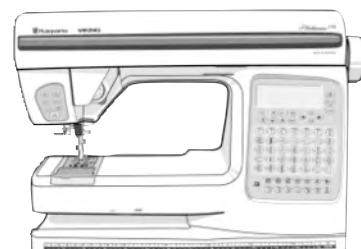

⑥ PLATINUM™ 955 E, 950 E, PLATINUM™ Plus 775, 770, 755 Quilt, 750 Quilt, 735, 730, 715, ROSE™ 605, 600, IRIS™, LILY™ 555, 550, 545, 540, 535, 530, HUSQVARNA VIKING® 500, INTERLUDE™ 445, 435, FREESIA™ 425, 415, HUSQVARNA VIKING® 400, 350, SCANDINAVIA™ 400, 300, 200, EMERALD™ 203, 183.

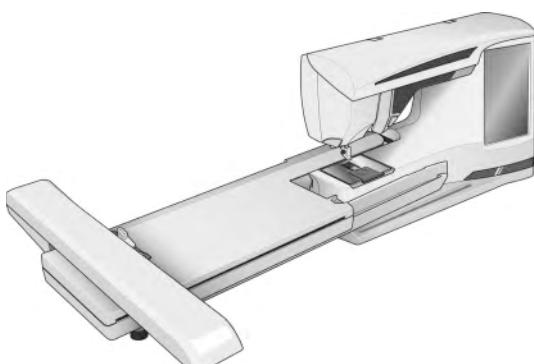


⑦ DESIGNER DIAMOND Royale™, DESIGNER DIAMOND deLuxe™, DESIGNER DIAMOND™, DESIGNER RUBY Royale™, DESIGNER RUBY deLuxe™, DESIGNER RUBY™, DESIGNER TOPAZ™ 50, 40, 30, 25, 20, DESIGNER™ SE, DESIGNER™ SE Limited Edition, DESIGNER™ I, II, QUILT DESIGNER™, QUILT DESIGNER™ II, SAPPHIRE™ 960Q, 930, 875Q, 870Q, 855, 850, 835, 830, OPAL™ 690Q, 670, 650, EDEN ROSE™ 250C, TRIBUTE™ 140C.



HUSQVARNA VIKING®
EMBROIDERY SOFTWARE
PROGRAMS

TruEmbroidery™ 3 is the embroidery software designed specifically for Apple® users. With a true native Mac® interface, including OS X Yosemite features, you'll have the ease of multi-touch gestures and version saving. The Assistants will help you create designs, embroider a photo, create a filled or outlined quilt block and split your projects automatically. The new TruE™ 3 Thread Cache is a great way to organize your own personal thread stash for different projects. With TruE™ 3 Thread Cache you can choose the threads from many different manufacturers and add them to one or more personal My Thread Palettes. Create shopping lists for your iPhone or iPad or print the list so you are never short of threads for any project!

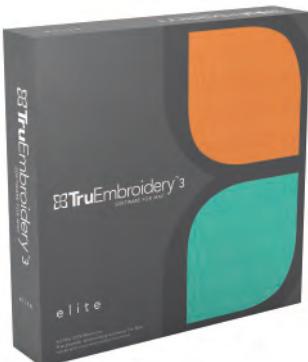

TRUEMBROIDERY™ 3 ELITE

640000426

TruEmbroidery™ 3 elite is the premium, fully featured package containing the full range of Assistants, fonts and embroideries.

Included in TruEmbroidery™ 3 elite:

- TruE™ 3 Studio
- PhotoStitch™ Assistant (including 10 effects)
- QuiltBlock™ Assistant
- QuickCreate™ Assistant
- Split Project Asssistant
- TruE™ 3 Create
- TruE™ 3 Modify
- TruE™ 3 Thread Cache
- TruE™ 3 Finder Plugin

TruEmbroidery™ 3 elite includes everything in TruEmbroidery™ 3 elements


Create it. Customize it. Transform It — with TruE™ 3 elite, the all-inclusive embroidery software for Mac® computers

- Whatever your embroidery inspiration, TruE™ 3 elite will set your creativity free! Adjust your embroideries, and personalize with lettering or a unique monogram.
- Resize, restyle and reshape your embroideries with ease, editing stitch areas to completely different patterns for a whole new look!
- Create designs automatically from clipart or photos, make a quilt block in a few clicks or craft an all-new heirloom with amazing lace and special stitching techniques.
- The TruE™ 3 ELITE package contains the complete range of TruE™ 3 software, assistants, fonts and embroideries, including two exclusive applications, two exclusive assistants and 100 very special bonus designs.

Designs & Images

- 800+ standard embroidery designs
- 550+ SuperDesigns
- 100 bonus premium embroidery designs
- 145+ embroidery fonts including 6 Puffy Foam fonts
- 550+ frames and flourishes including
36 Puffy Foam frames
- 700+ decorative motifs
- 2400+ backgrounds
- 375+ clipart images

TruEmbroidery™ 3 elite is also available as an upgrade package from the original TruEmbroidery™ Software (internet only) or TruEmbroidery™ 3 elements (box package part number 640000626 or via internet).

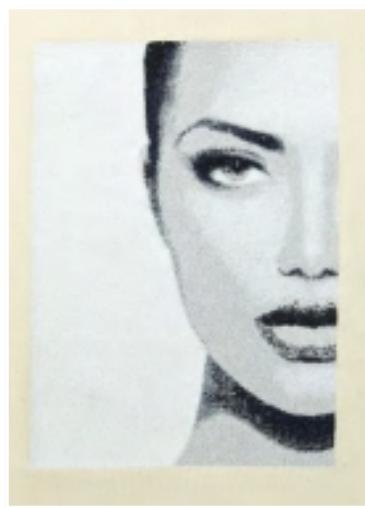

TRUEMBROIDERY™ 3 ELEMENTS

640000726

Personalize It. Modify It. Make It - with TruE™ 3 elements, the fundamental embroidery software for Mac® computers


- Style and transform embroidery designs with ease. Change colors, resize and rotate, and repeat designs. Move, add, or delete stitches and commands.
- Add lettering and embellish your embroideries with motifs or frames.
- Create beautiful designs from your favorite clipart automatically or transform a cherished family photo into an embroidery portrait — select from 6 monochrome linear or artistic effects.*
- Visualize your personalized project on a real-life garment, quilt block or fabric. Choose from more than 2400 included backgrounds or add your own.

Software:

- TruE™ 3 Studio
- PhotoStitch Assistant including 6 monochrome effects
- QuickCreate Assistant
- TruE™ 3 Thread Cache
- TruE™ 3 Finder Plugin

Designs & Images

- 800+ standard embroidery designs
- 550+ SuperDesigns
- 145+ embroidery fonts including 6 Puffy Foam fonts
- 550+ frames and flourishes including 36 Puffy Foam frames
- 700+ decorative motifs
- 2400+ backgrounds
- 375+ clipart images

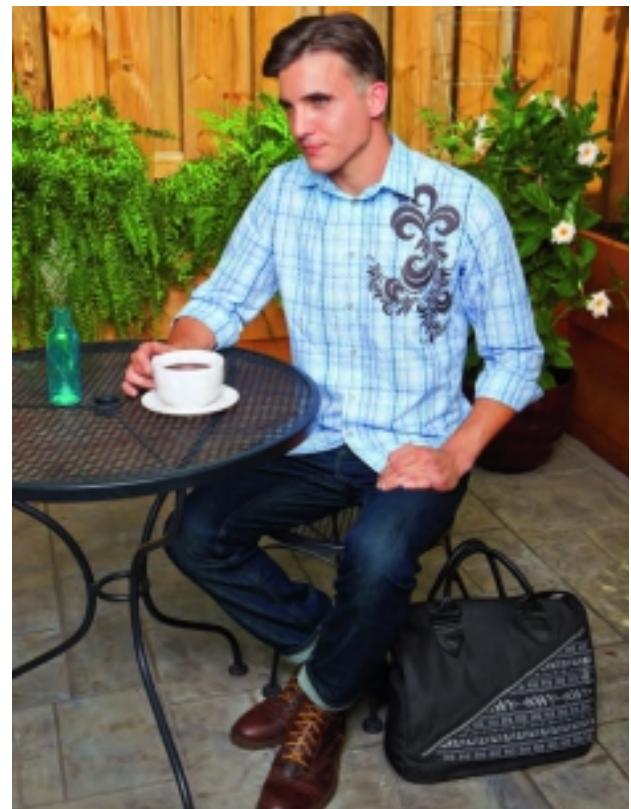

The new 6D™ Embroidery Software will inspire you to dream, to design and to create beautiful, personalized embroideries. Innovative features make it all possible, faster and more intuitive than ever. 6D™ is designed to be used with Windows® 7 and Windows® 8. Managing your designs is easier than ever with the new Windows® Explorer plug-in; and the new ribbon bar interface groups all related features together intuitively. With a Windows® 8 touch screen your designs are right at your fingertips! You can pinch, zoom, auto-scroll and select and move right on your screen! The new 6D™ software will make your embroidery projects easy and fun. You won't believe where it takes you!



HUSQVARNA VIKING® 6D™ PREMIER

920377026

The HUSQVARNA VIKING® 6D™ Premier package contains the complete range of 6D™ Embroidery software, wizards, fonts and embroideries, including five exclusive modules and 100 very special bonus designs.

Software modules included in 6D™ PREMIER:

- 6D™ Windows® Explorer Plug-In
- 6D™ Embroidery Extra
- 6D™ Card Shop
- 6D™ Stitch Editor Plus*
- 6D™ Design Aligner*
- 6D™ Cross Stitcher*
- 6D™ PhotoStitch**
- 6D™ Family Tree**
- 6D™ Sketch**
- 6D™ Design Creator**
- 6D™ Font Digitizing**

**Additional modules are available in the 6D™ Premier package or via add-on purchase on the Internet*

***Exclusive modules are available in the 6D™ Premier package or as part of an upgrade to 6D™ Premier*



6D™ PREMIER includes everything in **6D™ EMBROIDERY EXTRA** along with the functionality of all the included modules:



- **6D™ Card Shop:** Create personalized embroidery cards automatically with themed templates for special occasions.
- **6D™ Stitch Editor Plus:** Reshape and restyle your embroideries with object editing features.
- **6D™ Design Aligner:** Lay out large designs for your own hoop.
- **6D™ Cross Stitcher:** Design beautiful cross stitch embroideries with traditional quality and the speed of a machine.
- **6D™ PhotoStitch:** Embroider unique color or monochrome embroidery portraits automatically from your own photos.
- **6D™ Family Tree:** Create embroidery charts, quilt blocks and album pages automatically from your own family history!
- **6D™ Sketch:** Release your inner artist and “draw” your own stitch paintings.
- **6D™ Design Creator:** Create your perfect embroidery with unlimited design possibilities!
- **6D™ Font Digitizing:** Create your own Fonts and SuperDesigns to use in the 6D™ Embroidery System.



6D™ EMBROIDERY EXTRA


920380026

HUSQVARNA VIKING® 6D™ EMBROIDERY EXTRA: Create designs, PhotoStitch and quilt blocks automatically for your personalized project and audition on real garments, quilt blocks and fabrics.

Software included in 6D™ EMBROIDERY EXTRA:

- Windows® Explorer Plug-In
- 6D™ Embroidery Extra
- 6D™ Card Shop

Enjoy all of the functions of 6D™ EMBROIDERY with 6D™ EMBROIDERY EXTRA. Plus, create designs automatically from a picture with the ExpressDesign Wizards, create a filled or outline quilt block automatically with the QuiltBlock Wizard, Audition your project including any appliqués, on real garments, quilt blocks and fabrics and embroider unique embroidery portraits automatically from your own photos.

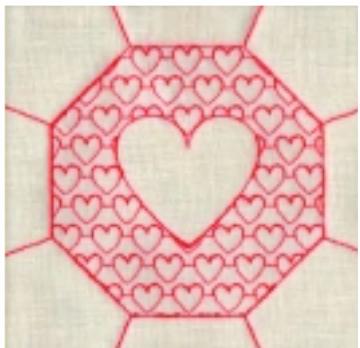

6D™ EMBROIDERY

920381026


HUSQVARNA VIKING® 6D™ EMBROIDERY: Adjust, monogram, personalize and combine your embroideries with an unlimited number of designs and lettering options.

Software included in 6D™ EMBROIDERY:

- Windows® Explorer Plug-In
- 6D™ Embroidery

Adjust an unlimited number of designs and lettering in a project area of up to 2m width and height. Choose from a huge range of designs and SuperDesigns! Automatically repeat and reflect your design with the Encore and Endless features. Select multiple designs and move them as a group. Extensive lettering choices help you personalize all your projects.



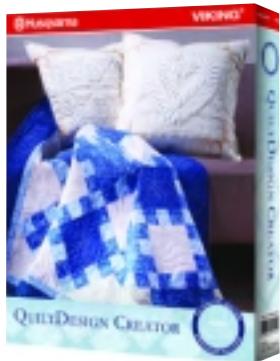

HUSQVARNA VIKING® QUILTDISIGN CREATOR

920331026

Incredibly Savvy. Surprisingly Simple.

The new HUSQVARNA VIKING® QUILTDISIGN CREATOR software has more power than ever to bring your ideas to life, from adding intricate details with only a few clicks to visualizing your masterpiece before you've started sewing.

With more than 350 designs, 175 fabric backgrounds, 150 motifs, 45 flourishes and 30 fonts in your toolbox, it's easier than ever to add those beautiful little touches to your quilting project. Automatically create quilt blocks. Personalize your quilt by creating a quilt label or adding text to a quilt block. Use step by step software wizards to design and create. Blocks can be created by tracing a picture or the using included designs and MiniPics. Draw your design or create text from fonts on your computer. Enhance your design with special line effects or echo quilting.

The software works with most automated quilters and embroidery machines.

Whether you are a frame quilter or an embroiderer, HUSQVARNA VIKING® QuiltDesign Creator will help you quilt a masterpiece.

Find more information at www.husqvarnaviking.com or at an authorized dealer.





UTILITY GARMENT
SEWING

HUSQVARNA VIKING® accessories make fashion and garment sewing techniques such as seam finishing, buttonholes, hems, topstitching, zippers and more, easy to sew with professional results. Visit the Sewing Room at www.husqvarnaviking.com for more tips and techniques.




CLEAR SEAM GUIDE FOOT


413034845

① ② ③ ④ ⑤ ⑥ ⑦

Guides your edge stitching when joining the fabric. Keeps the seam allowances at the same distance from the edge throughout the project. There is a Metallic edge guide plus four different lines for various seam allowances.

1. Thread your machine with sewing thread on top and in the bobbin.
2. Snap on the Clear Seam Guide Foot.
3. For joining fabrics: Place fabric right sides together.
4. Place the fabric under the presser foot with the metallic guide at the edge of the fabric for $\frac{5}{8}$ " (1.5 cm) seam allowance.
5. Lower the presser foot and start to sew. The Guide will follow the edge of the fabric and the seam will be sewn with the perfect straight seam allowance.
6. Use the four other red marked lines on the presser foot for additional rows of seams or a narrower seam allowance.

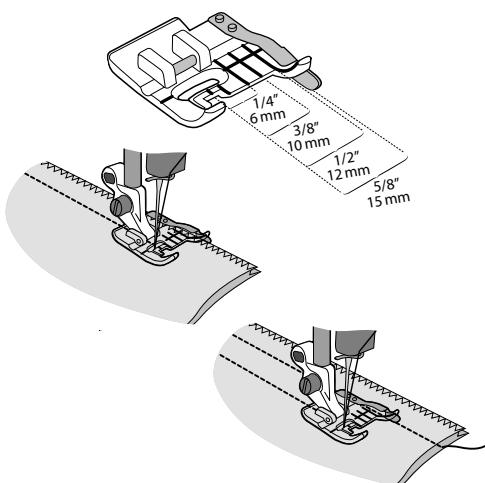

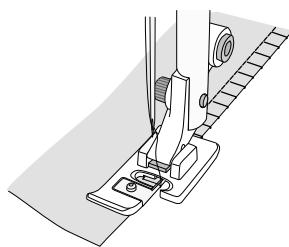


EDGING FOOT J

412380645

① ② ③ ④ ⑤ ⑥ ⑦

The J Foot is used for overcast stitches that stitch to the side and can pucker or curl the fabric to prevent the fabric from curling under. The tiny wire on the edge of the foot prevents the curling of the fabric edge. Consult the HUSQVARNA VIKING® Infodisplay which recommends the J Foot for many overedge stitches.

1. Snap on the Edging Foot J.
2. Select an overcast or overedge stitch and turn the hand wheel by hand to be sure the needle does not hit the foot. Adjust stitch width as needed.
3. Sew.

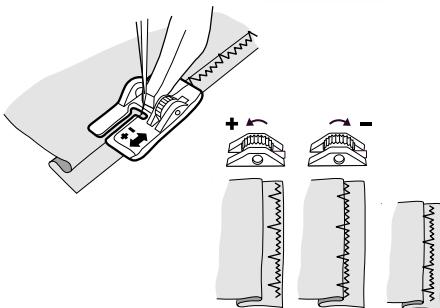

ADJUSTABLE BLIND HEM FOOT

412976645

① ② ③ ④ ⑤ ⑥ ⑦

The Adjustable Blind Hem Foot can be moved from side to side to fine tune the amount of fabric caught by the blind hem stitch.

1. Snap on Adjustable Blind Hem Foot.
2. Fold and press hem as instructed for blind hem.
3. Place hem under foot and turn the orange dial on the blind hem foot to the right or left to adjust the foot from side to side until the wide zigzag stitch of the blind hem barely catches the fold of the fabric.





ROLLER FOOT

412990245

① ② ③ ④ ⑤ ⑥ ⑦

The Roller Foot sews fabrics with uneven levels, leathers, velvets, and fabric with nap or loops. Straight stitch, zigzag and other forward motion utility and decorative stitches.

1. Snap on Roller Foot.
2. Select stitch and sew.

The little wheels ride smoothly over a variety of fabric types.




NON-STICK GLIDE FOOT H

412796145

① ② ③ ④ ⑤ ⑥ ⑦

When sewing foam, plastic, plastic coated fabrics, leather and imitation leathers, the Non-stick Glide Foot H feeds over the fabric without sticking. Use it for general sewing and buttonholes on plastic and leather type fabrics.

1. Snap on the Non-stick Glide Foot H.
2. Select desired stitch and sew.

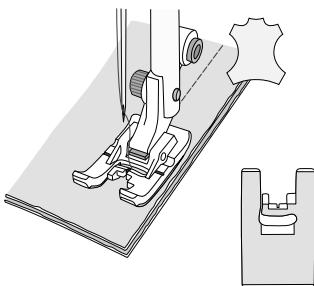



FLAT FELLED FOOT 9 MM

413185545

① ② ③ ④ ⑤ ⑥ ⑦


9 mm Flat-felled seams such as the typical jeans seams, are extremely durable and popular. 9 mm flat-felled seams are often used in home dec items. They add a decorative touch when sewn with a contrasting thread. Best results will be achieved on medium to heavy weight fabrics.

Method One:

1. Snap on the Flat-Felled Foot 9 mm Foot.
2. Place the wrong sides of the fabrics together and overlap the raw edges by using the red markings on the foot as a guide. The lower fabric should follow the marking on the right side of the foot and the upper fabric should follow the red marking on the right front side. (This will result in a double row of stitching on the right side of the garment. If you want a single row of stitching on the garment, stitch right sides of the fabric together.)
3. Stitch fabric together with a straight stitch
4. Press the seam allowance to the left
5. Use the guides on the front of the Flat-Felled Foot to fold the wider seam allowance around the narrower seam allowance. Stitch in place using a straight stitch.

Method Two:

If you have a seam allowance of 15 mm ($\frac{5}{8}$ ") included in your pattern, use the outer right markings on the Flat-Felled Foot as a guide for both layers. Cut off 6mm from the top seam allowance. Then continue with step 4.

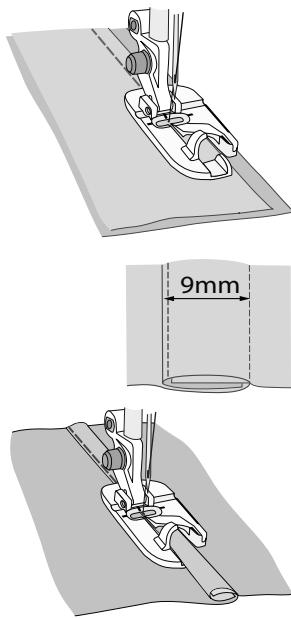



SENSOR ONE-STEP BUTTONHOLE FOOT

412815102


① ⑥ ⑦

Not for

415, 350, EMERALD™ series, EDEN ROSE™ 250M,
TRIBUTE™ 140M.

The Sensor One-Step Buttonhole Foot measures buttonhole length and sews the button size that has been entered into the machine. The middle mark gives a $9/16"$ (15 mm) buttoning edge. The Sensor one-step Buttonhole Foot measures as it sews, making every buttonhole the same size. The button size is adjusted in 2 mm steps.

1. Snap on the Sensor One-Step Buttonhole Foot. Plug the cord into the socket near the light on the machine. Line up the white range on the side of the wheel with the white marking line on the foot.
2. Set the button size on your HUSQVARNA VIKING® sewing machine.
3. Lower the presser foot and sew. Line up the white range on the side of the wheel before you sew the next buttonhole to sew it in exactly the same size.
4. Use red lines on foot to sew every buttonhole the same distance from edge of project.

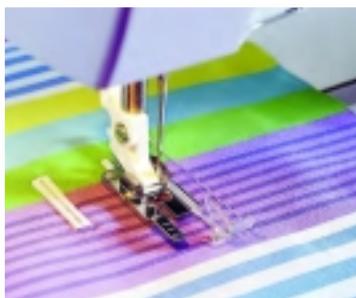

ADJUSTABLE BUTTONHOLE FOOT

412679245

① ② ③ ④ ⑤ ⑥ ⑦


Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M

The Buttonhole Foot has a slide that is adjustable for different sizes of buttons to make several buttonholes the same size. Use the markings on the left toe of the foot to position the buttonhole. The middle mark gives a $5/8"$ (15 mm) buttoning edge.

1. Snap on the Adjustable Buttonhole Foot and select a buttonhole.
2. Put the button onto the foot and push the slide against the button as tight as it will go. Remove the button before you start to sew.
3. Lower the presser foot and sew. The machine sews the first column in reverse. Stop sewing when the red mark on the slide has reached the beginning of the stitching.
4. Continue sewing the buttonhole.

When sewing buttonholes in stretch fabrics we recommend cording the buttonhole to increase the stability and to keep the buttonhole from stretching out. For a cored buttonhole loop a piece of heavy thread around the finger at the back of the Buttonhole Foot as illustrated.

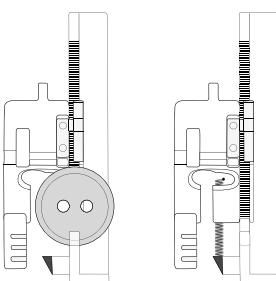



GATHERING FOOT

412797145

- ① ② ③ ④ ⑤ ⑥ ⑦


Gather fabric or gather and attach a ruffle in one step. Suitable for light to medium weight fabrics. Straight stitch, (left needle position), length 3 to 6. The longer the length, the more fabric will gather. Snap on Gathering Foot.

For gathered fabric:

Place fabric under Gathering Foot and sew. Increase upper tension for tighter gathers.

To gather and attach gathered fabric in one step:

1. Place fabric to be gathered under the presser foot right side up.
2. Place fabric to have ruffle attached to it in the groove of the foot right side down.
3. Sew, guiding the under fabric but do not hold it back. Keep the top fabric in the groove moving it steadily as needed. Increase the stitch length, upper tension and presser foot pressure for more gathers.

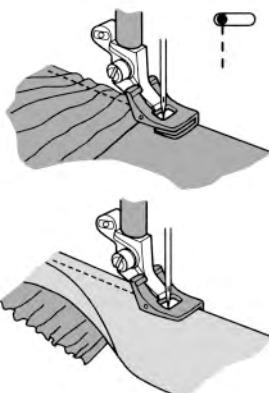


NARROW ZIPPER FOOT

412565745

- ① ② ③ ④ ⑤ ⑥ ⑦

Snap on the Narrow Zipper Foot to stitch extra close to zipper teeth, snaps, snap tape, beads, etc. This foot can be snapped on to the right or the left of the needle and the grooves on the underside grip specialty fabrics for excellent feeding. To sew a lapped zipper into a seam:

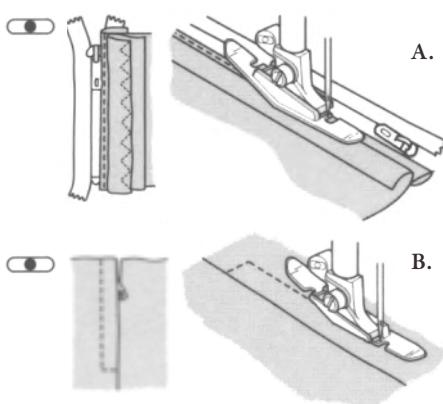

1. Baste the zipper seam.
2. Select center needle position straight stitch. Snap on the Narrow Zipper Foot to the left of the needle.
3. Form a narrow fold of the seam allowance on one side and place the zipper right side up under the folded edge. Start stitching from the bottom of the zipper, along the narrow edge and up to the fabric edge. Illustration A
4. Fold over the opposite fabric edge and seam allowance over the zipper.
5. Snap on Narrow Zipper Foot to the right of the needle. From the right side, stitch below the bottom of the zipper and up to the fabric edge. Illustration B
6. Remove the basted seam with a seam ripper.




INVISIBLE ZIPPER FOOT

412687045





① ② ③ ④ ⑤ ⑥ ⑦

An invisible zipper is always inserted before stitching the garment seam. The Invisible Zipper Foot has two grooves underneath the foot to accommodate the zipper coils and hold them in place as you stitch. Buy a zipper that is at least $1 \frac{1}{4}$ " (3 cm) longer than the zipper opening.

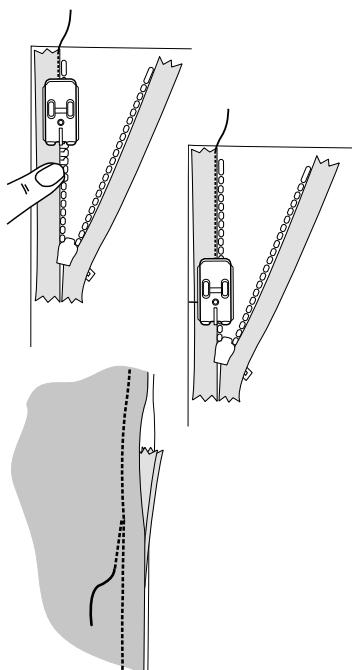

1. Mark the length of the zipper opening on the seam allowance and on the zipper. The excess length should be at the bottom of the zipper. Snap on the Invisible Zipper Foot. Select center needle position straight stitch. Length 2.5–3.0.
2. Unzip the zipper.
3. Place the right part of the zipper on the fabric right sides together. The coil should be on the seam line and the top stop of the zipper $\frac{3}{4}$ " (2 cm) below the cut edge of the fabric.
4. Finger press up the zipper coils and lower the presser foot with the zipper coils in the right opening under the foot. Adjust needle position to align the needle with the needle guide on the front of the foot. Backstitch and sew. Stop at the mark on the zipper and seam allowance and backstitch to tie off.
5. Place the left part of the zipper right sides together with the left side of the garment. Lower the presser foot with the left opening over the zipper teeth. Make sure that the needle is perfectly aligned with the needle guide in front of the foot again. Sew in the same way as the first side.
6. Pull up the zipper pull. Place the fabric with the zipper right sides together. Snap on the regular Zipper Foot E to the left of the needle. Adjust needle position to the right. Pin the rest of the fabric below the zipper right sides together. Sew the seam from the lower edge and up to the zipper overlapping the backstitched seam. If the zipper is too long, whipstitch across the zipper teeth $1 \frac{1}{4}$ " (3 cm) below the inserted zipper length. Cut away excess zipper below the whipstitching.



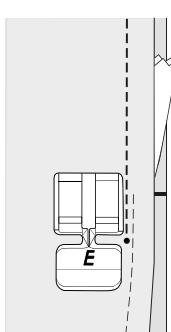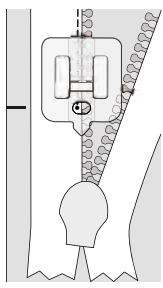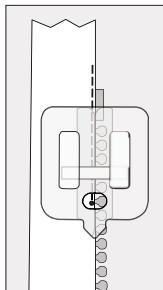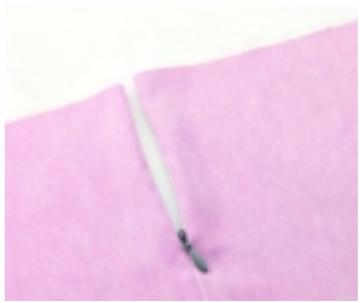

CLEAR INVISIBLE ZIPPER FOOT

413286545

① ② ③ ④ ⑤ ⑥ ⑦

Invisible Zippers (sometimes called concealed zippers) are most often seen in the center back of a dress, in the side or back of pants and skirts, and in some home dec projects. As the name implies, the zipper is hidden in a seam, becoming virtually invisible. This zipper application is often thought of as very difficult to do, however it's really one of the easiest, especially when sewn with the HUSQVARNA VIKING® Clear Invisible Zipper Foot.

1. An invisible zipper is always inserted before stitching the garment seam.
2. Mark the length of the zipper opening on the seam allowances and on the zipper. The excess length should be at the bottom of the zipper.
3. Snap on the Clear Invisible Zipper Foot
4. Select center needle position straight stitch. Length 2.5-3.0.
5. Place the right part of the zipper on the right side of the seam, right sides together. The coil should be placed on the seam line, starting about $\frac{3}{4}$ " (2cm) below the cut edge of the fabric.
6. Carefully press the zipper teeth slightly to the right and lower the presser foot, so that the coil lies in the groove to the right of the needle.
7. Starting at the top, sew the zipper in place. Stop at the mark on the zipper and seam allowance and tie-off.
8. Place the second zipper tape on the left side of the opening, right sides together. Make sure both coils are level.
9. Pin the zipper in place. Open the zipper.
10. Lower the presser foot with the left groove over the zipper teeth. Sew in the same way as the first guide.
11. Close the zipper. Place the fabric with the zipper right sides together. Pin the rest of the fabric below the zipper right sides together.
12. Snap on the regular Zipper Foot E to the left of the needle. Adjust the needle position as needed.
13. Sew the seam from the lower edge and up to the zipper overlapping the backstitched seam.
14. Press the seam open

Note: Buy an invisible zipper that is at least $1\frac{1}{4}$ " (3cm) longer than the zipper opening.




BUTTON FOOT WITH PLACEMENT TOOL

412934545

① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M

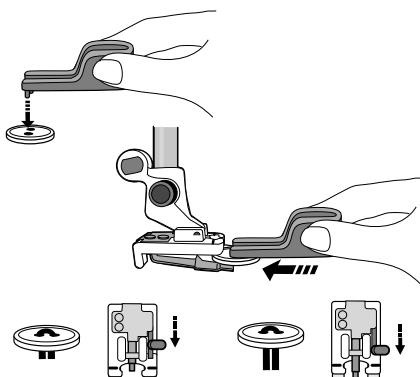

This presser foot for sewing on buttons raises the button slightly off the fabric to give a slight thread shank to enable easy buttoning, and prevent the button from being sewn too tightly to the fabric.

1. Thread with matching sewing thread on top and in the bobbin. Snap on the Button Foot.
2. Slide the Retractable Thread Shank Guide into the desired position. All the way back will give you no thread shank. The first position will give you a shorter shank for light weight fabrics. The second position (all the way forward) will give you a longer thread shank for heavier fabrics.
3. For a button smaller than 1/4" (6 mm), use the Placement Tool. Insert the Button Placement Tool into the holes of the button. Note: Avoid using a button higher than $\frac{1}{8}$ " (3 mm).
4. Insert the Button Placement Tool with the button in place into the slot in the foot. The button will automatically be placed in the correct position for sewing.
5. Remove the Button Placement Tool.
6. Select "Button Sewing" on your SEWING ADVISOR™ feature. Adjust the Stitch Width if necessary.
according to the width between the holes in the button.
7. Sew on your button following the instructions in your User's Guide.




LEFT EDGE TOPSTITCH FOOT

412784245

- ① ② ③ ④ ⑤ ⑥ ⑦

The Left Edge Topstitch Foot guides your top stitching and edge stitching perfectly. Use the inner right side of the presser foot to guide the fabric. Together with the underside of the foot which is designed to glide along the folded edge, you will get a beautiful top stitch on your project. Use the Left Edge Topstitch Foot for hemming bulky projects such as curtains, etc. It will allow you to have the bulk of the fabric to the left of the free arm for easier sewing.

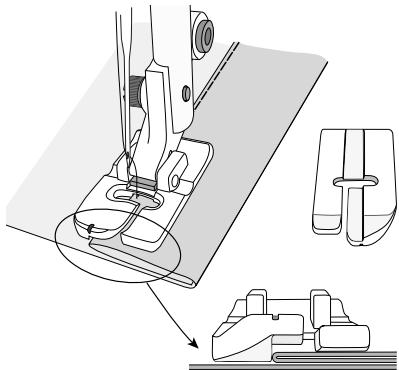



RUFFLER


920032096 ⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M

The Ruffler creates tiny pleats or gathers in light to medium weight fabrics.

Ruffler set up:

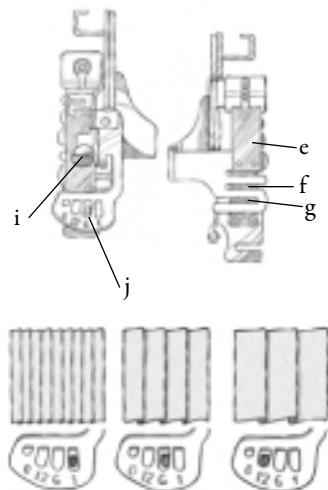

1. Remove the ankle/shank.
2. Replace the needle clamp screw with the longer screw included with the ruffler.
3. Place the Ruffler on the machine ankle/shank with the fork over the needle clamp screw. Secure the Ruffler on the ankle with the accessory thumb screw.
4. Set machine for straight stitch only.
5. Reduce presser foot pressure as needed.
6. The adjusting lever (J) sets how often the Ruffler will pleat. Set it at 1 for a pleat each stitch, 6 a pleat every 6th stitch, and 12 a pleat every 12th stitch. Set it to 0 for no pleats, the Ruffler action is disengaged for normal straight stitching.
7. The adjusting screw (I) sets how full the ruffles will be. Experiment stitching on scraps of the same fabric to be ruffled. Turn the screw to the right for more and the left for less fabric fullness in the ruffle.
8. Stitch length 2.5-3. Experiment with other length settings because the stitch length will also affect the fullness of the ruffle. The shorter the stitch the less distance between the pleats. Width must always be 0 for straight stitch.

Sew:

1. Place the fabric to be ruffled into the guide slots (G), then between the two black blades of the Ruffler (E & F) beyond the point of the needle.
2. Lower the presser foot and sew at an even medium speed.

Create ruffle and stitch to flat fabric at the same time:

1. Place the flat fabric right side up under ruffler.
2. Place the fabric to be ruffled right side down into the guide slot and blades as in step 1 above.
3. Sew. The flat fabric is moved by the feed teeth as the top fabric is ruffled and stitched to it.




ELASTIC GUIDE FOOT

412815345

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

The Elastic Foot guides and stretches 6 to 12 mm wide elastic as it is sewn in place. Use it for action wear, lingerie, and other elastic insertion techniques.

1. Set the grey numbered dial on the elastic foot to 3 or 4. Align the number with the tiny metal arrow. The higher the number the more the elastic will be stretched.
2. Gently push the grey roller toward the numbered dial and lift it up.
3. Insert the elastic into the longer slot opening on the base of the foot.
4. Bring the roller down on the elastic and click it into place by gently pushing it away from the numbered dial.
5. Turn the roller until the center groove of the roller matches the width of the elastic so the elastic will guide straight.
6. Snap The Elastic Foot onto the machine. Set the machine for three step zigzag stitch, length 1, adjust width according to the elastic. Presser foot pressure 7–9. (The higher the pressure, the more the fabric will gather onto the elastic.)
7. Place fabric under the foot and sew. The fabric will ease onto the elastic as the elastic is stretched and sewn in place. The higher the setting of the dial on the foot the more the elastic will be stretched.

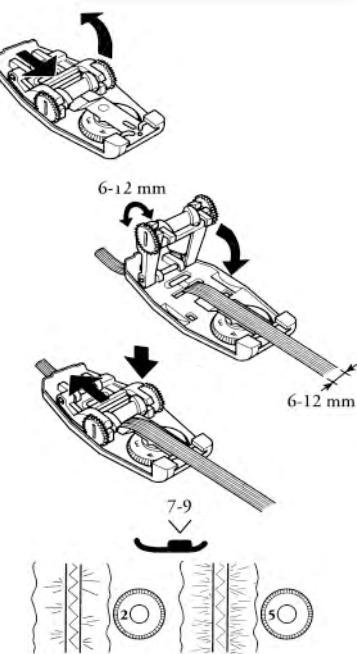


EDGE STITCHING FOOT

412796745

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

The Edge Stitching Foot guides topstitching and edge stitching perfectly. Stitch folded tucks accurately.

1. Snap on the Edge Stitching Foot.
2. Place project under foot with the flange guide at the edge of the project.
3. Select straight stitch (or desired stitch) and adjust needle position so the stitching row will be sewn at desired distance from edge. (Adjust the straight stitch needle positions from side to side with the width adjustment.)
4. For additional parallel rows of topstitching, adjust needle position and sew.

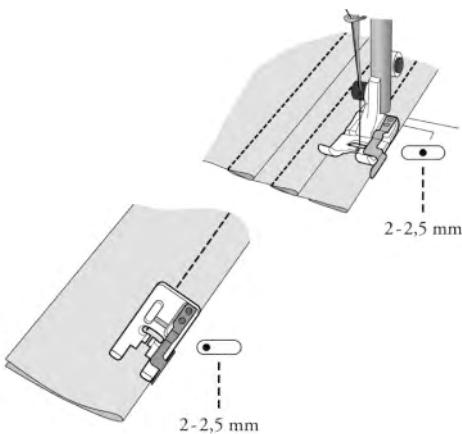



EDGE / JOINING FOOT


412796845

① ② ③ ④ ⑤ ⑥ ⑦

Guides topstitching. Guides trims that are sewn to an edge or when two trims are sewn together. Edge/stitch: Straight stitch, left needle position, length 2–4.

1. Snap on the Edge/Joining Foot.
2. Place edge of fabric against flange/guide. Sew. Topstitch: Straight stitch, center needle position, length 2–4.
3. Snap on Edge/Joining Foot.
4. Place flange/guide at line to topstitch. Sew. Joining: 3 step zigzag, or bridging stitch, length 2–3, width 4–7.
5. Place two pieces of fabric or trim, one on each side of the guide/flange of the foot.
6. Sew. Keep fabric/trim against the flange/guide to join them.

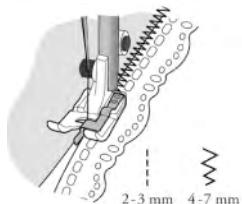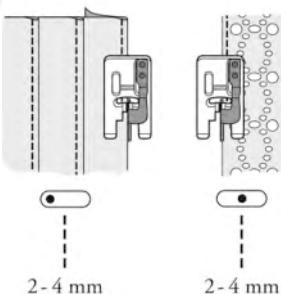

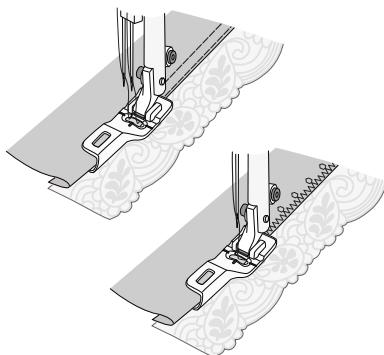

JOIN AND FOLD EDGING FOOT

413248845

① ② ③ ④ ⑤ ⑥ ⑦

Use the Join and Fold Edging Foot together with different types of edging, such as lace, embroidered trims or various fabrics, along with the beautiful HUSQVARNA VIKING® stitches to create beautiful edgings. Make lingerie in a snap, add lace to create beautiful handkerchiefs or delicate table toppers. This foot will easily guide the edging and the base fabric through the openings in the front of the foot, fold the base fabric and simultaneously sew the edging in place.

1. Thread your sewing machine with regular sewing or decorative thread through the needle and regular sewing thread in the bobbin.
2. Select the stitch you would like to use. For example: the edging could be sewn onto the base fabric using a straight stitch and a 4mm twin needle or a right justified wide decorative stitch. Note: Decorative stitches that use forward motion work best. (Avoid stitches with too much backward motion.)
3. Fold a $\frac{1}{4}$ " (6mm) hem of base fabric to the wrong side, then finger press or iron.
4. Insert the folded edge of base fabric with the right side up into the left fabric guide, and the edging (right side up) into the right guide. Slide the folded fabric edge and the edging into the foot, prior to attaching the foot onto the sewing machine.
5. Make sure the base fabric and the edging slide easily through the openings.
6. Snap on the Join and Fold Edging Foot to the sewing machine.
7. Sew carefully, not too fast. If your machine has a speed control, reduce the sewing speed to easily guide the fabric and edging as you sew. Hold the fabric in your left hand and the edging in your right hand and sew.



Personally designed
for you by

Well Done



Julia!



50



HOME DEC
SEWING

Sewing for your home is a wonderful way to express yourself in fabric and fiber.
HUSQVARNA VIKING® has developed accessories to make sewing home decorating techniques and finishes such as welting and binding fast, easy and professional.

29

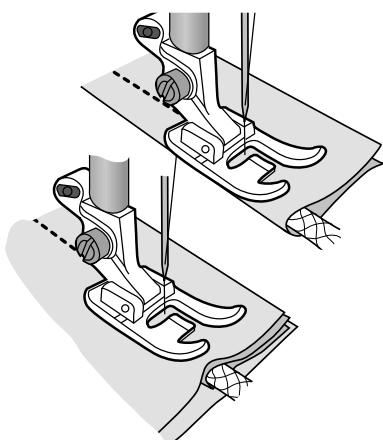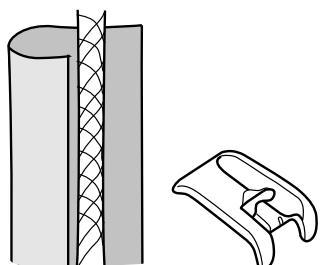

SINGLE WELT CORD FOOT

412627045

① ② ③ ④ ⑤ ⑥ ⑦


Snap on the Single Welt Cord Foot to easily, quickly, accurately make and insert welted cording into your upholstered and home dec projects. Whether the welt cord is purchased pre-covered or you cover it yourself, this accessory foot gives you a professional finish. It sews like the piping foot but is designed for larger sizes of cording.

To cover welt cording:

1. Use $\frac{1}{4}$ " (6 mm) Cotton Filler Cord. Cut strips of bias or cross grain fabric wide enough to cover the cord plus seam allowance.
2. Snap on the Single Welt Cord Foot. Select center needle straight stitch, stitch length 3.
3. Place the cording on the wrong side of the fabric strip and wrap the fabric strip around the cord.
4. Place the fabric and cord under the Single Welt Cord Foot with the cording in the groove on the underside of the foot.
5. Sew to cover the cording with the fabric.

To stitch covered welt cord into a seam:

1. Snap on the Single Welt Cord Foot. Select center needle position straight stitch, stitch length 3.
2. Place the covered welt cord on the right side of the fabric along the seam line. Place it under the Single Welt Cord Foot with the welt cord in the groove of the foot. Stitch the welt cord to the fabric. Clip the seam allowance of the welt cord at curves and corners.
3. Place the second piece of fabric right sides together with the first. The welt cord will be between the two layers. Place the welt cord in the groove and stitch with the first stitching line up. Touch the width to adjust the needle position slightly to the right to cover the first stitching.

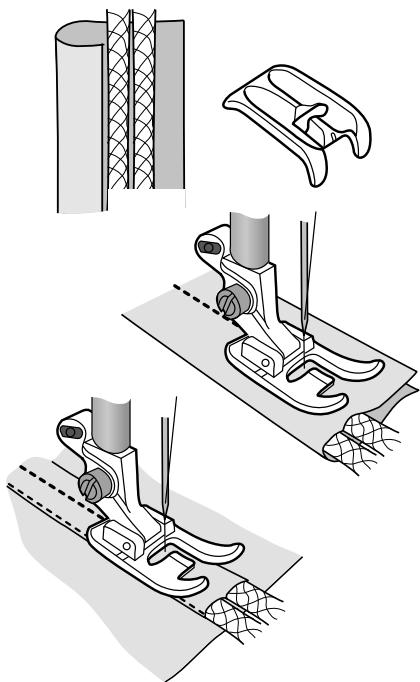

DOUBLE WELT CORD FOOT

412627145

① ② ③ ④ ⑤ ⑥ ⑦

The Double Welt Cord Foot is used to make trim, to cover raw edges in place of braid or trim on your upholstery and home dec projects, or as a decorative touch on pillows, cushions and other home accessories. Create any color of trim when the color you need is not readily available.

1. Purchase $\frac{1}{4}$ " (6 mm) Cotton Filler Cord at least two times the length of the finished length of double welt trim.
2. Cut bias strip wide enough to wrap around two cords plus seam allowance.
3. Snap on the Double Welt Cord Foot. Select center needle straight stitch, stitch length 3.0. Place the cords side by side on the wrong side of the bias strip and wrap the fabric around the cords. Place the fabric and cords under the Double Welt Cord Foot with raw edges of the fabric to the right. Place the right cord in the left groove on the underside of the foot. Keep the cords against the fold as you sew.
4. Wrap the excess fabric to the underside and straight stitch between the cords through all layers. Trim the excess fabric on the wrong side near the stitching.
5. To sew the double welt cord trim to fabric, lay it in place on the project and straight stitch over the row of stitching in step 4.
6. For the edges of upholstery, use small upholstery finishing tacks or a staple gun to attach the double welt cord trim to cover raw edges.



10 MM HEMMER

412017645


① ② ③ ④ ⑤ ⑥ ⑦

Not for

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EMERALD™ 122, 118, 116,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

**Rolls a 10 mm double hem in light to medium weight fabrics.
Straight stitch, length 2.5. Snap on the A-foot.**

1. Snap 10 mm Hemmer onto needle plate of machine.
2. Place fabric into the scroll/guide of the 10 mm Hemmer, rolling it up to the needle.
3. Sew. Do not help the fabric roll. Simply guide it.

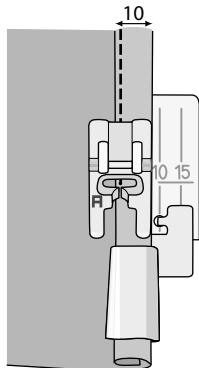

10 MM HEMMER


412990045

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

**Rolls a 10 mm double hem in light to medium weight fabrics.
Straight stitch, length 2.5. Snap on the A-foot.**

1. Snap 10 mm Hemmer onto needle plate of machine.
2. Place fabric into the scroll/guide of the 10 mm Hemmer, rolling it up to the needle.
3. Sew. Do not help the fabric roll. Simply guide it.

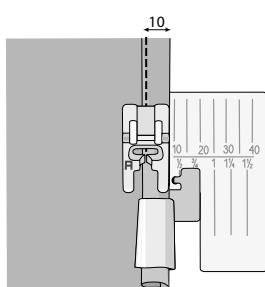




1/4" (6 MM) BIAS BINDER

412989545

① ② ③ ④ ⑤ ⑥ ⑦

To bind edges with 1/4" (6 mm) Bias Binding, cut a 1" (24 mm) wide bias strip of light weight fabric, or use packaged narrow double fold Bias Binding. Straight stitch, length 2.5, or zigzag or decorative stitch at desired length.

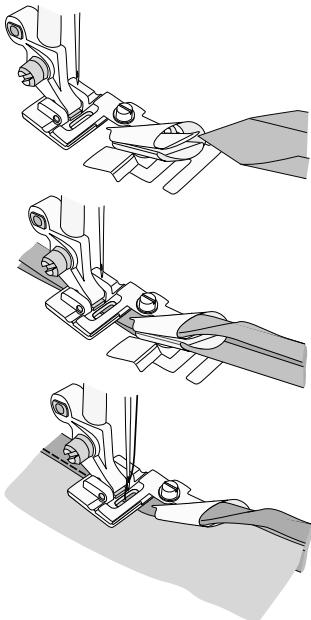

1/2" (12 MM) BIAS BINDER

412988701

① ② ③ ④ ⑤ ⑥ ⑦

To bind edges with 1/2" (12 mm) Bias Binding, cut a 2" (50 mm) wide bias strip of light weight fabric, or use packaged extra wide double fold Bias Binding. Straight stitch, length 2.5, or zigzag or decorative stitch at desired length.

1. Snap on Bias Binder.
2. Cut the end of the bias tape to a point. Insert the bias tape from the outside of the funnel guide, into the slot and pull it down under the foot.
3. Place the edge to be bound into the groove on the left side of the funnel guide.
4. Adjust needle position as needed or to adjust the position of the binder funnel/guide, loosen the screw on the top of the foot and position the funnel guide as needed.



ADJUSTABLE BIAS BINDER

412985045

① ② ③ ④ ⑤ ⑥ ⑦



Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

Make beautiful edge finishes with your favorite bias tape.

Adjustable to fit bias tapes in different widths, from $\frac{1}{4}$ " (6 mm) to $\frac{3}{4}$ " (20 mm).

1. Thread with sewing thread on top and in the bobbin.
2. Snap on the Adjustable Bias Binder.
3. Use the screw on the right side of the bracket to adjust the width of the opening to fit the bias tape.
4. Cut the end of the bias tape to a 45 degree angle. Insert the bias tape from the outside of the bracket, into the slot that matches its width, and pull it down under the foot.
5. Place the edge to be bound into the groove on the left side of the bracket.
6. Loosen the screw on the top, in the back of the foot and adjust the bracket as needed.
7. Select a narrow zigzag, a straight stitch or a decorative stitch. Sew slowly, keeping the fabric to be bound, snugly in the groove as you sew.

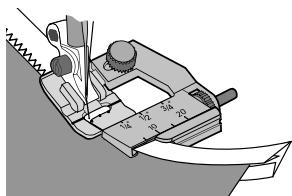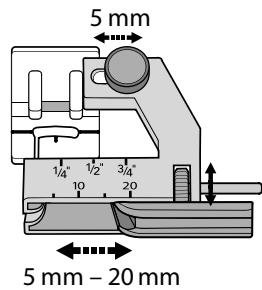




5 MM NARROW HEM FOOT

411851745

- ① ② ③ ④ ⑤ ⑥ ⑦

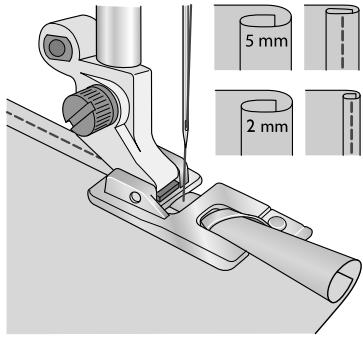

2 MM NARROW HEM FOOT

411852245

- ① ② ③ ④ ⑤ ⑥ ⑦

Stitch a Narrow Hem in medium weight fabrics. Suitable for napkin edges, curtains, ruffles. Straight stitch, length 2.5 to 3 (can be used with decorative stitches) Snap on foot. **Stitch a Narrow Hem in very lightweight fabrics such as silk scarves, batiste napkins, shirt hems, ruffles and lingerie.** Straight stitch, length 2.

1. Snap on Narrow Hem Foot.
2. Press a double hem (the width of the tunnel on the underside of the foot) in the first inch of the hem.
3. Place under the presser foot and stitch several stitches along the edge of the hem.
4. Stop with the needle in the fabric, raise the presser foot and pull the fabric edge up into the scroll/guide on the foot. Lower the presser foot, continue to sew. Do not help the fabric edge to roll, simply hold it vertically.





MEGA PIPING FOOT

413195145

- ① ② ③ ④ ⑤ ⑥ ⑦

The Mega Piping Foot is perfect for inserting thick home dec piping into seams and on edges for a tailored finish. The trim is sewn between the two layers of fabric in one step. You can also create your own piping for a custom finish. This foot can be snapped on to the right or the left of the needle which makes it possible to both create and sew the piping into the seam and to beautifully topstitch along the piping.

To make piping with your fabric:

1. Snap on the Mega Piping Foot to the right side of the needle.
2. Cut fabric into strips on the bias or crosswise grain. Cut fabric wide enough to cover the cording, including seam allowances.
3. Lay the cording on the wrong side of the fabric strip and wrap the fabric around the cord.
4. Place the fabric and the cord under the Mega Piping Foot with the cord to the left of the foot.
5. Select left needle position straight stitch. Sew.

Hint: When you sew this piping into a project, adjust the needle position so the second row of stitches is one needle position closer to the cord, to cover the first stitching.


To stitch piping into a seam:

1. Snap on the Mega Piping Foot to the right side of the needle.
2. Place the piping along the seam line on the right side of the fabric and stitch in place with the piping to the left of the foot.
3. Place the second piece of fabric on top with the right sides together.
4. Put fabric and piping layers under the Mega Piping Foot with the cord to the left of the foot.
5. Select left needle position straight stitch. Sew.

Hint: Notch the seam allowance of the piping on curves and corners to reduce bulk and make the seam lay flat.

Topstitching

Snap the Mega Piping Foot to the left side of the needle. Open the seam and fold so the piping is along the fabric edge.

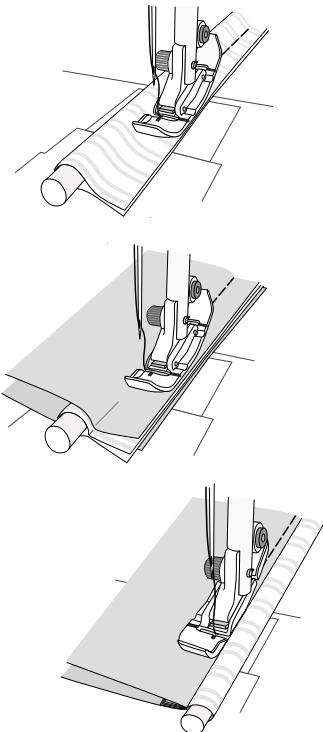




PIPING FOOT

411851045

① ② ③ ④ ⑤ ⑥ ⑦

**Insert packaged Piping into seams and edges for a tailored finish.
Cover cord with fabric for specialty piping. Straight stitch, length 2.5.**

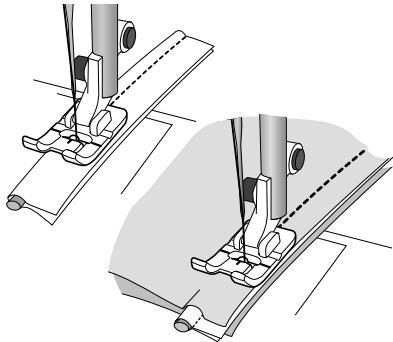

1. Snap on the Piping Foot. To stitch piping into a seam.



2. Place piping along seam line on right side of fabric. Place second piece of fabric on top with right sides together.

3. Put fabric and piping layers under Piping Foot with the piping in the groove on the underside of the foot. Sew. The groove on the underside of the foot will guide the piping as you sew. (Hint: Notch the seam allowance of the piping on curves and corners.)

To make piping from your fabric:

1. Cut Bias or crosswise grain strips, wide enough to cover the cording plus seam allowances.
2. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
3. Place the fabric and cord under the Piping Foot with the cord in the groove on the underside of the foot.
4. Sew. The groove will guide the cord so the fabric covers it evenly. (Hint: When you sew this piping into a garment, adjust the needle position so it stitches one setting closer to the cord to cover the first stitching.)



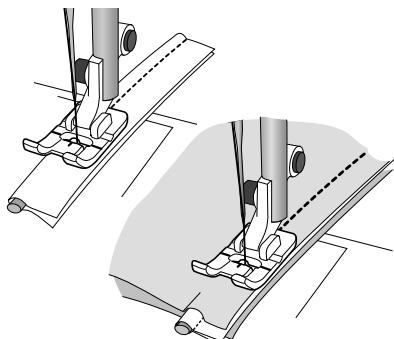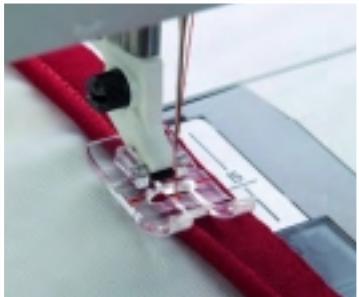

CLEAR PIPING FOOT

413097145

- ① ② ③ ④ ⑤ ⑥ ⑦

Insert packaged piping into seams and edges for a tailored finish. Cover cord with fabric for specialty piping. The clear view allows you to see the piping placement and see exactly where you are stitching. The clear view enables you to see the first row of stitching and adjust your needle position to stitch next to the original row. Straight Stitch, length 2.5.

1. To make piping from your fabric: Snap on the Clear Piping Foot.
2. Cut bias or crosswise grain strips wide enough to cover the cording plus seam allowances.
3. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
4. Place the fabric and cord under the Clear Piping Foot with the cord in the groove on the underside of the foot.
5. Sew. The groove will guide the cord so the fabric covers it evenly. Hint: When you sew this piping into a garment, adjust the needle position so it stitches one setting closer to the cord, to cover the first stitching.

To stitch piping into a seam:


1. Snap on the Clear Piping Foot.
2. Place the piping along the seam line on the right side of the fabric and stitch in place with piping in the groove of the foot.
3. Place the second piece of fabric on top with the right sides together.
4. Put fabric and piping layers under the piping foot with the piping in the groove on the underside of the foot. Sew. The groove on the underside of the foot will guide the piping as you sew. (Hint: Notch the seam allowance of the piping on curves and corners.)





DECORATIVE/CRAFTING
SEWING

Express your creativity with embellishments, trims, beads, and “sew” much more. HUSQVARNA VIKING® accessory feet make it easy. Add the beauty and texture of embellishment to any garment, gift or craft to make it your own.

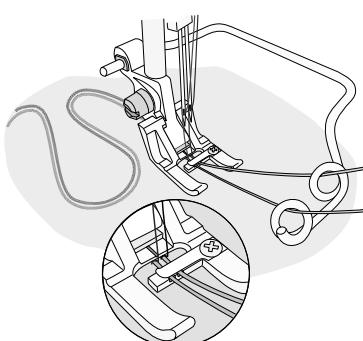

TWIN GIMPING FOOT WITH GUIDE

920302096

① ② ③ ④ ⑤ ⑥ ⑦


Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140C.

Wonderful decorative embellishments are easily sewn with this special foot. Use the Twin Gimping Foot and a 1.6 twin needle to create three-dimensional satin stitches. Two gimp threads are guided by the foot as the stitch is sewn.

1. Insert a 1.6 Twin Needle.
2. Thread with two spools of 40 wt. rayon embroidery thread on top and embroidery bobbin fill or regular sewing thread in the bobbin. The threads can be the same color, or two different colors.
3. Place the straight end of the Guide into the hole at the top of the presser foot ankle. Tighten the screw (on some models) to hold the guide in place.
4. Thread the gimp threads into the curly-Q ends of the guide and insert gimp threads into the guides in the front of the foot and then bring back underneath and into the grooves on the bottom of the foot.
5. Snap on the presser foot.
6. Place the spools or lengths of gimp threads so they will feed smoothly into the foot as you sew.
7. Select a narrow satin stitch, set the length to 0.4-0.6mm and the width to 1.5mm.
(On some machines; select a narrow and dense zigzag stitch)
8. Use a fabric marker pen and draw a design onto your fabric and sew over it. The design will be outlined in a three dimensional satin stitch. Use stabilizer as needed.

Tip: If applicable to your machine, put both thread spools in vertical position for a more even feeding of threads.

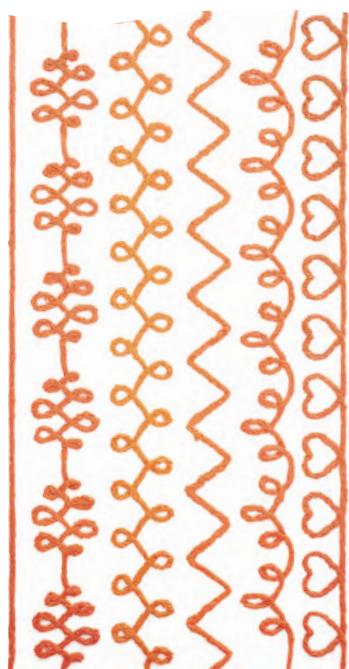

YARN EMBELLISHMENT FOOT SET

920403096

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER™ SE, DESIGNER™ SE Limited Edition,
SAPPHIRE™ 960Q

With the HUSQVARNA VIKING® Yarn Embellishment Foot Set, you can easily create decorative yarn embellishment when sewing. The embellishment is created when sewing using the specially designed stitches for this foot together with yarn. The effect of the embellishment can be changed dramatically by using different types of yarn.

This presser foot is designed to be used with specially designed stitches. These stitches can be downloaded at www.husqvarnaviking.com.


Note: No stitches except for the specially designed stitches can be used.

The yarn foot is equipped with an adjustment wheel. The wheel is used to fine tune the red line so that it matches the center needle position on the foot.

When the needle is centered at the redline, it is more likely that the yarn foot will pick up a wider range of yarn.


Contents

- A. Yarn guides (for DESIGNER DIAMOND™ series, DESIGNERRUBY™ series, SAPPHIRE™ 960Q, except for DESIGNER™ SE)
- B. Yarn guides (for DESIGNER™ SE and DESIGNER™ SE Limited Edition).
- C. Yarn Foot
- D. Yarn threader
- Stitches to download

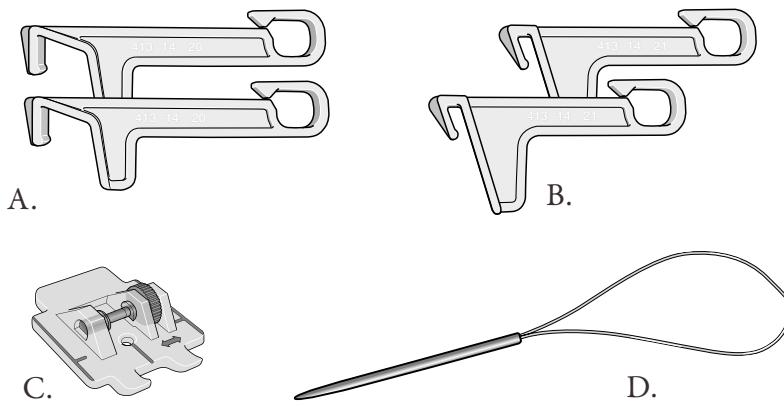


PREPARING THE MACHINE FOR COUCHING


1.

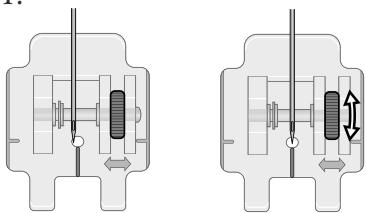


2.

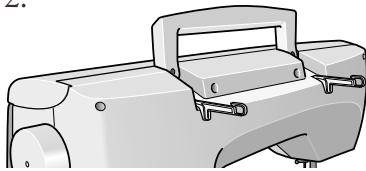


3.

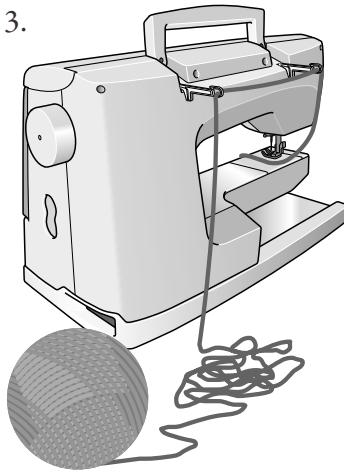

4.

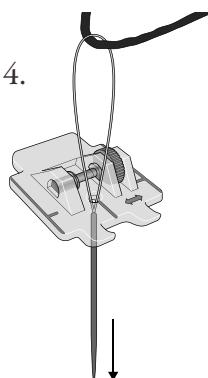

5.

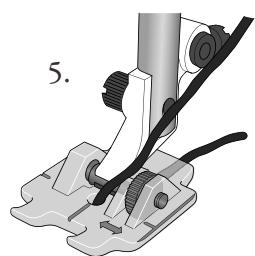

1. Thread the machine with a thread that matches the decorative yarn or use transparent thread.
2. Attach the yarn guides to your machine in the notches under the handle at the rear side of the machine (See ill. 2).
3. Pull out as much yarn as you need from the ball of yarn and place it as shown in ill. 3. Make sure to pull out the yarn continuously to avoid too much strain on the yarn.
4. Place the yarn in the yarn guides (See ill. 3). It is very important that the yarn runs smoothly while you are sewing.
5. Thread the yarn from above through the hole in the Yarn foot using the yarn threader (see ill. 4). We recommend using yarn with even thickness. For best result the yarn should fill the hole in the foot but still run easily through it.
6. Snap the foot onto the machine. (See ill. 5).
7. Select the stitch you want to sew. Before starting to sew, use the adjustment wheel to make sure the redline on the foot is matching the needle. (See ill. 1).

Tips: Draw a line on the fabric with a fabric marker, for easier guidance.

Note: Some yarn work better than other. Yarn with a looser structure will often give a better result.

Where to find the stitches for download

To download the stitches, go to
www.husqvarnaviking.com.

Find the Yarn Embellishment Foot Set.

Click on the link to download the stitches.

CIRCULAR ATTACHMENT

920344096


DESIGNER DIAMOND™ series, DESIGNER RUBY™ series, DESIGNER TOPAZ™ series, SAPPHIRE™ series, OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

920392096

- ① ② ③ ④ ⑤ ⑥ ⑦

Not for

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series, DESIGNER TOPAZ™ series, SAPPHIRE™ series, OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

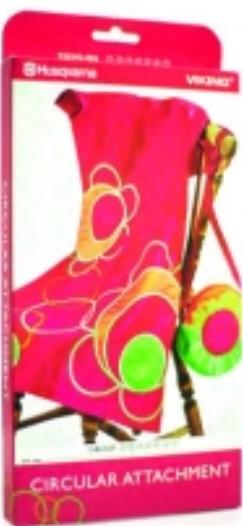


Your Circular Attachment is the perfect tool when you want to make unique embellishments on your sewing projects, garments and quilts. You can sew simple circles, flowers, or parts of circles to create unique borders or graphic patterns. Combine circles in different sizes and create large patterns. Almost all utility or decorative stitches* can be used when stitching with this attachment so you are free to use your favorite. The possibilities available with the Circular Attachment are as unending as the circles it creates!

* Stitches with a default stitch width wider than 7 mm, and stitches with backward feeding cannot be used.

In the package you will find:

- A. Circular Attachment with Size Guide
- B. Pivot Pin
- C. Three different templates: one for sewing circles (1), one for a four-petal flower (2) and one for a six-petal flower (3). The numbers on the templates correspond to the diameter of the circle (in cm)
- D. CD with User Instructions in 11 languages, a tutorial and ideas on how to combine circles using the templates


With the Circular Attachment, you can sew circles with a diameter measuring from 6 cm up to 26 cm (2½ to 10¼"). The diameters of the circles are printed in both centimeters and inches.

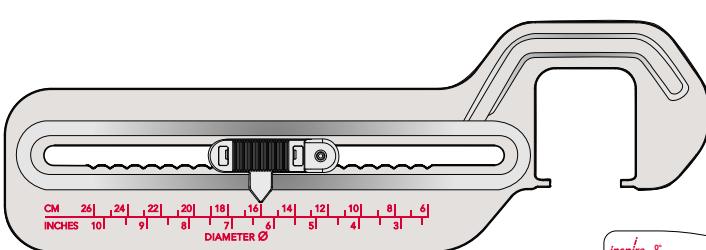


A.



B.

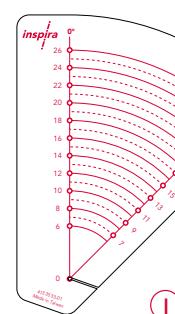

C.

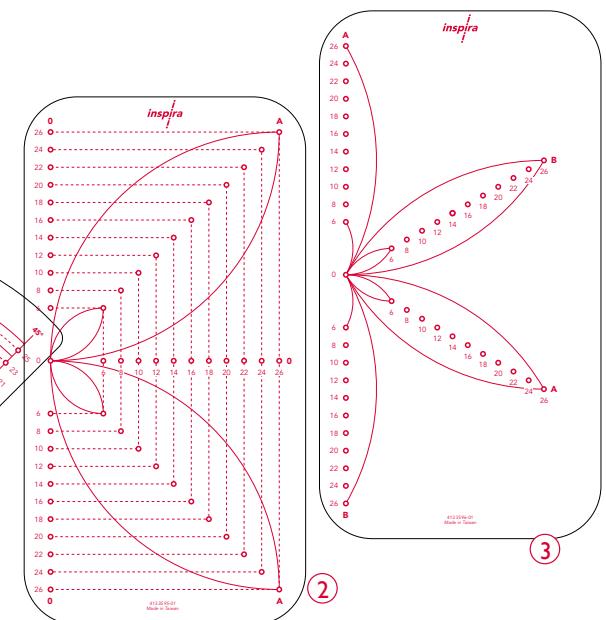



TIPS AND HINTS

Extension/Quilter's Table

When using the Circular Attachment, we recommend using an extension/quilter's table. This will give extra support to the fabric and makes it easier to control and guide the fabric. Extension/Quilter's tables are available as extra accessories.



Stitch Selection



Utility and decorative stitches give wonderful results with this attachment, however, stitches with a default stitch width wider than 7 mm, and stitches with backward feeding cannot be used.

Tip: The shorter the stitch, the easier it is to get a nicely joined circle. When about to close the circle, slow down the sewing speed and if necessary, adjust the stitch length to fill the gap.



Appliqués

You can make appliqués with the circular attachment. Use fabric that does not fray or make raw edge appliqués. You can also simply stitch your applique in place with a straight stitch, cut away the excess fabric, and finish by sewing a satin stitch over the raw edges. When using several layers of fabric, it is even more important to guide the fabric carefully making sure that all the layers feed together equally.

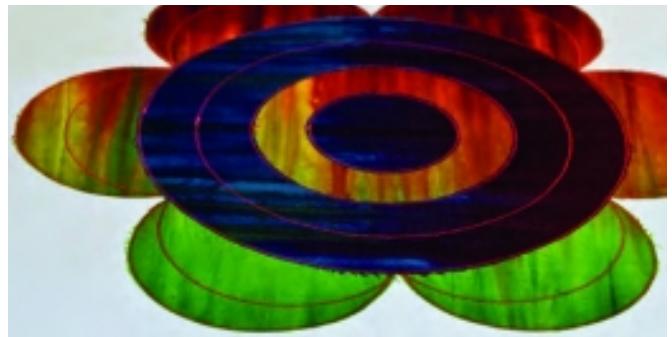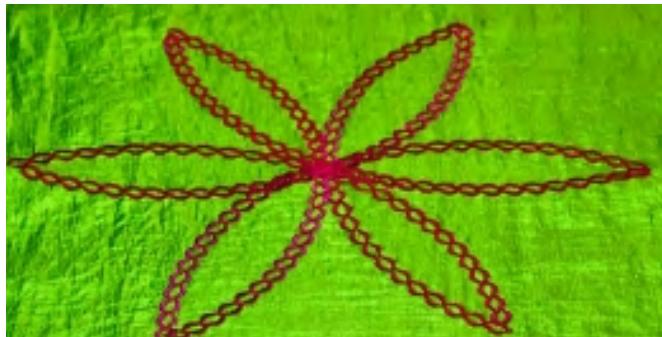




GIMPING FOOT

412580545

① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

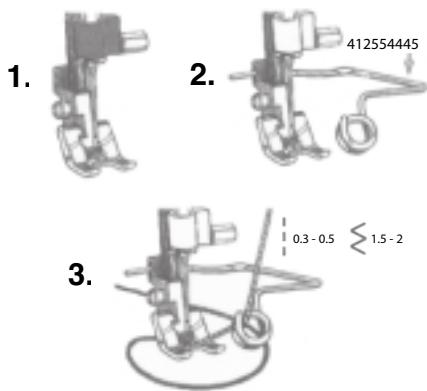


Use the Gimping Foot to create a dimensional satin stitch technique. Gimp thread is guided by the foot as the stitch is sewn over it.

1. Thread a 40 weight Sulky rayon thread on top, embroidery bobbin thread in the bobbin.
2. Insert the gimp thread into the guide on the foot. Place the spool or length of gimp thread so it will feed smoothly into the foot as you sew.
3. Select a narrow satin stitch. (Follow the instructions for applique with the width just wide enough for the zigzag to stitch over the gimp.) On computer machines, select the preprogrammed satin stitch and fine tune the length and width to sew over the gimp. On other machines; select a zigzag stitch, length 0.3–0.5, width 1.5–2.
4. Mark a design onto your fabric and sew over it. The design will be outlined in dimensional satin stitch.

Note: gimping/braiding guide (412554445) sold separately. (see next page)



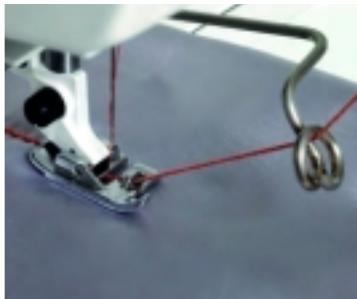

NARROW BRAID/CORD FOOT

411850945



- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Couch or stitch yarn and narrow braids and trims to embellish garments, gifts, and crafts. Zigzag stitch, length 1.5, width as wide as the trim or yarn. Snap on Narrow Braid Foot.

1. Place the yarn or trim into the hook/guide on the front of the foot and under the foot.
2. Stitch the braid in place. The Gimping/Braidingguide accessory (412554445) will guide the yarn or trim as you sew. Use stabilizer as needed.

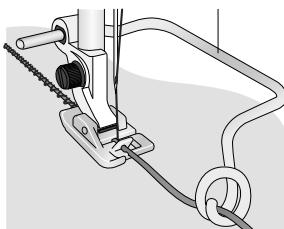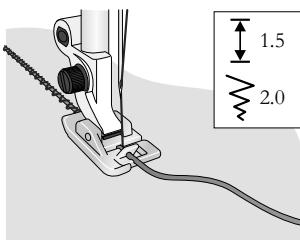

GIMPING/BRAIDING GUIDE

412554445


- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Guides trims, braids, and cords into the Braiding Foot, Narrow Braiding Foot or Gimping Foot.

1. Place straight end of the Gimping/ Braiding Guide into the slot at the top of the presser foot ankle. Tighten the guide screw to hold it in place (on some models).
2. Thread the braid, cord or trim into the curly-Q end of the guide and into the foot.
3. Support the braid, cord or trim as it enters the guide as you sew.

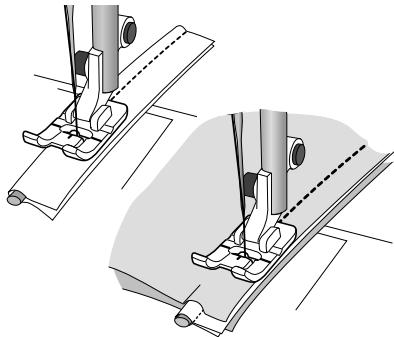

MINI PIPING FOOT

413183045

- ① ② ③ ④ ⑤ ⑥ ⑦

Insert package piping into seams and edges for a tailored finish. Cover cord with fabric for specialty piping. The clear view allows you to see the piping placement and see exactly where you are stitching and enables you to see the first row of stitching and adjust your needle position to stitch next to the original row. Straight stitch, length 2.5.

To make piping from your fabric:

1. Snap on the Mini Piping Foot
2. Cut bias or crosswise grain strips wide enough to cover the cording plus seam allowances.
3. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
4. Place the fabric and the cord under the Mini Piping Foot with the cord in the groove on the underside of the foot.
5. Sew. The groove will guide the cord so the fabric covers it evenly.

Hint: When you sew this piping into a garment or other project, adjust the needle position so it stitches one position closer to the cord, to cover the first stitching.

To stitch piping into a seam:

6. Snap on the Mini Piping Foot
7. Place the piping along the seam line of the right side of the fabric and stitch in place with the piping in the groove of the foot.
8. Place the second piece of fabric on top with the right sides together.
9. Put fabric and piping layers under the Mini Piping Foot with the piping in the groove on the underside of the foot. Sew. The groove on the underside of the foot will guide the piping as you sew.

Hint: Notch the seam allowance of the piping on curves and corners.






BRAIDING FOOT


412989845

(1) (2) (3) (4) (5) (6) (7)

Couch or stitch braid or cord for decorative embellishment. Stabilize as needed. Straight stitch, length 2.5 or Zigzag stitch, length 2 to 4, width wide enough to go over braid or cord (or use decorative stitch).

1. Thread braid from top of foot into the guide hole and under the foot.
2. Lower the Presser Foot and stitch. The Gimping /Braiding Guide accessory (412554445) will guide the braid as you sew.

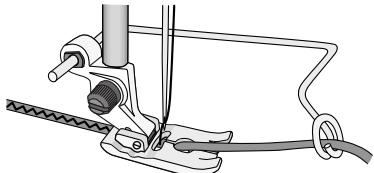

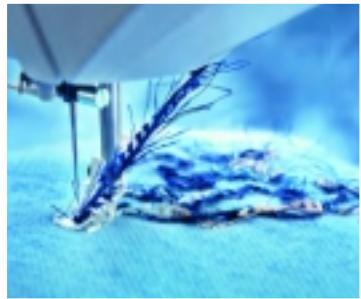

YARN COUCHING FEET SET

920215096


(7)

Not for

OPAL™ 670 and 650

With HUSQVARNA VIKING® Yarn Couching Feet Set you can easily create decorative yarn embellishment both when sewing free-motion and embroidering. Two different feet will suit a variety of yarn. A detailed instruction is included with the product.

1. Thread the machine with thread that matches the yarn.
2. Attach the proper yarn guides for your machine to the notches under the handle on the rear side of the machine.
3. Pull out as much yarn as you need from the ball of yarn.
4. Place the yarn in the yarn guides. It is very important that the yarn flows smoothly while you are sewing.
5. Choose Yarn Couching Foot 1 or 2, depending on the size of the yarn. For best result the yarn should fill the hole in the foot and still run easily through it. We recommend using yarn with even thickness.
6. Thread the yarn from above through the hole in the foot using the yarn threader.
7. Snap on the foot to the machine.

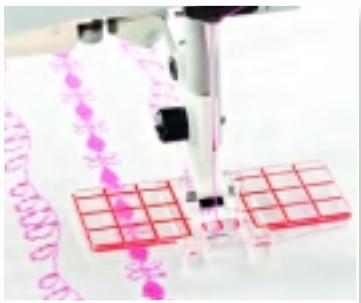

MULTI-LINE DECORATIVE FOOT


413337145

- ① ② ③ ④ ⑤ ⑥ ⑦


Use the Multi-line decorative Foot to create even spacing borders with decorative stitches or as a guide when sewing Omnimotion and side-motion stitches. Guidelines are provided for accurately turning corners of $\frac{1}{4}$ " (6mm) and $\frac{1}{2}$ " (12mm) measurements.

Decorative Borders


1. Thread your machine with sewing thread or decorative thread on top and sewing thread in the bobbin.
2. Choose a decorative stitch.
3. Snap on the Multi-line Decorative Foot.
4. Mark a line on the fabric with a Pictogram Pen where the center of the stitching will be.
5. Place Tear-Away Stabilizer under the fabric.
6. Line up the presser foot on the marked line using the red center line on the foot. Sew the first row of your decorative stitching.
7. Choose another decorative stitch.
8. Move your fabric to the left. Decide what distance you'd like to have between the rows.
9. Use the red horizontal red lines to match up the start of each row.
10. Sew the next line of stitching using the red lines on the foot as a guide while sewing.
11. Mirror image the stitch and move your fabric to the right side of the center stitch. Sew the seam on the right side. Illustration 1
12. Continue with more stitches to create a wider border.
13. Tear away the stabilizer.

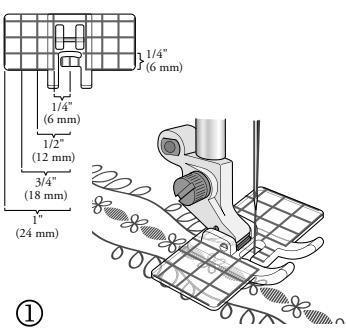

①

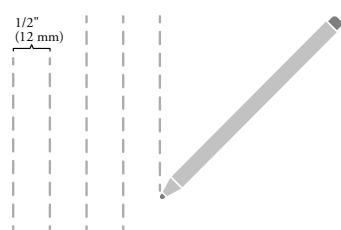


②

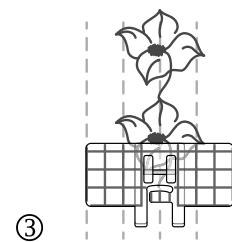

③

Omnimotion or side-motion stitches

1. Thread your machine with sewing thread or decorative thread on top and sewing thread in the bobbin.
2. Choose an Omnimotion or side-motion stitch.
3. Snap on the Multi-line Decorative Foot.
4. To ensure a straight line of stitching draw a line on the fabric with your Pictogram Pen where the center of the stitching will be. Continue to mark one or two lines on each side of the drawn line. Illustration 2
5. Place the fabric with Tear-Away Stabilizer under the presser foot.
6. Sew carefully and let the machine control the feeding.
7. Keep the marked lines and the vertical red lines on both sides of the presser foot parallel to each other when sewing. Illustration 3
8. Tear away the stabilizer.

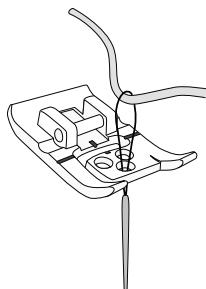

THREE HOLE YARN FOOT

413187045

① ② ③ ④ ⑤ ⑥ ⑦

Decorate your project with different types of decorative cords or yarn using beautiful wide HUSQVARNA VIKING® stitches and the Three Hole Yarn Foot. This foot will easily guide the yarn through the openings in the front of the foot back through the groove under the presser foot. The decorative yarn will be stitched over creating a beautiful braid embellishment.

1. Thread your machine with a regular sewing thread or decorative thread on top and regular sewing thread in the bobbin.
2. Select a wide decorative stitch to cover the yarn. Note: Decorative stitches that use forward motion work best. (Avoid stitches with too much backward motion.)
3. Thread decorative yarn into the holes from the top of the foot, using the Yarn Threader, prior to snapping on the foot to the sewing machine.
4. Make sure the cords or yarn slide easily through the openings, choosing smooth textured yarns, avoid those with "thick and thin" consistencies. (If the yarn is too thick it will create too much tension and the feeding might be affected.)
5. Snap on the Three Hole Yarn Foot.
6. Place the threaded yarn under the presser foot with a 5cm (2") tail.
7. Place a tear away stabilizer underneath the fabric and place your fabric under the presser foot.
8. Sew carefully, not too fast. If your machine has a speed control reduce the sewing speed to easily guide the fabric and yarn as you sew.





MINI BEAD FOOT 4 MM


412701145

① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

1. Snap on the Mini Bead Foot.
2. Thread with Polyester invisible thread on top and sewing thread in a color matching the fabric in the bobbin.
3. Select one of following stitches depending on which one is available on your HUSQVARNA VIKING® Sewing machine:
 - └─┘ • Heirloom Applique stitch, length 3.0, stitch width 4.0, or
 - VVV • Overcast stitch, length 0.9, width 5.0 or
 - TTT • Overcast stitch, length 3.0, width 4.0.
4. Place 4 mm string pearls under the foot, laying them in the groove on the underside of the Mini Bead Foot. Place stabilizer under the fabric. Lower the presser foot. Turn the handwheel to make some stitches by hand carefully. Stitch pearls to a scrap of fabric first to test thread tension, presser foot pressure, stitch length and width according to the beads. Make adjustments if needed. Stitch slowly. (With some stitches it may be necessary to adjust stitch length while sewing, or program a stitch for the best result.)

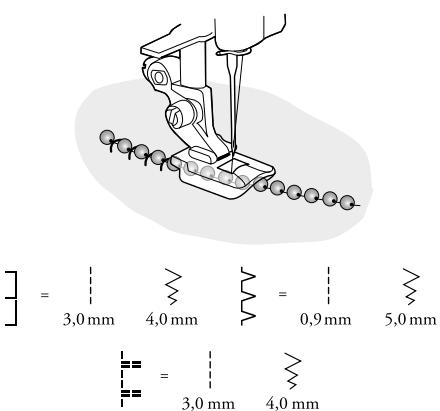

CLEAR 2-3 MM EMBELLISHMENT FOOT

 

413030445

① ② ③ ④ ⑤ ⑥ ⑦



Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Embellish your work with small pearls.

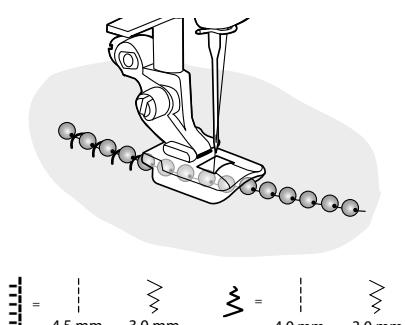

1. Thread the machine with polyester invisible thread on top and regular sewing thread in the bobbin.
2. Snap on the Clear 2-3 mm Embellishment Foot.
3. Select one of the following stitches depending on which is available on your HUSQVARNA VIKING® sewing machine.
 - Zigzag stitch length 4.0 mm, width 3.0 mm
 - Heirloom appliqué stitch length 4.5 mm, width 3.0 mm
4. Place the 2-3 mm string of pearls under the foot laying them in the groove on the underside of the Clear 2-3 mm Embellishment foot.
5. Stitch pearls to a piece of scrap fabric first to test the thread tension. If needed lower the thread tension.
6. Embellish your project with the pearls. Stitch slowly. (With some stitches it might be necessary to adjust stitch length while sewing)

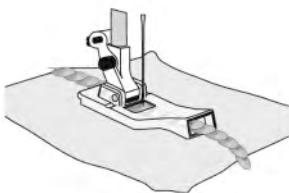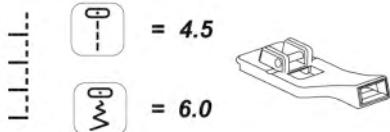

FANCY TRIM FOOT

412823845

① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Decorate your project with glittery sequins by using the Fancy Trim Foot. This foot will easily guide the sequins through a groove at the front of the foot, while your sewing machine stitches your fancy trim in place invisible. Only circle round sequins can be used.

1. Thread with invisible thread on top and regular sewing thread in the bobbin. Snap on the Fancy Trim Foot and select a Hand Look Appliqué Stitch. Adjust the stitch length to 4.5 and the width according to the width of your sequins. Make sure to use Tear-Away stabilizer underneath your fabric.
2. Slide the sequins into the groove at the front of the presser foot. Make sure you have pulled a piece of the sequin trim under the foot and through to the back of the foot before you start to sew. Snap on the foot.
3. Start sewing on a scrap of your fabric, since different fabrics behave in different ways. Sew slowly to prevent sewing through the sequins.



CHENILLE STITCHING FOOT


412975245


① ② ③ ④ ⑤ ⑥ ⑦

Makes it easy to embellish beautiful chenille effects. For beginners as well as for experienced quilters and sewers.

1. Thread with sewing thread on top and in the bobbin.
2. Use a minimum of three layers of chenille strips, 5/8" wide (16 mm), for a beautiful effect. Place the strips into the presser foot. (You can also use narrower strips like 3/8" wide (10 mm)).
3. Snap on the Chenille Stitching Foot.
4. Place the fabric that will be embellished under the presser foot and the strips.
5. Select a straight stitch, a zigzag stitch or a three step zigzag stitch. Select short stitch length and a narrow stitch width, 1.5 – 2.
6. Sew with a slow speed. The Chenille Stitching Foot will guide the strips onto the fabric where you want to have the chenille effect. For extra stability use Tear-Away Stabilizer underneath.
7. Add strips in rows if desired to complete your project.
8. Machine wash project on cold cycle, dry warm. Alternative method: Spray with water, rub with stiff brush to fray strips, then dry with hair dryer.

Pre-cut Chenille Bias Tape in various colors is available at your local dealer.

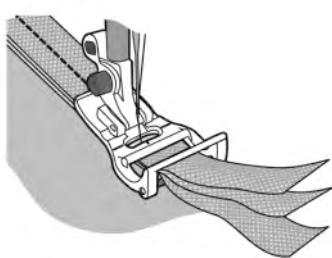

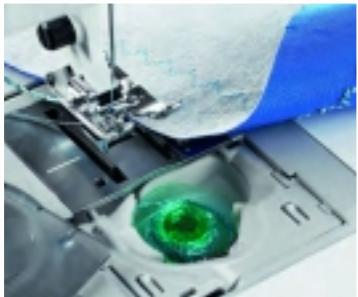

SPECIALTY BOBBIN CASE

920211096

⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

Create beautiful bobbin work, also called reversed decorative stitch embroidery with the HUSQVARNA VIKING® Specialty Bobbin Case.

1. Lower the feed teeth, remove the stitch plate and replace the standard bobbin case with the Specialty Bobbin Case. Slide stitch plate back in place and raise feed teeth.
2. Depending on what type of decorative thread you are using for your projects there are different ways of working with the Specialty Bobbin Case.

For heavy or specialty threads:

Wind the bobbin with the decorative thread slowly – HUSQVARNA VIKING® logo facing out. Place the bobbin in the Specialty Bobbin Case with the HUSQVARNA VIKING® logo facing up. For less texture use thinner specialty threads, and adjust the bobbin tension screw if needed so the thread pulls evenly. Place bobbin and pull specialty thread into the bobbin tension.

For heavier yarns and textured specialty threads:

Wind the bobbin evenly clockwise by hand. Bypass bobbin tension. For the most textured bobbin work, do not pull the heavy thread or yarn into the bobbin tension or the thread cutter, but go directly into the bypass slot. Place the bobbin in the Specialty Bobbin Case. To bring up the bobbin thread hold the top thread, and turn the hand wheel towards you.

3. For both techniques thread the top with regular sewing thread. Use the recommended size needle for your fabric. Snap on B- or S foot.
4. Place the right side of the fabric facing down and place Tear Away Stabilizer on top. Select stitches where the density is less tight. Play around with the straight stitch, zigzag and other decorative stitches. Lengthen the stitches for best result. Select slow speed and stitch at an even speed for best results. Increase top tension slightly if needed. Before sewing on your project, try on a scrap of fabric until your adjustments are set. Hint: The heavier the thread, the longer the stitch length. Choose a stitch that does not stitch forward and back over itself.





RIBBON FEET SET

920239096

① ② ③ ④ ⑤ ⑥ ⑦

With HUSQVARNA VIKING® Ribbon Feet Set you can easily create decorative ribbon embellishment. Three different feet will accomodate a variety of ribbons (from 6-13.5 mm).

Sewing using the ribbon feet

1. Use iron-on-stabilizer or tear-away-stabilizer to stabilize the fabric when sewing. Depending on the thickness of the fabric, more or less stabilizer may be needed. Always test on a scrap piece of the fabric you are using.
2. Thread the machine with thread that matches your ribbon.
3. Select straight stitch (other stitches might damage the presser feet and/or cause the needle to break).
4. Choose Ribbon Foot 1, 2, or 3 depending on the width of your ribbon. For best result, the ribbon should fill the slot in the foot and still run easily through it. We recommend using ribbons with even an thickness.
5. Thread the ribbon from the front through the slot in the foot. Pull out about 1" (2 cm) of the ribbon behind the foot.
6. Snap the foot onto the machine.
7. When sewing, place the ribbon over your shoulder or to the right of the machine. It is very important that the ribbon flows easily while you are sewing.

Free-motion sewing with ribbons

To free-motion stitch, your machine must have a special free-motion function. This function is available for models in group 1 and 7.

1. Prepare the machine as described to the left.
2. Set the machine for free motion sewing (please consult your User's Guide for instructions).
3. Hold the ribbon end when beginning to sew. Guide the fabric lightly. Turn the fabric to change sewing direction.

Hints

- Use light weight "flat" ribbons, for example, organza (ribbons with coarse texture not feed smoothly through the foot).
- For different looks, cut your own ribbons from fabric straight or on the bias.
- When doing a spiral or a swirl, sew from the inside out.




3 MM SHELL ROLLED HEM FOOT

411852045

- ① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

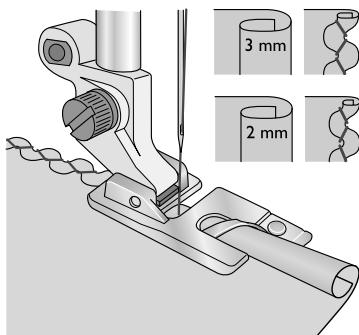

2 MM SHELL ROLLED HEM FOOT

411852445


- ① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Stitch a rolled hem in sheer and very lightweight fabrics for evening wear, lingerie, scarves. Zigzag stitch, length 3, width 3.

1. Snap on 2 mm Shell Rolled Hem Foot.
2. Press a rolled hem (the width of the tunnel on the underside of the foot) in the first inch of the hem.
3. Place the hem under the presser foot and stitch several stitches along the edge of the hem.
4. Stop with the needle in the fabric, raise the presser foot and pull the fabric edge up into the scroll/guide on the foot.
5. Lower the presser foot, continue to sew. Do not help the fabric edge to roll, simply hold it vertically.

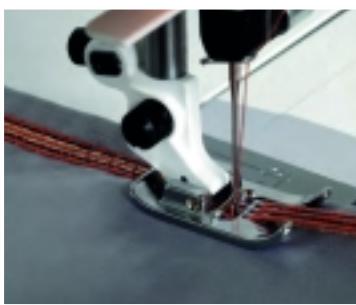


7-HOLE CORD FOOT WITH THREADER

412989945

- ① ② ③ ④ ⑤ ⑥ ⑦

Create one-of-a-kind trims and stitch them in place in one step. Couch or stitch up to seven decorative threads at once for quick embellishment. Decorative Stitch or zigzag, width to stitch over threads. Stabilizer as needed.

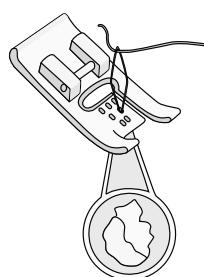


1. Thread decorative thread into holes from the top of the foot. The more holes you thread, the wider the decorative embellishment. Wrap lengths of thread on an empty spool to prevent tangles.
2. Snap on 7-Hole Cord Foot. Place threads under the foot.
3. Mark a design on your fabric, stabilize as needed, sew. The decorative threads will be stitched down creating a beautiful braid embellishment.



HEIRLOOM
SEWING

Before the invention of the sewing machine, beautiful hand sewing techniques created “one-of-a-kind” heirloom garments. Heirloom sewing techniques give you a feeling of tradition, romance and times long past. With the Heirloom kit and accessories, you can easily sew the same techniques on your HUSQVARNA VIKING® Sewing Machine in a fraction of the time.

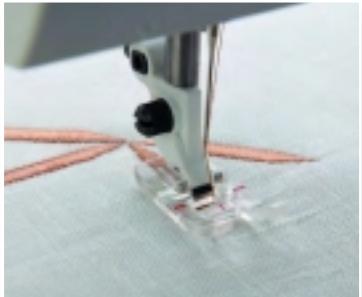

TRANSPARENT FOOT B

413113845

① ② ③ ④ ⑤ ⑥ ⑦

Satin stitch applique, taper stitches and decorative stitches. Length as desired. The tunnel on the underside of the foot feeds smoothly over the stitches. Because it is clear and has red guidelines, visibility and accuracy is improved. Use stabilizer as needed.

1. Snap on foot.
2. Set decorative or satin stitch.
3. Sew.






CLEAR B EDGE STITCHING FOOT

413058345

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

The Clear B Edge Stitching Foot guides decorative stitching along an edge perfectly. The tunnel on the bottom of the foot allows stitches to form perfectly and feed flawlessly. The flange along the edge of the foot keeps the distance between the edge of the fabric and the stitching consistent. Anytime your **SEWING ADVISOR™** feature or GraphicDisplay recommends the “B” foot, use the Clear B Edge Stitching Foot when sewing along an edge.

1. Snap on the Clear B Edge Stitching Foot.
2. Place your project under the foot with the flange guide at the edge of the project.
3. Select the decorative stitch of your choice.
4. Sew.

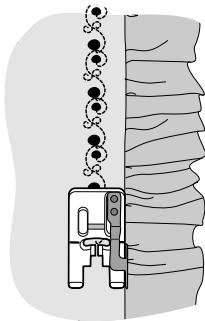


CLEAR B EDGE/JOINING FOOT




413058445

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

The Clear B Edge/Joining Foot guides decorative stitching over a seam, or marked line. The tunnel on the bottom of the foot allows the stitches to form perfectly and feed flawlessly. The flange in the center of the foot keeps the stitches aligned perfectly with the seam or marked line. Anytime your **SEWING ADVISOR™** feature or GraphicDisplay recommends the “B” foot, use the Clear B Edge/Joining Foot when sewing along a seam or marked line.

1. Snap on the Clear B Edge/Joining Foot.
2. Place the seam or marked line under center flange of the foot.
3. Select the decorative stitch of your choice.
4. Sew, keeping the flange, aligned with the seam or line as you sew.

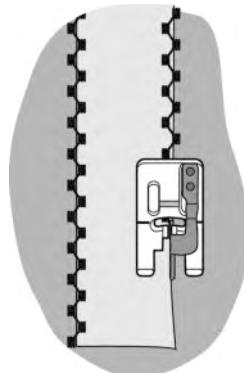

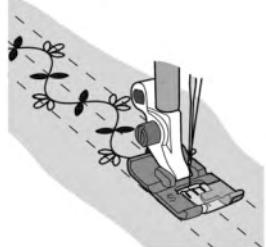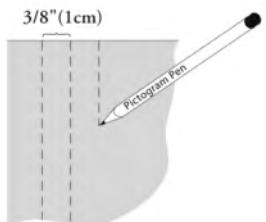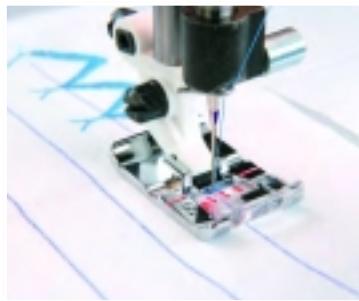

CLEAR VIEW S-FOOT

412975145

⑦

And for

ORCHIDEA™, #1+, 1250, #1 and 1200 machines.

**For Omnimotion stitches, Scallop stitches or 4 way stitches.
Makes beautiful borders or edgings on your tablecloths. A clear
center portion for good visibility while sewing.**

1. Thread with sewing thread or decorative thread on top and sewing thread or bobbin thread in the bobbin.
2. Snap on the Clear view S-Foot.
3. To ensure a straight line of stitching draw a center line on the fabric with your Pictogram Pen where the center of the stitching will be.
4. Select a stitch from the K menu – Omnimotion stitches, H menu – Scallop Stitches.
5. Place the fabric with Tear-Away Stabilizer under the presser foot. Lower the needle into the marked line. Sew carefully and let the machine control the feeding. Occasionally, touch the Stop button. The machine should stop with the needle on the marked line. If it is off slightly, reposition the fabric so you are back on the marked line.
6. If you are sewing a scallop edge cut fabric outside the scallop.
7. Tear away the stabilizer.




= PROG

= 0 = 2 → x 7

= 1,5 → x 2

= REP

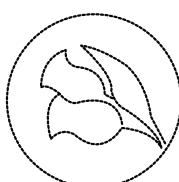

CANDLEWICKING FOOT

412510845

① ⑥ ⑦

Not for

IRIS™, SCANDINAVIA™ and EMERALD™ series,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

The Candlewicking Foot has a deep tunnel on the underside to feed over a built up stitching. Program a "French Knot" stitch on computer HUSQVARNA VIKING® sewing machines to sew the heirloom candlewicking technique.

1. Program

For most computer models:

Prog: (zigzag stitch, width 2.0, length 0.0), enter this program seven times, (straight stitch, width 0, length 1.5-2.5) enter two times (experiment with length settings, the French Knots are spaced further apart with a longer stitch length).

For HUSQVARNA VIKING® ROSE™ 600/605 machines.

Prog: (stitch number 38, width 2.0, length 0.1), enter one time, (stitch number 1, width 0, length 1.5-2.5) enter two times.

2. Touch REP. Sew.



SPECIALTY CANDLEWICKING FOOT

413162345

① ⑥ ⑦

Not for

IRIS™, SCANDINAVIA™ and EMERALD™ series,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Sew beautiful heirloom candlewicking techniques! The foot has a deep tunnel on the underside to feed over built up stitching.





SPANISH HEMSTITCH FOOT

413064845

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

412726403


For


DESIGNER™ SE and DESIGNER™ SE Limited Edition
machines.

Spanish Hemstitching is a delightful addition to any project. It is used to join two finished edges. It works well to attach borders, edging to a skirt or curtain or to piece fabric, for example to achieve the width needed for a tablecloth. For the above models, the Spanish Hemstitch Distance Plate snaps on to the standard needle plate.

1. Snap the Distance Plate onto the needle plate by placing the little prongs into the holes in the plate. Be sure that the plate doesn't cover the feed teeth. Snap on the Spanish Hemstitch Foot.
2. Thread with a decorative thread on top and in the bobbin.
3. Select a zigzag, three step zig zag. Adjust stitch width to make sure that the needle catches the fabric edges. Note: Avoid using stitches with too much side motion and stitches with too much motion forward and back.
4. You need to have a finished edge. If necessary, press under a 3/8" (1 cm) seam allowance on the fabric edges that will be stitched together.
5. Place the pressed edge of the pieces on each side of the Distance Plate.
6. Lower the presser foot.

Start with a long thread tail of both top and bobbin thread. Hold these threads as you begin sewing until the needle catches on the fabric. Because of the nature of the stitching, it will stitch on "air" for several stitches before it goes over and catches the fabric edge. Once the needle has caught the fabric, you can let go of the threads. Sew, holding the edges gently together in front of the foot. Optional: Place a decorative thread in the groove of the Distance Plate.

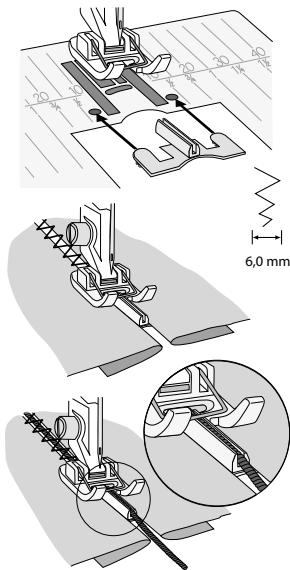

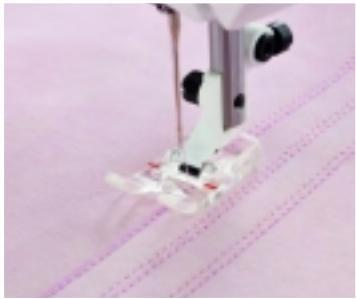

Clear A Foot



Clear A Edge Stitching Foot



Clear Edge/Joining Foot

CLEAR A PRESSER FEET KIT

920237096

- ① ② ③ ④ ⑤ ⑥ ⑦

CLEAR A FOOT

The Clear A Foot is used mainly for straight stitching and zig-zag stitching with a stitch length longer than 1.0. The clear view allows you to see exactly where you are stitching.

1. Snap on the Clear A Foot.
2. Select desired stitch.
3. Sew.

CLEAR A EDGE STITCHING FOOT

The Clear Edge Stitching Foot guides topstitching and edge stitching perfectly. The clear view allows you to see exactly where you are stitching.

1. Snap on the Clear A Edge Stitching Foot.
2. Place project under foot with the flange guide at the edge of the project.
3. Select straight stitch and adjust needle position so the stitching will be sewn at desired distance from edge.
4. For additional parallel rows of topstitching, adjust needle position and sew.

CLEAR EDGE/JOINING FOOT

 
The Clear Edge/Joining Foot guides topstitching and trims that are sewn to an edge or when two trims are sewn together. The clear view allows you to see exactly where you are stitching.

Joining:

1. Snap on the Clear A Edge/Joining Foot.
2. Place edge of fabric against flange/guide.
3. Select the 3-step zig-zag, or bridging stitch, length 2-3, width 4-7.
4. Sew.

Trims:

1. Snap on the Clear A Edge/Joining Foot.
2. Place two pieces of fabric or trim, one on each side of the guide/flange of the foot.
3. Select the 3-step zig-zag, or bridging stitch, length 2-3, width 4-7.
4. Sew. Keep fabric/trim against the flange/guide to join them.



TWIN NEEDLE
620073696: 1,6mm

 
9 GROOVE PIN TUCK FOOT

412370045

① ② ③ ④ ⑤ ⑥ ⑦

Sew quick tucks in very light weight fabrics. Use with Twin Needle. Straight stitch, length 1.5-2.0.

1. Snap on Pin Tuck Foot. Insert and thread 1.6 twin needle.
2. Sew. Tucks are formed by twin needle sewing as fabric tunnels into the groove on underside of foot.
3. Place tuck in outside groove of foot to guide next tuck.



TWIN NEEDLE
620073696: 1,6 mm
620073896: 2 mm


7 GROOVE PIN TUCK FOOT

412362845

① ② ③ ④ ⑤ ⑥ ⑦

Sew quick tucks in light weight fabrics. Use with Twin Needle. Straight stitch, length 2.0.

1. Snap on Pin Tuck Foot. Insert and thread 1.6 or 2.0 twin needle.
2. Sew. Tucks are formed by Twin Needle sewing as fabric tunnels into the groove on underside of foot.
3. Place tuck in outside groove of foot to guide next tuck.

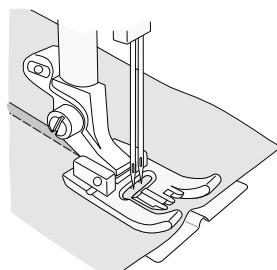

5 GROOVE PIN TUCK FOOT WITH RAISED SEAM PLATE

412369945

① ② ③ ④ ⑤ ⑥ ⑦

Sew quick tucks in light to medium weight fabrics. Use with twin needle. Straight stitch, length 2.5.

1. Snap on Pin Tuck Foot. Insert and thread 2.0 twin needle.
2. Sew. Tucks are formed by twin needle sewing as fabric tunnels into the groove on underside of foot.
3. Place tuck in outside groove of foot to guide next tuck.

TWIN NEEDLE

620073896: 2 mm





3 GROOVE PIN TUCK FOOT WITH RAISED SEAM PLATE

412992845

For


DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

**Sew quick tucks in medium weight fabrics. Use with Twin Needle.
Straight stitch, length 2.5.**

1. Snap on foot. Insert and thread 2.0 or 2.5 twin needle.
2. Pintucks are formed by Twin Needle sewing as fabric tunnels into the groove on underside of foot.
3. Place tuck in outside groove of foot to guide next tuck.

Note: Snap on Raised Seam Plate for heavier fabrics or to place cord in tucks. For corded tucks, place cord or yarn in guide on raised seam plate.

Note: Use the Edge/Quilting Guide (412601945) for evenly spaced tucks.

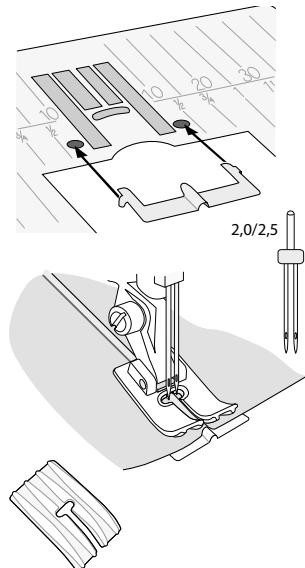

TWIN NEEDLE

620073896 2 mm

620073996 2,5 mm






3 GROOVE PIN TUCK FOOT WITH RAISED SEAM PLATE

412845645

- ① ② ③ ④ ⑤ ⑥ ⑦

Not for

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

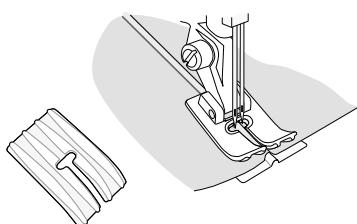

TWIN NEEDLE

620073896 2 mm

620073996 2,5 mm



**Sew quick tucks in medium weight fabrics. Use with Twin Needle.
Straight stitch, length 2.5.**

1. Snap on foot. Insert and thread 2.0 or 2.5 twin needle.
2. Pintucks are formed by Twin Needle sewing as fabric tunnels into the groove on underside of foot.
3. Place tuck in outside groove of foot to guide next tuck.

Note: Snap on Raised Seam Plate for heavier fabrics or to place cord in tucks. For corded tucks, place cord or yarn in guide on raised seam plate.

Note: Use the Edge/Quilting Guide (412601945) for evenly spaced tucks.





MARKING FOOT

411850345

- ① ② ③ ④ ⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

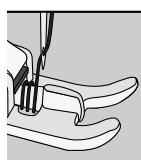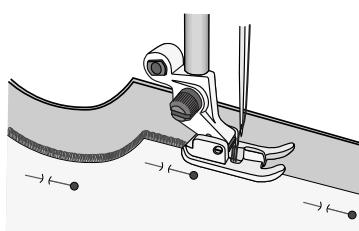

Transfer pattern markings with thread tacks. Use decoratively to create open/ladder seams or loops that can be fringe or animal hair. Zigzag stitch, length 1.5-2.5, width 3. Snap on Marking Foot. Reduce tension slightly.

Tailor Tacks:

1. Sew several stitches to mark. Do not tie off. Stitches will loop and be easy to remove

Open/ladder seams:

1. Stitch two pieces of fabric right sides together.
2. Pull the fabrics to expose the open seam created by the looping threads.
3. Press seam allowances away from the open work and stitch down if desired.

Decorative Loops or Fringe:

1. Stitch with Marking Foot following desired design.
2. Finger press loops to one side and stitch along base of loops with a straight stitch to anchor them. (For fringe, cut at center of loops.)



EDGE/QUILTING GUIDE

411739545

① ② ③ ④

412601945

⑤ ⑥ ⑦

The Edge Quilting guide is used for wide seam allowances, pintucks, topstitching, or channel quilting.

1. Slide the guide into the clip on the ankle.
2. Adjust from side to side to the correct position.







QUILTING

Historically, machine quilting was stitched for functional use but also offered quilters the opportunity to express their creativity. During the last decade, quilting by machine has developed into an art form. Quilters express their creativity with fabrics, fibers, threads, beautiful stitches and free motion artistry. HUSQVARNA VIKING® listens and has designed accessories and presser feet that will encourage your quilting expertise and enjoyment.



EXTENSION TABLE WITH ADJUSTABLE GUIDE

920361096

For

DESIGNER DIAMOND™, RUBY™, TOPAZ™, SAPPHIRE™, and OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

Designed and manufactured for HUSQVARNA VIKING® Sewing Machines this extension table attaches to your machine the same way as your accessory box and substantially increases your work area. It is very stable, and because no legs are needed, you have the clearance underneath the extension table for circular items. The Adjustable Guide with ruler has both centimeters and inches to allow you to sew hems, borders and more with perfect accuracy. The ruler printed right on the extension table measures from the needle in both centimeters and inches so you always have the measurements you need right at hand.



QUILTER'S TABLE

413112001

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series, DESIGNER TOPAZ™ series, SAPPHIRE™ series, OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

Convert the free arm of your HUSQVARNA VIKING® Sewing Machine to an extended flat bed so you can sew large projects and quilts easily.

1. When opening package, remove the white adhesive protective paper from the Lexan table.
2. Hold table with HUSQVARNA VIKING® label and measuring tape right side up. Place screws in holes from the top. Screw the legs onto the underside of the table. Screw the feet into the legs of the table.
3. Slide the table onto the free arm of the machine and screw the feet up or down to adjust the height.



INTERCHANGEABLE DUAL FEED

920219096

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.



The Dual Feed Foot with changeable presser feet is designed to feed layers of fabric and/or batting evenly. It is perfect for quilting, sewing velvet, stretch fabrics, imitation leathers and fabrics need precise pattern matching. Snap on the Changeable Straight Stitch Foot. Select the center needle straight stitch. Adjust it up to a maximum stitch length of 6. Snap on the Changeable Zigzag Foot and select stitches up to a maximum of 7 mm wide and 6mm long.

1. Remove the presser foot ankle by unscrewing the ankle screw.
2. Place the Dual Feed Foot onto your machine from the back, positioning the fork over the needle clamp screw. Screw the Dual Feed Foot onto the presser foot bar with the presser foot ankle screw. Reduce presser foot pressure to 3.

Snap-on and remove the changeable presser foot

3. With presser foot bar in the up position, place the presser foot under the Dual Feed Foot.
4. Push the changeable foot upwards so that it snaps into place.
5. To remove the changeable foot, push the front of the foot upwards until the foot snaps off.

How to attach the guide

The two guides included with the Dual Feed Foot will help you sew parallel rows of stitching side by side as in channel quilting or tucking. There is one guide for the left side, and one for the right.

6. Insert the guide into the hole in the back of the dual feed.
7. Adjust the space between the foot and the guide by pulling it to the left or to the right.





CHANGEABLE OPEN TOE FOOT



(for 920219096 Interchangeable Dual Feed)

413237845

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

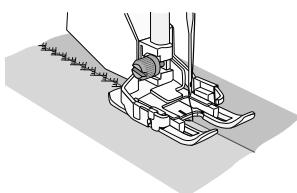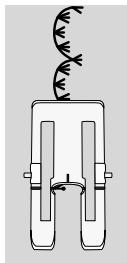

The Interchangeable Dual Feed with Changeable Presser Feet is designed to feed layers of fabric and/or batting evenly. It is perfect for quilting, sewing velvet, some stretch fabrics, imitation leathers and fabrics which need accurate pattern matching. Use the Changeable Open Toe Foot when sewing Satin stitch applique, Taper stitches and Decorative stitches. The tunnel on the underside of the foot feeds smoothly and the open front gives greater visibility and a great overview of the stitches.

1. Attach the Interchangeable Dual Feed to your machine:
 - a. Remove the presser foot ankle by unscrewing the ankle screw.
 - b. Place the Interchangeable Dual Feed onto your machine from the back, positioning the fork over the needle clamp screw. Screw the Interchangeable Dual Feed onto the presser foot bar with the presser foot ankle screw.
 - c. With presser foot bar in the up position, place the Changeable Open Toe Foot under the Interchangeable Dual Feed.
2. Push the Changeable Open Toe Foot upwards so that it snaps into place.
3. Choose a decorative or a satin stitch.
4. Sew. The red markings on the foot will help you guiding the fabric as you sew.





CHANGEABLE QUILTERS GUIDE FOOT


(for 920219096 Interchangeable Dual Feed)

413155545

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

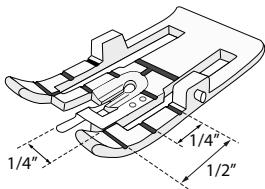

Use the Changeable Quilter's Guide Foot when stitching in the ditch along a seam line. The foot has guidelines to make it easy to accurately turn corners for 1/4 (6mm) or 1/8 (3mm) seams.

The Dual Feed with Changeable Presser Feet is designed to feed layers of fabric and/or batting evenly. It is perfect for quilting, sewing velvet, some stretch fabrics, imitation leathers and fabrics which need accurate pattern matching.

1. Stitching in the ditch means stitching in the finished seam line.
2. Snap on the Changeable Quilter's Guide Foot. Select the center needle straight stitch and adjust it up to a maximum stitch length of 6.
3. Place the fabric to be stitched under the presser foot aligning the guide in the center of the foot with the seam line.
4. To pivot 1/4 (6mm) from the end: Select the Needle Up/Down to activate the needle down. Sew the seam. Stop sewing when the front line on the foot is even with the edge of the fabric. Raise the presser foot, pivot and continue sewing.
5. The Changeable Dual Feed Foot makes feeding several layers smooth and easy.





CHANGEABLE 1/4" GUIDE FOOT


(for 920219096 Interchangeable Dual Feed)

413238345

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118, 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

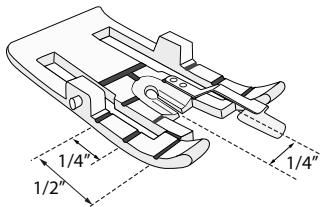

The Interchangeable Dual Feed with Changeable Presser Feet is designed to feed layers of fabric and/or batting evenly. It is perfect for quilting, sewing velvet, some stretch fabrics, imitation leathers and fabrics which need accurate pattern matching. Use the Changeable 1/4" Guide Foot for straight stitch and hand look quilt stitch. The guide will help you keep 1/4" (6mm) distance.

1. Attach the Interchangeable Dual Feed to your machine:
 - a. Remove the presser foot ankle by unscrewing the ankle screw.
 - b. Place the Interchangeable Dual Feed onto your machine from the back, positioning the fork over the needle clamp screw. Screw the Interchangeable Dual Feed onto the presser foot bar with the presser foot ankle screw.
 - c. With presser foot bar in the up position, place the Changeable 1/4" Guide Foot under the Interchangeable Dual Feed.
2. Push the Changeable 1/4" Guide Foot upwards so that it snaps into place.

Piecing:

3. Because this foot has a small opening to better form the stitches for piecing, you can only use the center needle position straight stitch or the hand look quilt stitch.
4. To begin sewing at the edge of the fabric, place your fabric under the foot, aligning the raw edges with the guide on the foot.
5. Sew the seam, keeping the edges aligned with the guide.

Quilting:

6. The red markings on the foot will help you to align the fabric at the start of your sewing, at corners and at the end of your fabric.
7. Sew with the guide riding in the pieced seam (ditch) of the quilt. When you come to a corner, stop when the 1/4" red marking on the foot reaches the seam.
8. With the needle in the fabric, pivot and continue sewing.




CHANGEABLE DECORATIVE FOOT

413340845

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

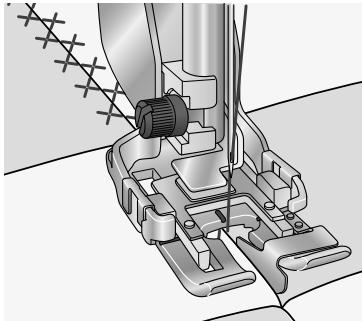

The Interchangeable Dual Feed with Changeable Presser Feet is designed to feed layers of fabric and/or batting evenly. It is perfect for quilting, sewing velvet, most stretch fabrics, imitation leathers and fabrics which need accurate pattern matching. Use the Changeable Decorative Guide Foot when stitching in the ditch along a seam line sewing any decorative stitch. The metal guide in the center of the foot helps you when guiding your fabric.

1. Attach the Interchangeable Dual Feed to your machine:
 - a. Remove the presser foot ankle by unscrewing the ankle screw.
 - b. Place the Interchangeable Dual Feed (Foot) onto your machine from the back, positioning the fork over the needle clamp screw. Screw the Interchangeable Dual Feed (Foot) onto the presser foot bar with the presser foot ankle screw.
 - c. With presser foot bar in the up position, place the Changeable Decorative Guide Foot under the Interchangeable Dual Feed (Foot).
2. Push the Changeable Decorative Guide Foot upwards so that it snaps into place.
3. Select a decorative stich of your choice.
4. Place the fabric to be stitched under the presser foot aligning the guide in the center of the foot with the seam line. (Stitching in the ditch means stitching in the finished seam line.) Illustration.
5. Sew, keeping the guide aligned with the seam as you sew.



QUILTER'S PRESSER FEET KIT

413035302

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

Content: Dual Feed Foot with Guide, Open Toe Stippling Foot, Clear 1/4" Piecing Foot with Guide. Everything you need to get started with quilting.



QUILTER'S 1/4" PIECING FOOT

412785545

① ② ③ ④ ⑤ ⑥ ⑦



412370845

① ② ③ ④ ⑤ ⑥ ⑦

Not for

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, DESIGNER SE series, EDEN ROSE™ 250C,
TRIBUTE™ 140C.

Sew a scant $\frac{1}{4}$ " seam allowance. Red lines mark $\frac{1}{4}$ " and $\frac{1}{8}$ " pivot points in front of and behind the needle. Straight stitch, length 2.0-2.5.

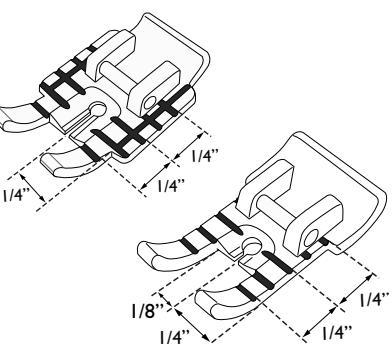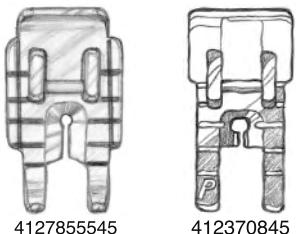

1. Place two pieces of fabric right sides together.

2. Sew with edge of fabric at edge of foot. To pivot $\frac{1}{4}$ " from end of fabric, stop sewing with needle stop down, when fabric edge reaches first red mark on foot.






CLEAR 1/4" PIECING FOOT

412927447

(1) (2) (3) (4) (5) (6) (7)

For clear visibility when $\frac{1}{4}$ "(6 mm) and $\frac{1}{8}$ " (3 mm) seams with straight stitch are desired. Guidelines to turn corners for $\frac{1}{4}$ " (6 mm) or $\frac{1}{8}$ " (3 mm) seams.

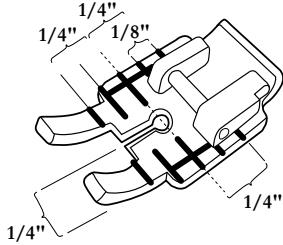

1. The Clear $\frac{1}{4}$ " Piecing Foot can be used whenever you require a $\frac{1}{4}$ " (6 mm) or $\frac{1}{8}$ " (3 mm) seam. It is ideal when you are stitching $\frac{1}{4}$ " (6 mm) away from an applique, embroidery etc., for example in echo quilting. The Clear $\frac{1}{4}$ " Piecing Foot works well when stitching in the center of the fabric.
2. Snap on the Clear $\frac{1}{4}$ " Piecing Foot. Thread with sewing thread or invisible thread on top and sewing thread in the bobbin. Touch Needle Stop Down.
3. The Clear $\frac{1}{4}$ " Piecing Foot has red marks on the foot. They will help you to align the fabric at the start of your sewing, at corners and at the end of your sewing.
4. To begin $\frac{1}{4}$ " (6 mm) from the edge of the fabric, place your fabric under the foot, aligning edge of the fabric with the front red mark on the foot. This mark is $\frac{1}{4}$ " (6 mm) from the needle. To begin sewing $\frac{1}{8}$ " (3 mm) from the edge of the fabric, align the fabric with the second line from the front.
5. To pivot $\frac{1}{4}$ " (6 mm) from the end, stop sewing when the front line on the foot is even with the edge of the fabric you are quilting around. The needle will be in the down position, Designer Series machines will automatically stop in Pivot Position. On other models, raise the presser foot. Turn the fabric.

You will be positioned $\frac{1}{4}$ " (6 mm) from the edge of the appliqué, embroidery, etc. you are quilting around and be ready to begin sewing.




CLEAR 1/4" PIECING FOOT WITH GUIDE

412927445

① ② ③ ④ ⑤ ⑥ ⑦

For straight stitch and hand look quilting stitches. Guide will help you keep the $\frac{1}{4}$ " (6 mm) distance. Clear means you have good visibility to view the sewing. For beginners as well as for experienced quilters.

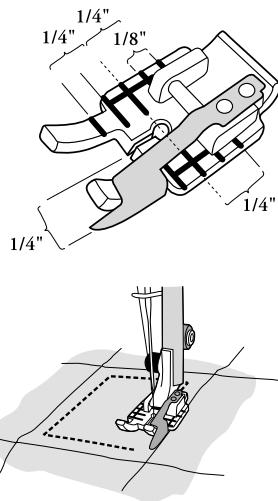

1. For piecing, select Woven Medium, Seam on your SEWING ADVISOR™ feature or center needle position straight stitch. Because this foot has a small opening to better form the stitches for piecing, you can use straight stitch only or the hand look quilt stitch.
2. The Clear 1/4" (6 mm) Piecing Foot with Guide has red marks on the foot. They will help you to align the fabric at the start of your sewing, at corners and at the end of your fabric.
3. To begin sewing at the edge of the fabric, place your fabric under the foot, aligning the raw edges with the guide on the foot. Sew the seam, keeping the edges aligned with the guide.
4. To begin sewing 1/4" (6 mm) from the edge of the fabric, line the fabric up with the line furthest to the back of the foot as show. To begin sewing $\frac{1}{8}$ " (3 mm) from the edge of the fabric, align the fabric with the next line forward.
5. To stop sewing 1/4" (6 mm) from the end, stop sewing when the front line on the foot is even with the edge of the fabric.
6. To use the Clear 1/4" (6 mm) Piecing Foot with Guide for topstitching a finished edge, align the guide on the right of the foot with the edge of the fabric. Stitch. The Handlook Quilt Stitch can be used if desired, to give a hand stitched look. If using the Handlook Quilt Stitch follow the instructions for threading in your User's Guide.




CLEAR STITCH-IN-DITCH FOOT

412927446

① ② ③ ④ ⑤ ⑥ ⑦

For excellent visibility, and ease of use, when stitching in the ditch. Guidelines to turn corners for $\frac{1}{4}$ " (6 mm) or $\frac{1}{8}$ " (3 mm) seams. For quilting, garment construction and more.

1. Stitching in the ditch means stitching in the finished seam of a quilt or binding. There is usually a higher edge to the seam. The side where the seam allowances have been pressed to, and the lower side. The side without the seam allowances.
2. Snap on the Clear Stitch-in-Ditch Foot. Thread with matching thread or invisible thread on top and thread to match your quilt back in the bobbin.
3. Place the fabric to be stitched under the presser foot aligning the guide in the center of the foot with the seam. The guide will automatically fall on the low side of the seam and will stitch flawlessly down the seam of your quilt or binding.
4. To pivot $\frac{1}{4}$ " (6 mm) from the end, stop sewing when the front line on the foot is even with the edge of the fabric.

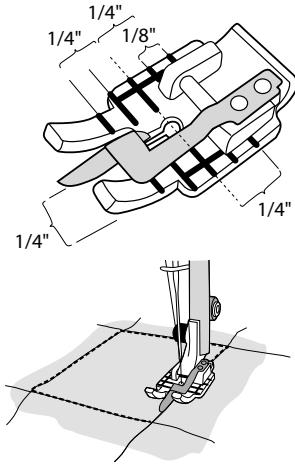



1/4" EDGE STITCHING FOOT

412914146

⑦

And for

955 E, 950 E, 755 QUILT, 750 QUILT, 555, 545

Guides topstitching and edge stitching perfectly. Guide will help you keep the 1/4" (6 mm) distance. This presser foot is used only to sew 1/4" Quilt Stitch.

Piecing:

1. Snap on the 1/4" Edge Stitching Foot.
2. Select the pre-programmed scant 1/4" (6 mm) quilter's piecing stitch.
3. Place two fabric pieces right sides together and place them under the presser foot. Let the guide at the edge of the foot ride along the edge of the fabric pieces.
4. Sew. The guide assures a perfect scant 1/4" (6 mm) seam allowance.

Quilting:

5. Snap on the 1/4" Edge Stitching Foot.
6. Select the pre-programmed scant 1/4" (6 mm) quilter's piecing stitch.
7. Sew with the guide riding in the pieced seam (ditch) of the quilt. When you come to a corner, stop when the first red marking on the left side of the foot reaches the edge.
8. With the needle in the fabric, pivot and continue sewing. If you want the stitching 1/8" (3 mm) from the seam, select the 1/4" (6 mm) straight stitch as above. Let the inner edge of the right toe of the foot ride along the seam. When you come to a corner, stop when the second red marking on the left side of the foot reaches the edge. With the needle in the fabric, pivot and continue sewing.



Clear Open Toe Foot

CLEAR OPEN TOE FOOT

413031945

① ② ③ ④ ⑤ ⑥ ⑦

Satin Stitch Applique, Taper Stitches, and Decorative Stitches. Length and width as desired. The clear view through foot makes it easy to match rows of stitches perfectly. The tunnel on the underside of the foot feeds smoothly over the stitches and the open front gives greater visibility and a great overview of the stitches.

1. Snap on foot.
2. Set decorative or satin stitch.
3. For best result use a marking pen to draw lines for exact guiding of the foot.



Open Toe Foot

OPEN TOE FOOT

412800945

① ② ③ ④ ⑤ ⑥ ⑦

Satin Stitch Applique, Taper Stitches, and Decorative Stitches. Length and width as desired. The clear view through foot makes it easy to match rows of stitches perfectly. The tunnel on the underside of the foot feeds smoothly over the stitches and the open front gives greater visibility and a great overview of the stitches.

1. Snap on foot.
2. Set decorative or satin stitch.
3. For best result use a marking pen to draw lines for exact guiding of the foot.





CLEAR OPEN TOE FREE-MOTION FOOT

412860645 (Floating)

① ⑦

Not for

OPAL™ 670 and 650

The Clear Open Toe Free-Motion Foot is ideal for stitching free motion on print fabrics, or when stippling around pieced or embroidered designs. It gives clear vision for free motion sewing.



1. Snap on the Clear Open Toe Free-Motion Foot.
2. On the Designer Models, select the V menu. The Feed teeth will drop automatically. On other models, follow your User's Guide for instructions on setting up for Free-Motion Sewing.
3. Thread with your choice of sewing or decorative thread on top and in the bobbin.
4. The stitch length setting doesn't matter because when you drop the feed teeth, the fabric is no longer being fed by the machine. You must feed (move) the fabric. The clear vision of the Clear Open Toe Free-Motion Foot will enable you to follow patterns easily. Stitch in place (don't move the fabric) for several stitches to fix start and endings.



FREE-MOTION GUIDE GRIP

412538845

Place on quilt for free-motion quilting and embroidery. No need to hoop the fabric. The friction surface on the underside of the guide grip holds the fabric taut and provides handles for moving fabric in any direction.

1. Lower the feed teeth and set machine for free motion or set presser foot pressure to the darning position.
2. Set for straight stitch or stitch of your choice.
3. Put on the Free-motion Presser Foot of your choice.
4. Place the guide grip on top of the quilt or fabric to be free-motion stitched.
5. Hold the handles and move the quilt at a steady pace for even stitches.

FREE MOTION FLOATING AND FREE MOTION SPRING ACTION



OPEN TOE STIPPLING FOOT

412531045 (Spring action)



①

412801045 (Floating)

⑦

Not for

OPAL™ 670 and 650

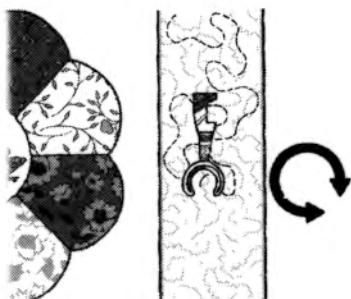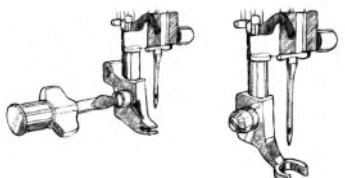

OPEN TOE FREE MOTION SPRING FOOT

413037646 (Spring action)

⑤ ⑥ ⑦


Not for


EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

The Open Toe Free Motion Spring Foot gives clear visibility when doing free motion quilting or embroidery. Because of the open front, you can easily do stippling or follow a design in the fabric. The spring action keeps the fabric from lifting with the needle as the stitch is being formed which helps eliminate thread breakage with specialty or heavier threads. Be sure to use the appropriate needle for the thread you are using.

For Sapphire series, select Free Motion Spring Action on the Set Menu. For DESIGNER™ series, select Sensor Q Foot on the Set Menu.

1. Remove the ankle and put on the Open Toe Free Motion Spring Foot.
2. Bring the bobbin thread to the top by taking one stitch.
3. Lower the presser foot.
4. Sew, moving the fabric as desired to quilt the fabric, or create a free motion design. Move the fabric in a smooth motion, moving the fabric faster as the speed of the machine is increased. You are creating the length of the stitch as you move the fabric.

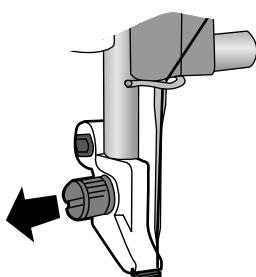

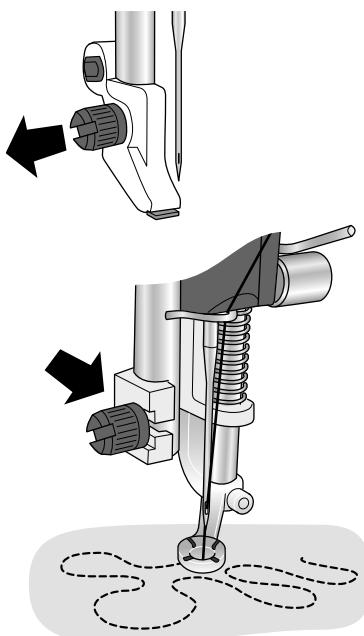

CLOSED FREE MOTION SPRING FOOT

413385645 (Spring action)

⑤ ⑥ ⑦

Not for

EMERALD™ 122, 118 and 116 machines,
EDEN ROSE™ 250M, TRIBUTE™ 140M.

The Closed Free Motion Spring Foot gives great visibility around the foot when free motion quilting or sewing. The closed and round shape of the foot prevents threads or fabrics from getting stuck in the foot. The vertical and horizontal markings on the foot are useful as stitch guides. The spring action keeps the fabric from lifting with the needle as the stitch is being formed which helps eliminate thread breakage with specialty or heavier threads.

1. Loosen the presser foot ankle screw completely and remove the ankle. Place the Closed Free Motion Spring Foot around the presser bar, attach it with the screw.
Hint: Lower the needle a little bit to make it easier to place the metal guide on the foot in the right position on the needle clamp
2. Thread your machine.
3. Choose center needle position straight stitch.
4. Set your HUSQVARNA VIKING® sewing machine to Free Motion Spring Action mode. The feed dogs will drop automatically.
Note: When the feed dogs are dropped, the fabric is no longer fed by the machine. You must move the fabric.
5. Bring the bobbin thread to the top by taking one stitch. Hold on to both threads and sew a few stitches in place to begin.
6. Maintain a consistent speed and move the fabric in a smooth motion. You are creating the length of the stitch as you move the fabric. Use the red markings on the foot as a guide.

FREE MOTION FLOATING AND FREE MOTION SPRING ACTION



FREE MOTION GUIDE FOOT

412613745 (Spring Action)

⑤ ⑥

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

412576445 (Floating)

⑦


Not for

OPAL™ 670 and 650.

The large transparent plate is marked with $\frac{1}{4}$ " and $\frac{1}{8}$ " guidelines for excellent visibility and accuracy when free-motion quilting and embroidering.

1. Take standard ankle and presser foot off the machine.
2. Place Free-motion Guide Foot on the presser bar with the wire guide over the needle clamp screw. Screw in place with the accessory thumb screw.
3. Lower the feed teeth. (Automatically lowered on DESIGNER™ SE machine).
4. Mark pattern for free-motion quilting or stitching on fabric with Pictogram Pen.
5. For group 1 set machine for straight stitch (or desired stitch). For group 7 select the V menu, touch free motion straight stitch or free motion zig zag stitch.
6. Place Free-motion Guide Grip on quilt or fabric and stitch. Move quilt or fabric at a smooth pace for even stitches.



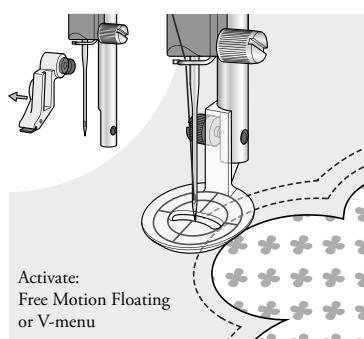

FREE MOTION ECHO QUILTING FOOT

413320245

(7)

Not for

OPAL™ 670 and 650.

The Free Motion Echo Quilting Foot is designed to give you more control when freemotion quilting. The large base ensures good surface contact with the fabric and provides better control of the stitching. The transparent base allows for 360° visibility. Vertical, horizontal and circular markings on the foot make it easy to follow a continuous line quilting pattern or design on the fabric. Sew straight lines or follow patterns with rounded edges in any direction.

1. Loosen the presser foot ankle screw completely and remove the ankle. Place the Free Motion Echo Quilting foot around the presser bar; attach it with the screw.
2. Thread your machine.
3. Select a straight stitch.

4. Set your sewing machine to Free Motion Floating mode. The feed dogs will drop automatically.

Note: When the feed dogs are dropped, the fabric is no longer fed by the machine.
You must move the fabric.

5. Bring the bobbin thread to the top by taking one stitch. Hold onto both threads and sew a few stitches in place to begin.
6. Maintain a consistent speed and move the fabric in a smooth motion. You are creating the length of the stitch as you move the fabric.
7. Stitch around the quilting motif, appliqué or pattern on the fabric, maintaining a uniform distance to outline the shape.
8. Stitch a second row, maintaining a uniform distance from the first row. Use the red markings on the foot as a guide to keep your spacing even (illustr.1).
9. Repeat as many times as you want to create the desired effect.

Note: When sewing in Free Motion Floating mode at a low speed the presser foot will raise and lower with each stitch to hold the fabric on the stitch plate while the stitch is being performed. At a higher speed, the presser foot floats over the fabric while sewing.



EMBROIDERY

The introduction of embroidery on HUSQVARNA VIKING® sewing and embroidery machines has opened the doors to a new way to personalize and embellish everything you sew and to create designer “one-of-a-kind” garments and home decoration. Visit your local Husqvarna Viking store for unique and beautiful embroidery designs and be sure to visit www.myembroideries.com for thousands more designs to choose from. There is a design for every project! To make your embroideries personal, do not miss the HUSQVARNA VIKING® Embroidery Software programs that enables you to create original, truly unique designs.



For a truly unique embroidery experience - log on to www.myembroideries.com and experience the world of embroidery! Here you can find a huge selection of all our embroideries - from cute little designs to large mega hoop designs and embroideries with special techniques. View the art gallery for inspiration or tour the education section with animated film sequences that, step by step, will take you through how to embroider special techniques designs.



EXCLUSIVE HUSQVARNA VIKING® EMBROIDERY COLLECTION ON MULTIFORMAT-CD

HUSQVARNA VIKING® frequently produces new and exclusively made Embroidery multiformat CD's with designs created by designers, sewing stars and artists. Select from flowers, quilting, cutwork, appliqué, and much more! Visit your local dealer for more information.





FELTING EMBROIDERY SET

920402096

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series

With the HUSQVARNA VIKING® Felting Embroidery Set, you can create the most amazing felted embroideries. The effect is created when embroidering without threads but with a special needle that felts fibers together. The effect of the embellishment can be changed dramatically by using different types of fabric/wool.


 
Contents:

- A. Felting Foot
- B. Felting Bobbin
- C. Felting Needle Plate Cover
- D. Felting Needles (x5)
- E. Screw


A.



B.

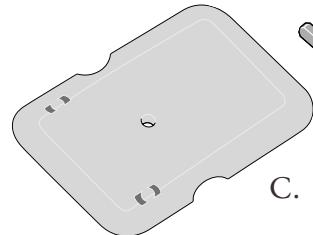

C.

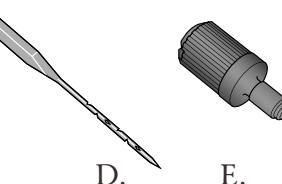

D.

E.



FABRICS

Just about any fabric can be felted with the Felting Embroidery Set, however, some fabrics tend to give a more favorable result when embellished or laundered.

The recommended fabrics are those that are made from natural fibers, such as wool and wool roving. The best characteristic for fabrics is a napped or textured surface.

A napped surface will adhere to a natural fiber/napped surface/or mixed fiber base.

Avoid synthetics with "wash and wear" type of weaves and finishes that have a smooth surface.

The effect differs from fabric to fabric. Always test on a piece of material before you start.



HOOPING

When embroidering with the felting needles, no threads are used. The fabric is hooped with the right side facing down.

When embroidering free-standing designs or when using wool roving, a water soluble stabilizer is needed.




FELTING TECHNIQUES


Three designs are available for download from "www.husqvarnaviking.com". Each design represents a felting technique, Free Standing, One-Layer and Multi-layer embroidery. These techniques are shown below.

To download the designs, go to www.husqvarnaviking.com
Find the Felting Embroidery Set. Click on the link to download the designs.


1. Free Standing Embroidery
2. One-Layer Embroidery
3. Multi-Layer Embroidery

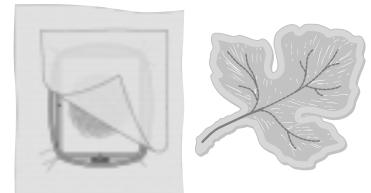

1. Free Standing Embroidery

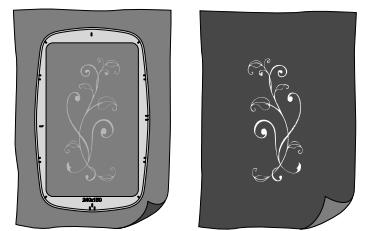

2. One-Layer Embroidery

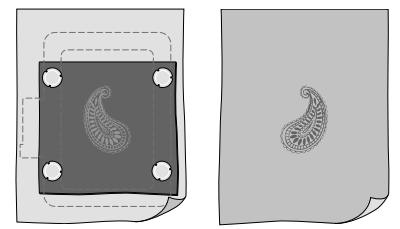

3. Multi-Layer Embroidery





METAL HOOP 180X130MM

920362096

For

DESIGNER DIAMOND™, RUBY™, TOPAZ™ series.

Some fabrics are more difficult to hoop than others or should not be hooped at all, since hooping can damage the fabric. Thick and coarse fabrics can be difficult to hoop but also thin and glossy fabrics. Hooping ready-to-wear garments is difficult or impossible due to seams, narrow areas or buttons/rivets. When using the Metal Hoop 180x130mm hooping won't be a problem! When you want to embroider on quilts or other projects where you do not want residuals from stabilizer on the back side, the Metal Hoop 180x130mm is perfect! Embroider without stabilizer. Embroidering several designs after each other or doing endless embroideries is easy, just remove the magnets and move the fabric. Ready to embroider the next design in no time!

DIFFERENT WAYS TO USE THE HOOP

Hard-to-Hoop Fabrics and Finished Garments

Thin stretch fabrics, velvet, suede, leather and coarse fabrics is hard to hoop and the fabric can be damaged by the hooping. For those fabrics, use the hoop with adhesive stabilizer. This is also the perfect solution when embroidering on garments as jackets, jeans, waistbands, pockets, collars or sleeves. We recommend using INSPIRA® "Light & Tacky Tear-A-Way™" stabilizer (# 620115396).

Lace and Free-Standing Embroideries

If embroidering on light or sheer fabric, or if you want to make free-standing embroideries or lace, use a water soluble stabilizer (we recommend INSPIRA® Aqua Magic™, #620114396).





Standard Embroidery

The Metal Hoop 180x130mm is also suitable for embroidery with tear-away stabilizer. We recommend using INSPIRA® Tear-A-Way™ stabilizer (#620112296).

Endless Embroidery

Endless embroideries are done easily with the Metal Hoop 180x130mm. Use water soluble or tear-a-way stabilizer.

Embroider on Quilts or Sturdy Fabrics

When you cannot use water-soluble stabilizer and/or you do not want residual from stabilizer on the backside (e.g. on a quilt or sturdy fabrics), you can embroider without any stabilizer. Fix the fabric to the hoop with the magnets. When embroidering without stabilizer, we recommend using an extra set of magnets (#620132696).



SET OF 4 MAGNETS

620132696

For
METAL HOOP

There is an extra set of four magnets available as an optional accessory. They can be used to fix the fabric more securely to the hoop when not using adhesive stabilizer.

HOOPS FROM MINI TO MAJESTIC

A variety of hoop sizes from Mini to Majestic are available to stitch beautiful embroideries. Choose the smallest hoop appropriate for the size of the design for best results and easy hooping. The Mini Hoop is perfect to embroider clothing for children and dolls, or select the Majestic Hoop to create one of a kind home dec or fashion embroidery.



DESIGNER™ Majestic Hoop

920222096

14 1/6" x 13 3/4" (360 x 350 mm)



DESIGNER™ Royal Hoop

412944501

14 1/6" x 8" (360 x 200 mm)



DESIGNER™ Crown Hoop

413116501

10 1/4" x 8" (260 x 200 mm)



MEGA ENDLESS HOOP

920307096

10 1/4" x 6" (260 x 150 mm)



**200 X 200
QUILTER'S HOOP**

920264096

8" x 8" (200 x 200 mm)



DESIGNER™ Jewel Hoop

412968501

9 6/13" x 6" (240 x 150 mm)



METAL HOOP

920362096

5" x 7" (180 x 130 mm)



**ENDLESS
EMBROIDERY HOOP II**

920310096

7" x 4" (180 x 100 mm)



**DESIGNER™ SPLENDID
SQUARE HOOP**

412968201

4 9/13" x 4 9/13" (120 x 120 mm)



SMALL SQUARE HOOP

920334096

3" x 3" (80 x 80 mm)



TEXTURE HOOP

920225096

6" x 6" (150 x 150 mm)



DO ALL QUILTER'S HOOP

920115096

6" x 6" (150 x 150 mm)



5" X 7" DESIGN HOOP

920085096

5" x 7" (180 x 130 mm)



ENDLESS EMBROIDERY HOOP

920051096

6^{9/13}" x 4" (170 x 100 mm)



MIDSIZE HOOP

412665501

6^{9/13}" x 4" (170 x 100 mm)



LARGE HOOP

412527102

9^{6/13}" x 6" (240 x 150 mm)



STANDARD HOOP

412527401 / 412447001

4" x 4" (100 x 100 mm)



EMBROIDERY SPRING HOOP

412573801

4" x 4" (100 x 100 mm)



MINI EMBROIDERY SPRING HOOP

412573901

1^{7/13}" x 1^{7/13}" (40 x 40 mm)



MEGA HOOP

412625502

14^{1/6}" x 6" (360 x 150 mm)



PLUS HOOP

412464901

6^{9/13}" x 4" (170 x 100 mm)

EMBROIDERY

HOOP/MACHINE COMPATIBILITY CHART



DESIGNER
DIAMOND Royal™
DESIGNER
DIAMOND deLuxe™
DESIGNER
DIAMOND™
DESIGNER DIAMOND™



DESIGNER RUBY Royal™
DESIGNER RUBY deLuxe™
DESIGNER RUBY™
DESIGNER TOPAZ™ 50, 30
DESIGNER DIAMOND™

EMBROIDERY HOOPS	MAX. EMBROIDERY AREA	HOOP SIZE	
		360 x 350 mm	360 x 200 mm
920222096 DESIGNER™ Majestic Hoop	14 1/6" x 13 3/4" (360 x 350 mm)	X	
412944501 DESIGNER™ Royal Hoop	14 1/6" x 8" w (360 x 200 mm)	X	X
413116501 DESIGNER™ Crown Hoop	10 1/4" x 8" (260 x 200 mm)	X	X
920307096 MEGA ENDLESS HOOP	10 1/4" x 6" (260 x 150 mm)	X	X
920264096 200 X 200 QUILTER'S HOOP	8" x 8" (200 x 200 mm)	X	X
412968501 DESIGNER™ Jewel Hoop	9 6/13" x 6" (240 x 150 mm)	X	X
9203622096 METAL HOOP	5" x 7" (180 x 130 mm)	X	X
920310096 ENDLESS EMBROIDERY HOOP II	7" x 4" (180 x 100 mm)	X	X
412968201 DESIGNER™ Splendid Square Hoop	4 9/13" x 4 9/13" (120 x 120 mm)	X	X
920334096 SMALL SQUARE HOOP	3" x 3" (80 x 80 mm)	X	X
920225096 TEXTURE HOOP	6" x 6" (150 x 150 mm)	X	X
920115096 DO ALL QUILTER'S HOOP	6" x 6" (150 x 150 mm)	X	X
920085096 5" X 7" DESIGN HOOP	5" x 7" (180 x 130 mm)	X	X
920051096 ENDLESS EMBROIDERY HOOP	6 9/13" x 4" (170 x 100 mm)	X	X
412665501 MIDSIZE HOOP	6 9/13" x 4" (170 x 100 mm)	X	X
412527102 LARGE HOOP	9 6/13" x 6" (240 x 150 mm)	X	X
412527401 STANDARD HOOP	4" x 4" (100 x 100 mm)	X	X
412573801 EMBROIDERY SPRING HOOP	4" x 4" (100 x 100 mm)	X	X
412573901 MINI EMBROIDERY SPRING HOOP	1 7/13" x 1 7/13" (40 x 40 mm)	X	X
412625502 MEGA HOOP	14 1/6" x 6" (360 x 150 mm)		
412464901 PLUS HOOP	6 9/13" x 4" (170 x 100 mm)		
412447001 STANDARD HOOP	4" x 4" (100 x 100 mm)		

HOOP/MACHINE COMPATIBILITY CHART

95 <



DESIGNER TOPAZ™ 20




DESIGNER TOPAZ™
40, 25



DESIGNER™ SE LE
DESIGNER™ SE
DESIGNER™ I, II
QUILT DESIGNER™ II
PLATINUM™ 955E



PLATINUM™ 950E
PLATINUM™ PLUS

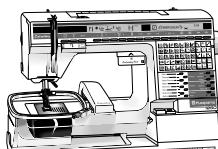

ORCHIDEA™ #1+, 1250
ROSE™, IRIS™
SCANDINAVIA™
400, 300

260 x 200 mm	240 x 150 mm	240 x 150 mm	240 x 150 mm	100 x 100 mm
X				
X				
X				
X	X			
X	X			
X	X			
X	X			
X	X			
X	X	X		
X	X	X		
X	X	X		
X	X	X	X	
X	X	X	X	
X	X	X	X	
X	X	X	X	
X	X	X	X	
		X	X	
				X
				X



HOOP GRIP

412738645

Holds your embroidery hoop secure for easy positioning and hooping of your fabric or garment.



SENSOR Q-FOOT

413192045

⑦

Not for

OPAL™ 670 and 650

The Sensor Q Foot is used for embroidery and free motion sewing, quilting and embroidery on especially thick or spongy fabrics. Put on the Sensor Q Foot for free-motion Quilting with puffy battings, free-motion and built-in embroidery on fabric with batting, thick terrycloth towels, and when there is a build up of embroidery thread or couched decorative threads.



SNAP ON CLEAR EMBROIDERY FOOT R

412849801

①

Not for

1200, 1100, 1090, 1070, 1070S, 1050.

⑦

Not for

OPAL™ 670 and 650

The Snap on Clear Embroidery Foot R is used for free motion embroidery, decorative sewing and embroidery. The foot allows greater visibility for both embroidery and free motion sewing.



EMBROIDERY FOOT U

412727601

For

PLATINUM™ 955 E/950 E, PLATINUM PLUS, ROSE™, IRIS™, SCANDINAVIA™ 400 and 300 machines.

The Embroidery Foot U is used for decorative sewing and embroidery.




DARNING FOOT

411739045

① ② ③ ④

Straight stitch, drop feed teeth, presser foot pressure darning position. Snap on the Darning/Quilting Foot.

1. Place fabric under foot.
2. Bring the bobbin thread to the top by turning the hand wheel.
3. Lower the presser foot.
4. Sew, moving fabric as desired to quilt or darn fabric. Move fabric in a smooth motion, moving faster as speed of machine is increased.

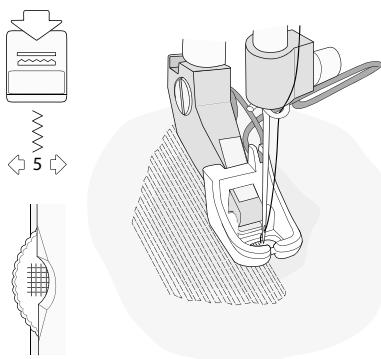



EMBROIDERY CUTWORK NEEDLE KIT


920268096

(1) (6) (7)

For
Embroidery machines

With HUSQVARNA VIKING® Embroidery Cutwork Needle Kit set you can easily create cutwork embroidery. This kit will help you get started!

Contents: INSPIRA™ Cutwork Needles, Multipurpose tool/ Button reed, CD with instruction video, embroidery designs, more tips and inspiration to get you started!

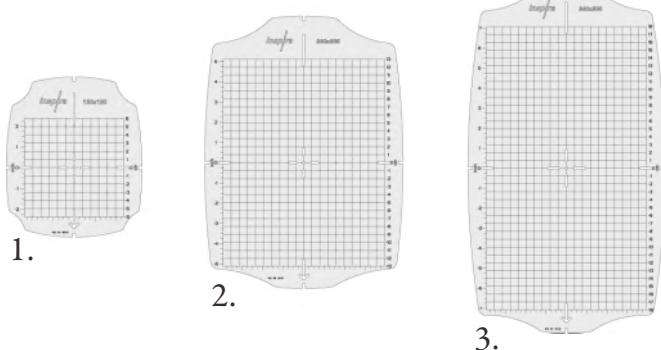

TEMPLATES AVAILABLE FOR YOUR STANDARD HOOPS

1. 620090396 (120 x 120 mm)
2. 620090496 (260 x 200 mm)
3. 620090596 (360 x 200 mm)





ADDITIONAL ACCESSORIES

HUSQVARNA VIKING® has developed a number of special accessories to make your sewing easier. Special needles, stitch plates, bobbins, and “sew” much more mean time saving sewing with professional results.



CIRCULAR ATTACHMENT

411852645

① ② ③ ④

412602645

⑤ ⑥ ⑦

Sew a variety of stitches in a perfect circle for ornaments, coasters, decorative embellishments. Select a favorite decorative stitch. (Stitch width maximum $\frac{1}{4}$ " (6 mm)

1. Snap on Presser Foot B.
2. Place thumbtack in the center of the area to be a circle.
3. Slide the circular sewing attachment into the groove at the back of the presser foot ankle and place the end of the attachment on the thumb tack, tighten the accessory screw at the back of the ankle to hold the circular attachment in place (on some models tighten the accessory screw at the back of the ankle to hold the circular attachment in place).
4. Lower the presser foot and sew. The fabric will feed in a circle around the thumb tack.

Hint: place the fabric in a hoop and use stabilizer under light weight fabrics.



411417701




CLEARANCE PLATE

413105601

① ② ③ ④ ⑤ ⑥ ⑦

The Clearance Plate creates a thread shank when sewing buttons in place. Each end is a different thickness for more or less thread shank. It also can be used when sewing over heavy seams to balance the height of the foot.

1. Place the Clearance Plate between button and fabric.
2. Follow instructions for button sewing and stitch button in place.

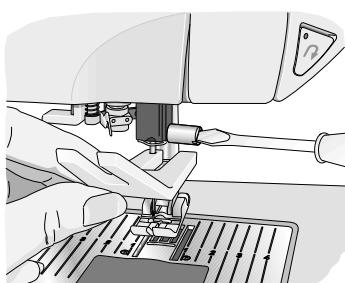



SAFETY NEEDLE GUARD

413137545

(5) (6) (7)

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

The Safety Needle Guard is a safety feature used during sewing. The metal guard is attached to the presser foot bar so that any unintentional touching of the needle during sewing is prevented.




EYELET PLATE 4 MM

412991145

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

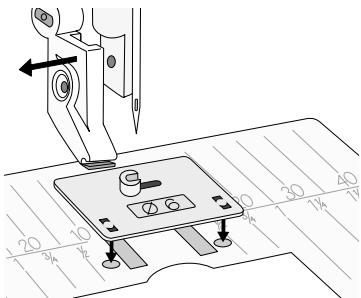

EYELET PLATE 6 MM

412991146

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

Sew eyelets for laces, belts, shower rings, and more.

1. Zigzag stitch, width 2–3 (adjust as needed to clear Eyelet Plate), drop feed teeth.
2. Insert Eyelet Plate into needle plate. Snap off presser foot, remove ankle as needed.
3. Place fabric in small hoop. Poke a small hole for eyelet. (Use Eyelet Cutter or Buttonhole Knife.)
4. Work the hole over the eyelet plate finger.
5. Bring bobbin thread to top and wrap top and bobbin thread around the finger to anchor them.
6. Lower presser foot.
7. Stitch zigzag turning fabric as you stitch to zigzag around the eyelet. After stitching around the eyelet once, clip any thread tails, increase stitch width as desired, and zigzag around eyelet a second time.



EIGHT SPOOL THREAD RACK

412481603

① ⑥ ⑦

Not for

OPAL™ and EMERALD™ series, EDEN ROSE™ 250M,
TRIBUTE™ 140M.

Snaps onto top of machine and features pins for up to eight spools
of thread. Thread pins are numbered for embroidery color changes.



WATERCOLORED BOBBINS 20 PACK

413198445

⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

4 different color bobbins to help you organize your specialty
thread types.



WATERCOLORED BOBBINS 20 PACK, VERSION 2

920364096

⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

4 different color bobbins to help you organize your specialty
thread types.



BOBBINS 10 PACK

412061245

② ③ ④ Old style

412097545


① New style

413182545

⑤ ⑥ ⑦ Green

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

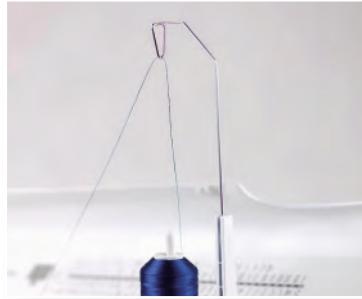

MEGA SPOOL STAND

413108301

① ② ③ ④

And for

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series,
DESIGNER TOPAZ™ series, SAPPHIRE™ series,
OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

Perfect when using larger spools of thread. Fits easily to the auxiliary spool pin.



THREAD NET

412397701

① ② ③ ④ ⑤ ⑥ ⑦



ACCESSORY ANKLE

412616145

⑤ ⑥ ⑦

Not for

EMERALD™ series, EDEN ROSE™ 250M, TRIBUTE™ 140M.

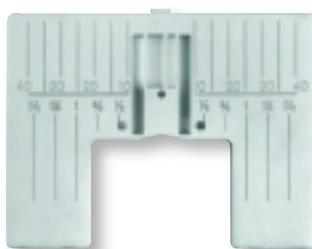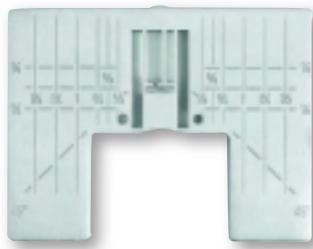

STANDARD ZIGZAG PLATE WITH INCH MARKINGS

412964205

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series, DESIGNER TOPAZ™ series, SAPPHIRE™ series, OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.

STRAIGHT STITCH PLATE WITH INCH MARKINGS

412964203

For

DESIGNER DIAMOND™ series, DESIGNER RUBY™ series, DESIGNER TOPAZ™ series, SAPPHIRE™ series, OPAL™ series, EDEN ROSE™ 250C, TRIBUTE™ 140C.



STANDARD ZIGZAG STITCH PLATE
WITH INCH MARKINGS

412789603

For
DESIGNER™ SE and DESIGNER™ SE
Limited Edition machines.



STRAIGHT STITCH PLATE
WITH INCH MARKINGS

412789602

For
DESIGNER™ SE and DESIGNER™ SE
Limited Edition machines.



STANDARD ZIGZAG STITCH PLATE
WITH INCH MARKINGS

412533003

For
DESIGNER™ I, II, QUILT DESIGNER™,
QUILT DESIGNER™ II, PLATINUM™,
PRELUDE and SCANDINAVIA™ series.



STRAIGHT STITCH PLATE
WITH INCH MARKINGS

412533002


For
DESIGNER™ I, II, QUILT DESIGNER™,
QUILT DESIGNER™ II, PLATINUM™,
PRELUDE and SCANDINAVIA™ series.



STANDARD ZIGZAG STITCH PLATE
WITH INCH MARKINGS

412288103

⑤ ⑥
Not for
PLATINUM™, PRELUDE™,
SCANDINAVIA™ series and EMERALD™
series, EDEN ROSE™ 250M,
TRIBUTE™ 140M

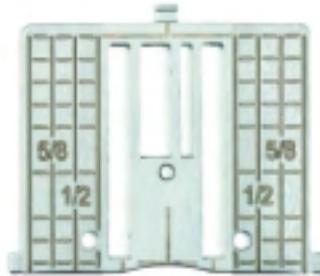

STRAIGHT STITCH PLATE
WITH INCH MARKINGS

412288102

⑤ ⑥
Not for
PLATINUM™, PRELUDE™,
SCANDINAVIA™ series and EMERALD™
series, EDEN ROSE™ 250M,
TRIBUTE™ 140M



BAG FOR EMBROIDERY UNIT

413071302

For

DESIGNER DIAMOND deLuxe™, DESIGNER DIAMOND™.

BAG FOR EMBROIDERY UNIT

413 23 2101

For

DESIGNER RUBY™ machines,
DESIGNER TOPAZ™ 30, 25 and 20 machines.

413180601 UPPER FURNISH FOR EMBR. UNIT

413180602 LOWER FURNISH FOR EMBR. UNIT



BAG SEWING MACH W. TROLLEY

413182701

For

DESIGNER DIAMOND deLuxe™, DESIGNER DIAMOND™, DESIGNER RUBY *Royale*™,
DESIGNER RUBY *deLuxe*™, DESIGNER RUBY™,
DESIGNER TOPAZ™ 30/25/20 and
SAPPHIRE™ series.





OVERLOCK SEWING AND
EMBELLISHING



HUSKYLOCK™ S25

Top of the line overlock with SEWING ADVISOR™ feature has 25 stitches including 5, 4, 3, 2 thread sewing, 5-thread Safety stitch, coverstitch and chainstitch, Automatic Differential Feed and more. The HUSKYLOCK™ S25 machine also has a large sewing space, large Graphic Touch Display, info system, dual LED lights and a threading guide. An extension table is also included.



HUSKYLOCK™ S21

4, 3, 2 thread overlock with 21 stitches including coverstitch and chainstitch. The HUSKYLOCK™ S21 machine has pre-programmed stitch settings, a tension release and a threading guide. An extension table is also included.



HUSKYLOCK™ S15

4, 3, 2 thread overlock with 15 stitches, differential feed, threading guide, free arm and adjustable stitch length, cutting width and presser foot pressure.



HUSKYLOCK™ 936

Top of the line overlock with SEWING ADVISOR™ feature has 16 preprogrammed stitches including 2, 3, 4, 5 thread overlock, cover stitch, chain stitch, flatlock, instant rolled edge, differential feed, and more. The SEWING ADVISOR™ feature sets automatic differential feed and stitch length. Free arm for small areas and 50 memories for specialty stitches.



HUSKYLOCK™ 910

2, 3, 4 thread overlock with SEWING ADVISOR™ feature has 11 preprogrammed stitches including 2, 3, 4 thread overlock, flatlock, instant rolled edge, differential feed, free arm, 50 memories, and more.



HUSKYLOCK™ 905

2, 3, 4 thread overlock with flatlock, instant rolled edge, differential feed, free arm, and more.



HUSKYLOCK™ 901

The HUSKYLOCK™ 901 machine sews, overcasts and trims the seam allowances, all in one step. Combine the speed and professional finish of your HUSKYLOCK™ 901 machine with the versatility of your sewing machine for unlimited creativity. The HUSKYLOCK™ 901 machine offers you a wide variety of 2, 3 and 4 thread sewing.

An overlock machine makes your sewing room complete. Your HUSQVARNA VIKING® HUSKYLOCK™ machine will sew the seam, trim excess fabric and overcast the edges in one sewing step with speed and precision. There is also plenty of opportunity for creative and decorative overlock techniques. There are many HUSKYLOCK™ accessories for even more special sewing techniques. Add a little extra flair with the pearl foot, gathering foot or piping foot.




CORDED WAVY EDGE FOOT

620097296

For

HUSKYLOCK™ s21 and s25 machines.


Sewing a decorative wavy edge is easy with the Corded Wavy Edge foot. The curvy, softly ruffled edge is a perfect finish for bridal veils, figure skating costumes, ballet skirts, crafts and more.

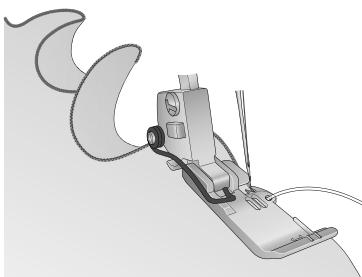

Note: For best results, use fabric with stretch. For fabric with no stretch, cut on the bias.

1. Set the machine for a 3-thread rolled edge.
2. Snap on the Corded Wavy Edge foot.
3. Insert a 0.3mm nylon fishing line (or similar) into the opening in the foot. The fishing line will be covered by the rolled edge.
4. Start to sew slowly. Make sure the fishing line is hidden in the rolled edge as you sew.

Tip: * 40 wt. rayon embroidery threads in a contrasting color in the upper and lower loopers will give a shiny colorful edge.

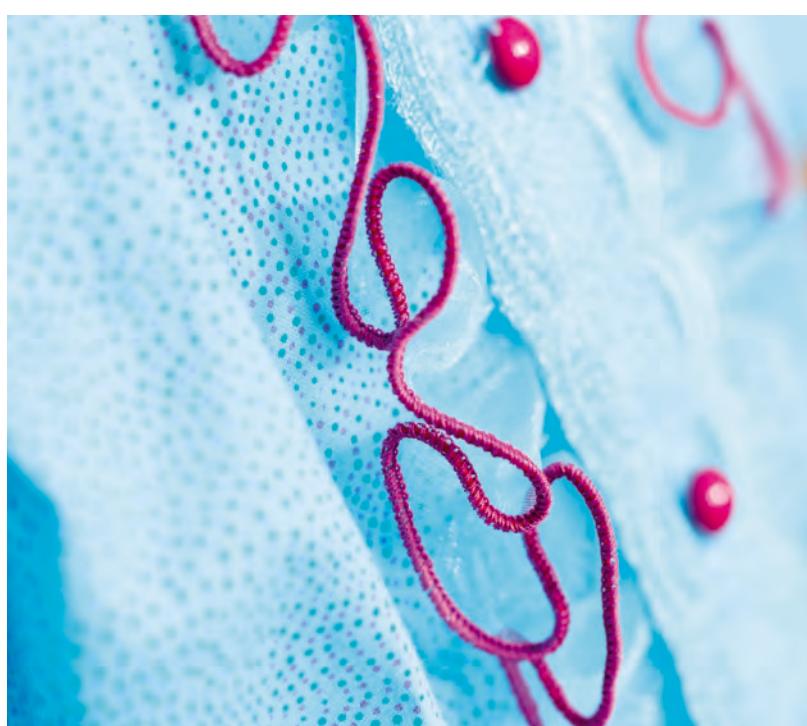




YARN APPLICATION FOOT

620082096

For

HUSKYLOCK™ s15 machine.

This foot is used for sewing yarns (cords, nylon gut) up to a thickness of 1.0 mm. This produces an undulating or stiffer hem (e.g. on wedding dresses and valance).

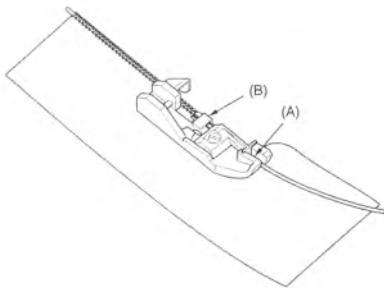


Preparing the machine

- Needle: Right needle
- Stitch type: Two thread lower looper thread wrapped rolled hem or three thread upper looper thread wrapped rolled hem
- Stitch length: 2 mm
- Differential feed lever: Normal position
- Upper knife: Working positron

Sewing

1. Place the fabric under the presser foot.
2. Thread cord (or nylon gut) through slot (A) and under finger (B) of the presser foot.
3. Test sew on a piece of fabric before starting to sew.



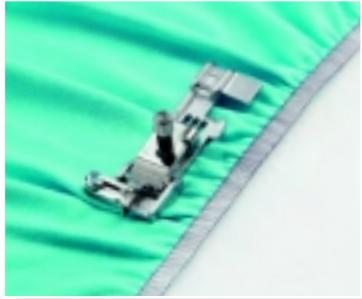

ELASTIC FOOT

620117896

For

HUSKYLOCK™ s21 and s25 machines.

The Elastic Foot guides and stretches narrow elastic ($\frac{1}{4}$ - $\frac{1}{2}$ ", 6-12 mm) as you sew it to fabric. It is great for sewing for active wear, lingerie and other elastic insertion techniques.

Note: To adjust the stretch of the elastic:

- Turn the tension screw to the right for more stretch.
- Turn the screw to the left for less stretch.
- Be careful not to stretch the fabric while sewing.

1. Set the overlock machine for the desired stitch.

2. Loosen the screw at the front of the Elastic Foot to release the tension on the roller. Insert the elastic into the foot.
3. Snap on the foot and pull the elastic until it reaches behind the foot.
4. Tighten the tension screw to stretch the elastic.
5. Turn the handwheel to sew the first few stitches to secure the elastic.
6. Place the fabric under the foot and sew both the elastic and the fabric together.
7. Check the stitch and adjust the tension if necessary.



ELASTIC FOOT

620116796


For

HUSKYLOCK™ s15 machine.

This foot is used for attaching elastic tape to the garment and the amount of contraction of the elastic tape can be adjusted as required. This foot can also be used for attaching tape to prevent stretching.

Preparing the machine

- Needle: Left or right, or both left and right
- Stitch type: Three-thread overlock or four-thread ultra stretch mock safety stitch
- Stitch length: 3-5 mm
- Differential feed lever: Normal position
- Upper knife: Working or non-working position

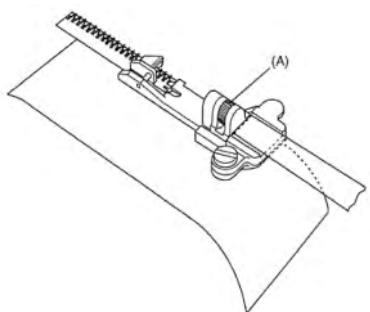

Sewing

1. Before attaching the sewing foot to machine, pass the elastic tape through presser foot and adjust stretch with adjusting screw (A).
2. Attach presser foot to machine.
3. Sew 2 - 3 stitches while pulling the elastic tape lightly to the rear of machine.
4. Continue to sew the elastic tape onto the fabric while lightly pulling the end of elastic tape.



BLINDHEM & LACE FOOT

620117796

For

HUSKYLOCK™ s21 and s25 machines.

The Blindhem Foot is perfect for sewing invisible hems and for applying lace. The hem is sewn, overcast and trimmed in one step.

Blind hem:

1. Set the overlock machine for the desired stitch.
2. Snap on the Blindhem Foot.
3. Fold and press the hem in place. Turn the hem back on itself toward the right side of the fabric. Leave $\frac{1}{4}$ " (6mm) of the edge exposed. (See illustration.)
4. Place the hem under the foot with the fold against the guide on the foot.
5. Loosen the guide screw to adjust the guide so that the needle just catches the thread of the fold.
6. Guide the fabric as you sew, making sure the fold of the fabric is always against the guide.
7. Open the fabric and press lightly on the wrong side.
8. Test on a scrap piece of fabric before sewing your project.

Lace:

1. Set the overlock machine for the desired stitch
2. Snap on the Blindhem Foot.
3. Place the wrong side of the lace to the right side of the fabric.
4. Place under the foot with the fabric extending to the right of the guide. The header of the lace will be against the left side of the guide.
5. Loosen the guide screw to adjust the guide so the needle just catches the header of the lace.
6. Guide the fabric as you sew, making sure the header of the lace is always against the guide.
7. When finished, open the lace flat. Fold the seam allowance to the back of the fabric and press.
8. If using insertion lace, repeat on the other side of the lace.



BLIND HEM FOOT


620117096

For

HUSKYLOCK™ s15 machine.

This foot is for sewing cuffs on knit fabrics, and hemming where seam should not be visible.

Preparing the machine

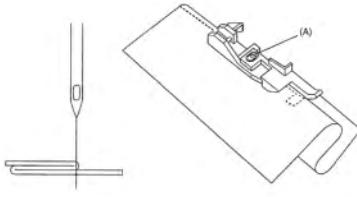

- Needle: Right needle
- Stitch type: Three-thread overlock or three-thread flatlock
- Stitch length: 4-5mm
- Differential feed lever: Normal position
- Upper knife: Working position

Sewing

1. Fold fabric as shown and place it under the presser foot.
2. Loosen screw (A) and adjust edge guide so that needle will penetrate the fabric close to the folded edge.
3. Guide fabric lightly while sewing so that needle will just catch the edge of fold.



PIPING FOOT

620086796

For

HUSKYLOCK™ s21 and s25 machines.

The Piping Foot is perfect for inserting packaged piping into seams and on edges for a tailored finish. The trim is sewn between the two layers of fabric in one step. A groove under the foot helps guide the piping. You can also create your own piping for a custom finish. The Piping Foot makes it fast and easy to cover cording with fabric and to insert piping into seams for a professional look!


1. Set the overlock machine for the desired stitch.
2. Snap on the Piping Foot..

To stitch piping into a seam:

3. Place the piping along the seam line on right side of fabric. Place second piece of fabric on top with right sides together.
4. Put fabric and piping layers under the Piping Foot with the piping in the groove on the underside of the foot.
5. Sew piping into the seam.
6. The groove on the underside of the foot will guide the piping as you sew.

To make piping from your fabric:

7. Cut bias or crosswise grain strips wide enough to cover the cord plus the seam allowances.
8. Lay the cord on the wrong side of the fabric strip and fold the fabric over the cord.
9. Place the fabric and cord under the Piping Foot with the cord in the groove on the underside of the foot.
10. Sew. The groove will guide the cord as you sew.

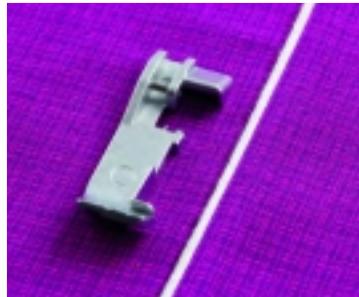

PIPING FOOT


620116996

For

HUSKYLOCK™ s15 machine.

This presser foot is suited for sewing welting between two layers of fabric.

Preparing the machine

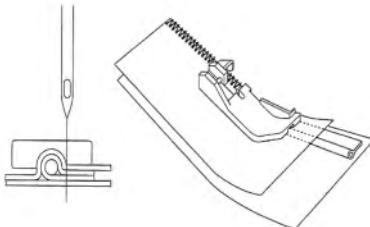

- Needle: Left or both left and right

- Stitch type: Three-thread overlock or four-thread overlock

- Stitch type: 2-5mm

- Differential feed lever: Normal position

- Upper knife: Working position

Sewing

1. Place fabric with right sides facing.
2. Place cording (piping) in between upper and lower fabrics and insert fabrics under cording foot with cording positioned in groove under foot.
3. Sew while guiding both cording (piping) and fabric.

Note: Cording (piping) using bias tape and cord can also be done with this foot.



BEADING FOOT

620086696

For

HUSKYLOCK™ s21 and s25 machine.

The Beading Foot smoothly guides beads and pearls through a channel on the foot for easy application on garments or crafts.

1. Set the overlock machine for the desired stitch.
2. Pull the bead string through the channel on the underside of the foot.
3. Snap the Beading Foot onto the machine.
4. Turn the handwheel to sew the first two stitches to keep the beads in place.
5. Sew pearls onto the edge of fabric, cutting just a little bit of fabric as you sew. Or sew along the fold without cutting.

Note: The needle should penetrate about $\frac{5}{8}$ " (1.5mm) from the fabric edge.



BEADING FOOT

620081896


For

HUSKYLOCK™ s15 machine.

This foot is used for sewing on beads, spangles, etc.

Preparing the machine

- Needle: Left or right (left is preferable.)
- Stitch type: Three-thread overlock or wrapped edge overlock
- Stitch length: 3-5mm
- Differential feed lever: Normal position
- Upper knife: Working or non-working position

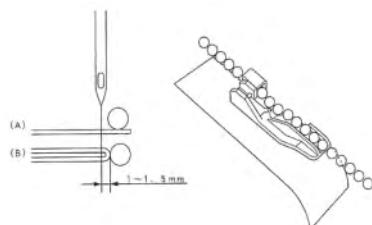

Sewing

1. Select sewing method (A) or (B), then determine needle position and sew 2 or 3 stitches.
2. Turn hand wheel with hand until needle point is level with fabric surface on its upward stroke. Then insert the end of string of beads into guide on presser foot.
3. Sew 2 - 3 stitches by turning hand wheel with hand.
4. Press beards lightly with left finger while sewing.
5. Sew the last few stitches by turning hand wheel with hand to avoid beads interfering with needle and loopers.



GATHERING FOOT

620088396

For

HUSKYLOCK™ s21 and s25 machines.

The Gathering Foot is perfect for gathering a single layer of fabric or simultaneously gathering and stitching two layers of fabric. (The bottom fabric layer will be gathered and the top layer remains flat.) Suitable for light and medium weight woven fabrics.

Tip:

To increase the fullness of the gathering:

- Increase the needle thread tension
- Set the differential feed to a higher number
- Adjust the stitch length to a higher number

A single layer of fabric may also be gathered by placing it under foot and adjusting stitch length, differential feed and needle thread tension to desired fullness.

1. Set the overlock machine for the desired stitch.

2. Snap on the Gathering Foot.

3. Insert the bottom fabric layer (fabric to be gathered) between the needle plate and the Gathering Foot all the way up to the cutter, with right side up.
4. Insert the top fabric layer in the opening of the Gathering Foot and even with the bottom layer right side down.
5. Lower the presser foot and sew. Guide the fabric against the fabric guide, letting the bottom layer feed freely to gather.



GATHERING FOOT

620116896

For

HUSKYLOCK™ s15 machine.

This foot is most suited for gathering when sewing tiered skirts, yokes, cuffs and frills on skirts, etc. This foot is also suited for sewing two fabrics together and gathering the bottom fabric in one operation.

Preparing the machine

- Needle: Left or right, or both left and right
- Stitch type: Three—thread overlock or four-thread overlock
- Stitch length: 3-5 mm
- Differential feed lever: Gathering position
- Upper knife: Working position

Sewing

1. Place two layers of fabric on machine with separator plate (A) in between the upper and lower fabrics.
2. Sew 2-3 stitches.
3. Hold and lightly guide upper and lower fabrics separately while sewing.



LACE FOOT

620117296

For

HUSKYLOCK™ s15 machine.

This foot is used for sewing lace or borders together or onto the workpiece.


Preparing the machine

- Needle: Right needle
- Stitch type: Three-thread overlock or three—thread standard rolled hem
- Stitch length: 1.5 - 3 mm
- Differential feed lever: Normal position
- Upper knife: Working or non-working position

Sewing

1. Place the fabric under guide finger (A) and lace on top of guide finger (A).
2. If necessary, loosen screw (C) and slide guide plate (B) to the left or right to adjust stitch width.
3. Tighten screw (C).
4. Guide lace along guide plate (B) and sew.

Note: If there is no necessity to cut the fabric edge, place both fabric and lace on top of guide finger (A). Be sure to disengage the upper knife.

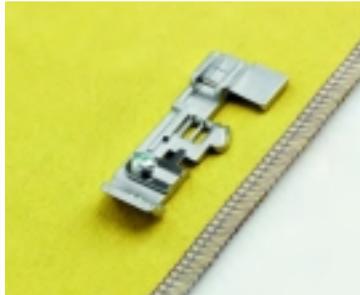

TAPING FOOT

620086896

For

HUSKYLOCK™ s21 and s25 machines.

The Taping Foot is used to apply seam tapes to seams to prevent stretching. It is especially good for stabilizing shoulder seams. With this foot you can reinforce and construct seams in one step.

1. Set the overlock machine for the 4-thread overlock.
2. Place the seam tape in the guides on the foot.
3. Adjust the screw to fit the width of the tape.
4. Snap the taping foot onto the machine.
5. Sew the seam.

Note: Works best with $\frac{1}{4}$ " (8mm) seam tape.



HUSKYLOCK™ BLIND HEM FOOT

1650012440


For

HUSKYLOCK™ 901 1,0 mm machines.

Blind Hem Foot 1.0 is used for medium-heavy fabrics. Sew with 4-thread overlock. Stitch plate A.

1. Snap on Blind Hem Foot.
2. Fold hem as illustrated.
3. Set stitch length to 4-5 and stitch width to 5.5. Place fabric under the Blind Hem Foot and the fold on the guide. Loosen the guide screw to adjust the guide so the left needle just catches the fold. Try on a scrap of fabric before sewing your project.

Hint: Use the guide to prevent cutting your fabric for flatlock or pintucks.

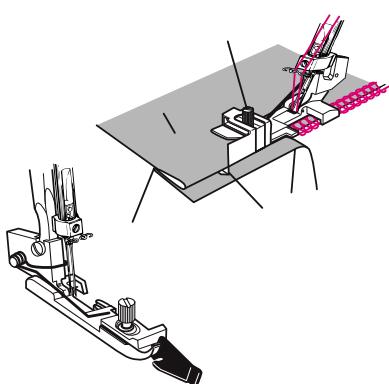



HUSKYLOCK™ PIPING FOOT

SMALL 2141012408

For

HUSKYLOCK™ 936, 910 and 905 machines.

LARGE 1650002460


For

HUSKYLOCK™ 901 machine.

Your HUSKYLOCK™ has two optional Piping Feet. One for standard size piping and a wider grooved foot for larger decorator piping. The sewing technique for both is the same. The Piping/Cording Foot makes both the covering of cord with fabric to make piping and the insertion process faster and easier. Machine setting: 3 or 4 thread stitch length "N", -width "N", -finger "N". Fabric: medium weight woven and piping. Tension settings: normal, (LN) N, (RN) N, (UL) N, (LL) N.

Serge:

1. Replace regular foot with Piping Foot.
2. Cut square of fabric in two and lay piping along seam line between the two pieces of fabric (right sides together).
3. Insert fabric pieces under the foot so that the piping lays in the groove under the foot.
4. Serge piping into the seam.

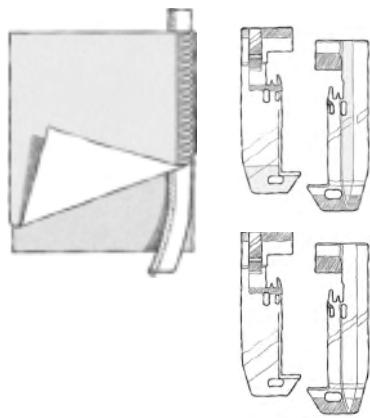



HUSKYLOCK™ GATHERING FOOT

2141002502


For

HUSKYLOCK™ 936, 910 and 905 machines.

1257002560

For

HUSKYLOCK™ 901 machine.

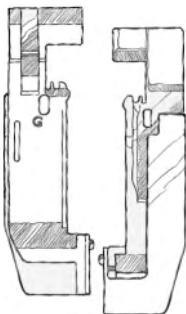

The Gathering Foot, also known as a shirring foot or separator foot, is used for joining two pieces of lightweight fabrics while gathering only one of the fabric layers as it is stitched to the flat layer. Machine setting: 4-thread overlock, stitch length 3–4, stitch width N (4–5), stitch finger N (stitch plate A for 901). Two needles are used, for 905/910/936: C- and D-position. Differential feed for 905/910/936: 2–2.5 (901: 2). Tensions settings: 8 for both needle thread dials and normal tension for both looper thread dials.

1. Snap on the Gathering Foot.
2. Insert the bottom fabric layer between needle plate and Gathering Foot all the way to the upper cutter, with right side up.
3. Insert the top fabric layer in the opening of Gathering Foot and flush with the bottom layer right side down.
4. Lower the presser foot and sew. Guide the fabric against fabric guide, letting the bottom layer feed freely to gather.



HUSKYLOCK™ ELASTIC FOOT

2141002407


For

HUSKYLOCK™ 936, 910 and 905 machines.

1650002450

For

HUSKYLOCK™ 901 machines.

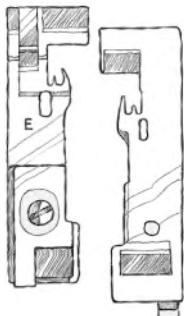

The Elastic Foot guides and stretches narrow elastic as you sew it to fabric. Machine setting: 3-thread overlock, stitch length 4–5, width N (901: 4.5–5), stitch finger N (stitch plate A for 901). Set all tension dials for normal tension.


1. Loosen the screw at the front of the Elastic Foot to release the tension on the roller and insert the elastic into the foot.
2. Snap on the foot and pull the elastic until it reaches behind the foot.
3. Sew the elastic only until it is feeding out of the foot. Tighten the tension screw to stretch the elastic.
4. Place the fabric under the foot and sew together with the elastic.
5. Check the stitch and adjust the tension if necessary.
6. To adjust the stretch of the elastic: a. Turn the tension screw to the right for more stretch. b. Turn the screw to the left for less stretch.





OVERLOCK SEWING AND **COVERSTITCH**

Your top of the line HUSQVARNA VIKING® HUSKYLOCK™ machines features Coverstitch and Chainstitch sewing accessories for the most professional hems, decorative accents and finishing techniques.

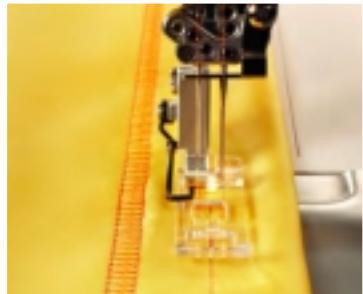


CLEAR COVERSTITCH FOOT

620096896


For


HUSKYLOCK™ s21 and s25 machines.

With the Clear Coverstitch foot, you can see your fabric and marked line under the foot as you sew.

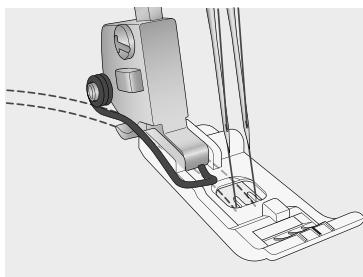

1. Set the machine for a Coverstitch or a Chainstitch.
2. With a water soluble marker, draw a line on the fabric to mark the stitching line.
3. Snap on the Clear Coverstitch foot.
4. Use default stitch settings. Adjust if needed.
5. Place the fabric under the presser foot and the needles. Start to sew into the fabric without chaining off first.
6. Use the red center marking on the foot as a guide as you follow a line drawn on the fabric. The Clear Coverstitch foot will give you a great view of the marked line and of your fabric while sewing.

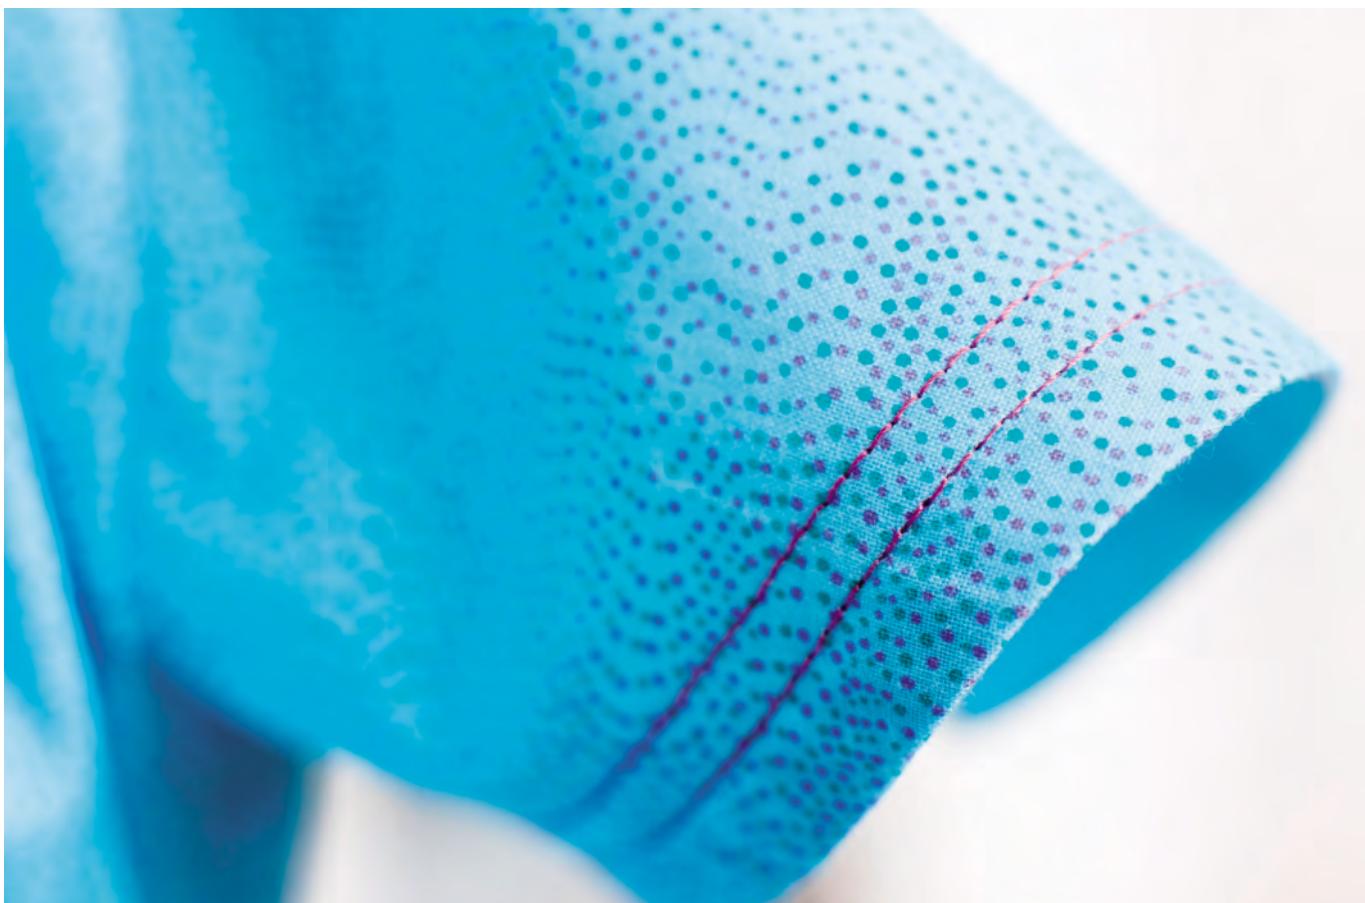

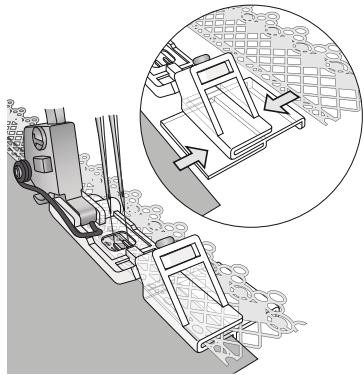

FLAT TRIM FOOT

620096996


For

HUSKYLOCK™ s21 and s25 machines.



With the Flat Trim foot, you can easily add lace and trims to the top of the fabric with a coverstitch to create beautiful decorative edges and effects.

1. Set the machine for a Coverstitch wide.
2. Snap on the Flat Trim foot.
3. Use default stitch settings. Adjust if needed.
4. Insert the fabric edge into the lower section on the left side of the foot. Slide the fabric under the foot and under the needles.
5. Insert the trim into the upper section on the right side of the foot. Slide the trim toward the back of the foot beyond the needles, leaving a short tail of trim behind the needles.
Tip: Use tweezers to slide the fabric and the trim to the correct position under the needles.
6. Lower the needles into the trim and the fabric. Lower the Flat Trim foot
7. As you sew, hold the fabric in your left hand and the trim in your right hand.

Tip: If you want a finished fabric edge, press a $\frac{1}{4}$ " (6mm) hem to the right side of the fabric before inserting the fabric into the Flat Trim foot. The lace will cover the fabric raw edge when sewn in place.

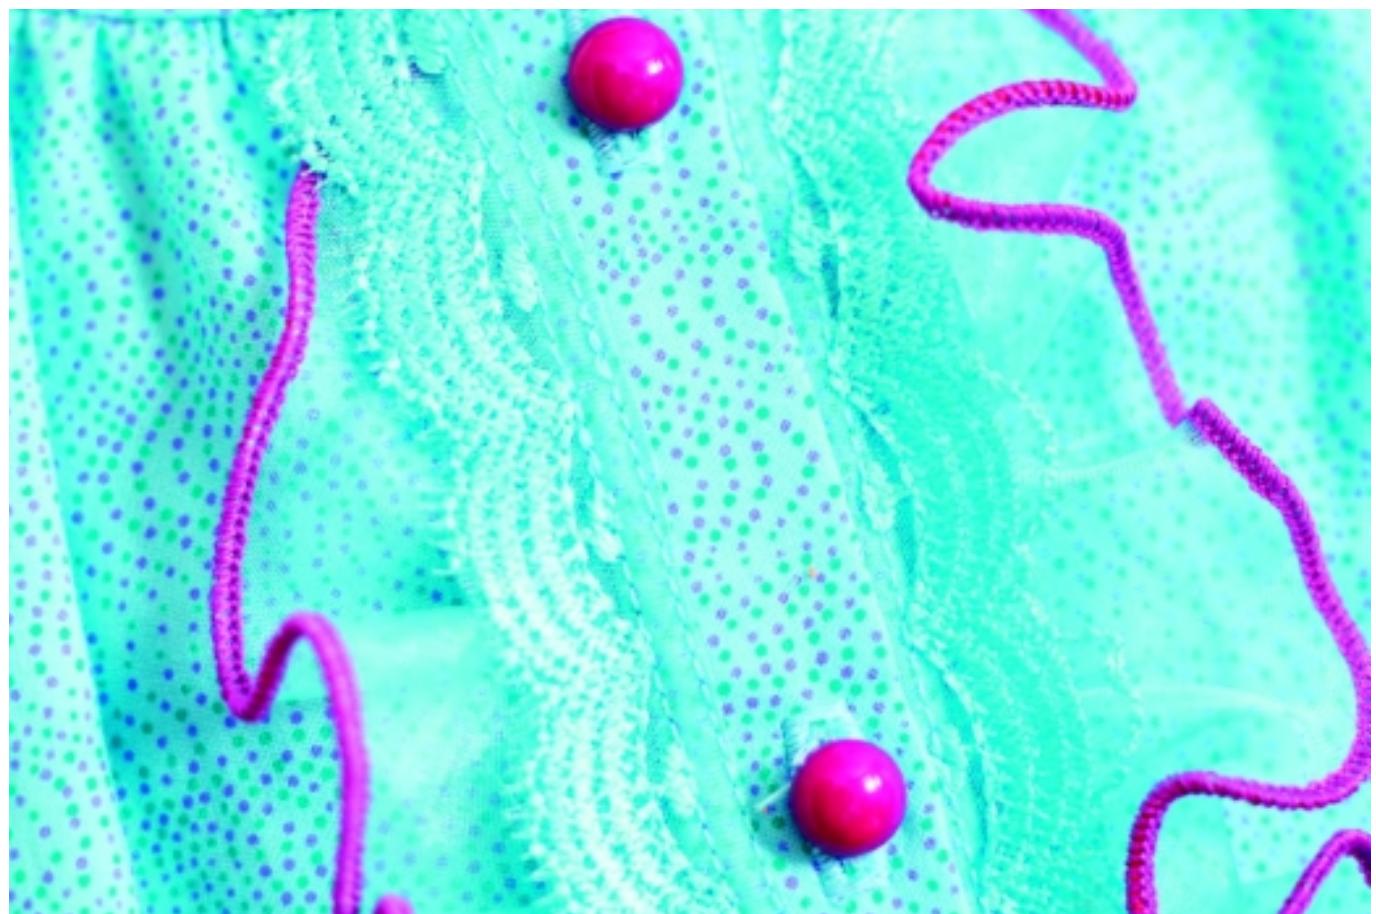



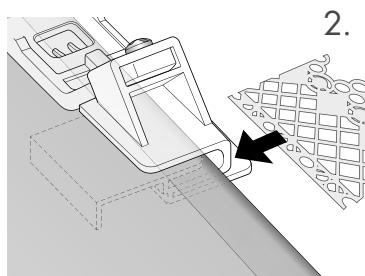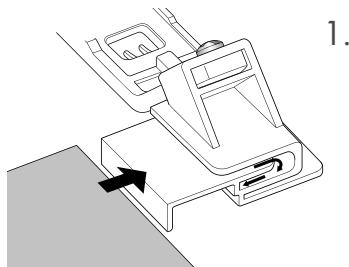

JOIN AND FOLD EDGING FOOT

620097396



For

HUSKYLOCK™ s21 and s25 machines.

Use the Join and Fold Edging foot to hem the fabric edge and attach lace at the same time.

1. Set the machine for Coverstitch, wide.
2. Use the default stitch settings. Adjust if needed.
3. Snap on the Join and Fold Edging foot.
4. Slide the raw edge of the fabric right side up, into the fabric guide (illustration 1).
5. Slide the fabric to the back underneath the presser foot and the needles.
6. Insert the lace into the right lace guide and pull a lace tail about 1" (2.5cm) behind the foot (illustration 2). Use tweezers if needed.
7. Lower the presser foot. Hold the fabric in your left hand and the lace in your right hand and start to sew.

Note: Adjust the screw on the guide to adjust the stitch position if needed.

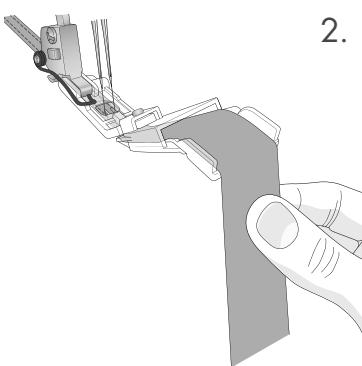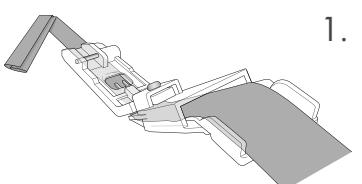

STRAP AND BELT LOOP FOOT

620097196

For

HUSKYLOCK™ s21 and s25 machines.

With the Strap and Belt Loop foot, create straps and belt loops easily using a cover stitch. Just put a strip into the foot and the strip is folded automatically and stitched in place.

1. Set the machine for a Coverstitch wide.
2. Use the default stitch settings. Adjust if needed.
3. Cut a strip of fabric, 1" (25mm) wide.
4. Cut the top corner of the strip at a 45 degree angle to form a point.
5. Insert the cut angle into the guide, right side of the fabric facing up. Pull the strip through the slot and under the foot. Extend the tail of the strip behind the foot (Illustration 1). Use a tweezers to feed the strip into the foot if needed.
6. Snap the Strap and Belt Loop foot onto the machine.
7. Slide the strip approximately 2" (5cm) behind the foot.
8. Lower the presser foot. Be sure both raw edges of strip are turned under before stitching. Sew the first few stitches. Stop and clip the needle threads close to the presser foot and continue sewing.
9. For even feeding, hold the fabric strip slightly below the first guide in the front of the foot (Illustration 2).
10. Sew at medium speed. Check the fabric as you sew to ensure proper feeding.

Note: Sew the folded fabric strip without additional fabric underneath to create straps and belt loops or sew the folded strip onto another fabric for decorative effects.

PIPING FOOT WITH CORDING GUIDE



620097096

For
HUSKYLOCK™ s21 and s25 machines.


With the Piping foot with Cording guide, you can create piping, corded tucks and decorative trims.



PIPING




CORDED TUCKS

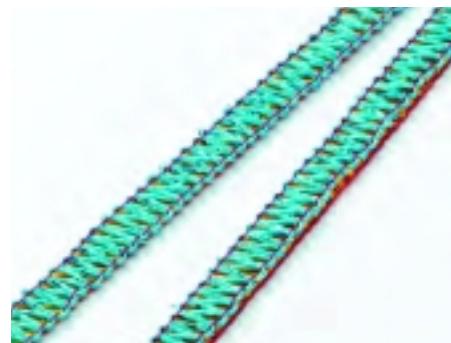

DECORATIVE TRIM

PIPING

1.

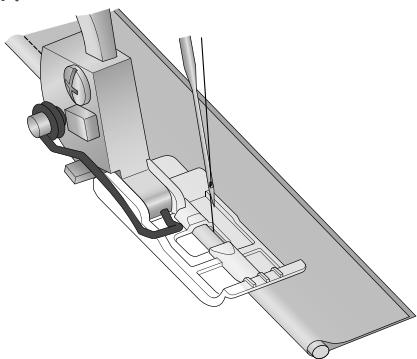


Easily create your own piping:

1. Set the machine for Chainstitch.
2. Use the default stitch settings. Adjust if needed.
Note: Although the machine recommends needle D, you will use needle E for this technique instead.
3. Snap on the Piping foot. (The cording guide is not used for this technique.)
4. Place the cord in the groove on the bottom of the foot and pull the cord tail behind the foot about $2\frac{1}{2}$ " (5cm).
Note: $\frac{1}{4}$ " - $\frac{5}{8}$ " (1.5 - 2.0mm) cord can be used.
5. Cut a strip of fabric on the bias, 1" (25mm) wide.
6. Wrap the fabric around the cord in the front of the foot. Slide the fabric under the foot.
7. Lower the presser foot and sew over the cord and fabric (illustration 1). (Hold the cord behind the foot as you begin to sew.)

CORDED TUCKS

Achieve a trapunto effect when a coverstitch is sewn over a cord in the guide.

2.

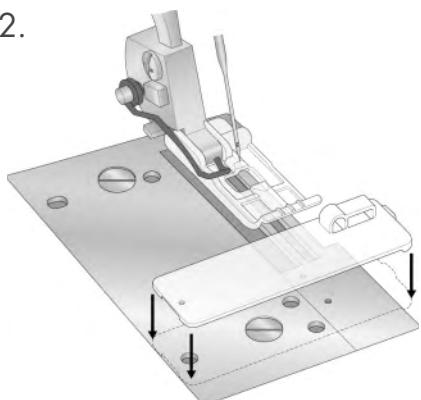


- Set the machine for coverstitch, wide.

Note: Although the machine recommends needles C and E, you will use needles D and E for this technique instead.


- Snap on the Piping foot and attach the cording guide as illustrated (illustration 2).
- Insert the cord into the round hole of the cording guide and position it in the groove on the bottom of the Piping foot.
- Lay the fabric right side up on top of the cord. Slide it under the foot until it is underneath the needles (illustration 3).
- Lower the needles into the fabric. Lower the presser foot and start to sew at a medium speed. (Hold the cord behind the foot as you begin to sew.)

3.

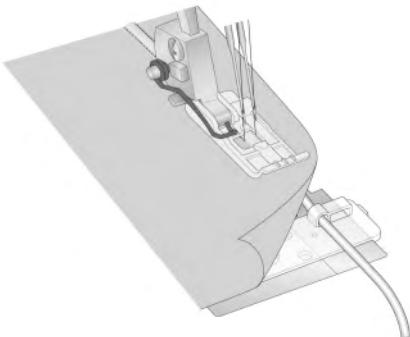

DECORATIVE TRIM

4.

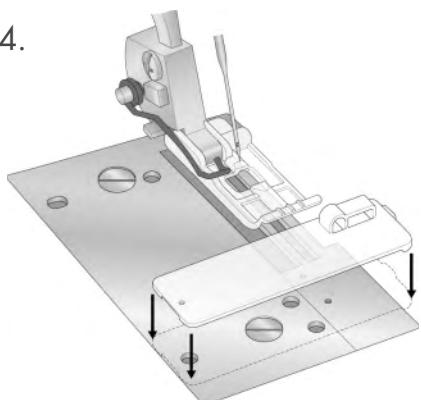


Use decorative thread and ribbons to create special effects and unique trims.

- Set the machine for 3-thread ornamental flatlock stitch, wide with decorative thread in the loopers.
- Snap on the standard presser foot and attach the cording guide as illustrated (illustration 4).
- Insert a ribbon $\frac{1}{4}$ " (6mm) wide right side down into the rectangular opening in the guide.
- Place the ribbon under the presser foot to the right side of the needle, leaving a 2" (5cm) tail behind the foot.
- The needle should go down into the machine just beyond, not into, the edge of the ribbon (Illustration 5).
- Sew over the ribbon to make a decorative trim.

Tip: Make your decorated ribbon long enough to cut it in three pieces, then braid (Illustration 6).

5.

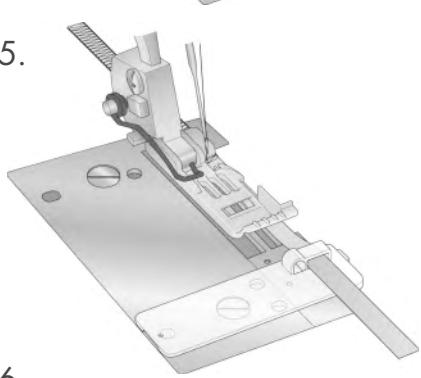

6.





BIAS TAPE FOLDER FOOT

412671301

For

HUSKYLOCK™ 936 machine.

Set machine for Coverstitch

To sew bias tape:


1. Press the stitch selection button until "Auto M" "Cover stitch wide" appears.
2. Press the fabric selection button until appropriate fabric type appears.

Note: Use needle A & E.

3. Raise the presser foot and snap on Bias Tape Folder foot.
4. Trim off the two top corners.

Note: 1" (23~25 mm) width tape can be used.

5. Insert the tape into tape guide. Use tweezers to feed tape through slot on front of foot. Extend tail of tape 2" (5 cm) behind foot.
6. Lower presser foot and sew on bias tape only to test stitch.
7. Raise presser foot and slide fabric under foot to needles.
8. Top stitch folded bias tape onto fabric with cover stitch.
9. Sew belt loops without fabric underneath.

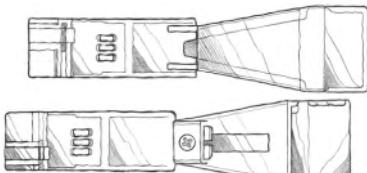

HEMMING FOOT

412671401

For

HUSKYLOCK™ 936 machine.


Set machine for Coverstitch

To sew hems:

1. Press the stitch selection button until "Auto M" "Coverstitch wide" appears.
2. Press the fabric selection button until appropriate fabric type appears.

Note: Use needle A & E.

3. Raise the presser foot and snap on Hemming foot.
4. Fold the fabric at the position of 1" (23 mm) from the edge.
5. Insert the fabric into fabric guide with the folded side down.
6. Slide fabric into guide under foot to needles.
7. Lower presser foot and sew.

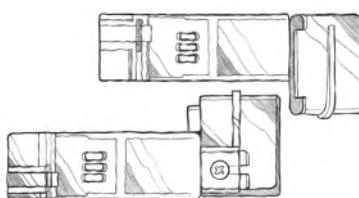



EDGE GUIDE AND HOLDER

412716845

For

HUSKYLOCK™ 936 machine.

Whether creating pintucks or quilting with the chainstitch on your HUSKYLOCK™, the Edge Guide and Holder will make it a snap, allowing you to create row after row of matching stitches.

For coverstitch and chainstitch:



1. Loosen screw of presser foot ankle 3 or 4 turns. Do not remove screw.
2. Firmly insert Guide Holder (782) into presser foot ankle. Tighten screw.
3. Insert Edge Guide (784) under clip of Guide Holder from the left side.
4. Adjust Edge Guide by sliding left or right. Edge Guide is useful when sewing parallel rows, by following the stitching of the first line with the guide.



PINTUCK FOOT AND GUIDE


412716245

For

HUSKYLOCK™ machine.

Create beautiful pintucks quickly and easily with the Coverstitch pintuck foot and guide. Ideal for blouses, camisoles and heirloom projects.

To sew pintucks:

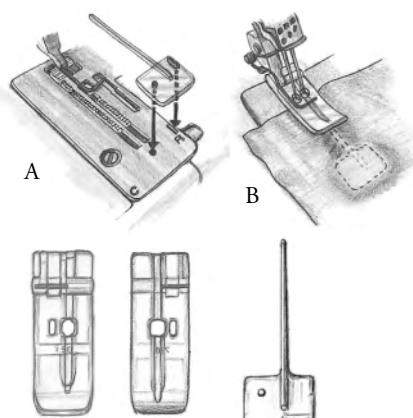

1. Select Coverstitch narrow. Set machine for Coverstitch.
2. Choose the type of fabric with the fabric selection button.
3. Raise the presser foot and snap Pintuck Guide (750 B) into the hole on front of the needle plate. (Illustration A)
4. Snap on Pin Tuck Foot (750).
5. Set tension as advised by the Infodisplay.

Note: Use needle B + E.

6. Place the fabric under the presser foot and up to the needles. (Illustration B)
7. Lower the presser foot and sew.




FLAT LACE FOOT

412716445

For

HUSKYLOCK™ 936 machine.

Now you can serge edging lace along the edges of projects using the HUSKYLOCK™ 936 Coverstitch. Make lingerie in a snap, add lace to create beautiful handkerchiefs or delicate table toppers.

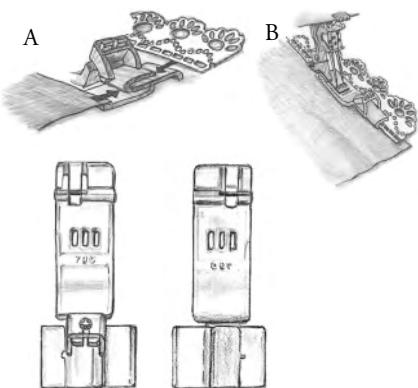

1. Select cover stitch wide for medium fabric or cover stitch narrow for light weight fabric. Set machine for Coverstitch.
2. Choose the fabric with the fabric selection button.
3. Raise the presser foot and snap on Flat Lace Foot (790 B).
4. Set needles and tension as advised by the Infodisplay.
5. Insert the fabric into the left fabric guide and slide it under the presser foot to the needles. Insert the lace into the right lace guide and slide it beyond the needles. (Illustration A)

Note: Use tweezers to slide the fabric and the lace to the needles.

6. Lower the presser foot and sew. (Illustration B)




FLAT EDGE LACE FOOT

412716545

For


HUSKYLOCK™ 936 machine.

Fold the fabric under along the edge, and attach lace all in one easy step for a beautiful finish, using the Coverstitch Flat Edge Lace Foot.

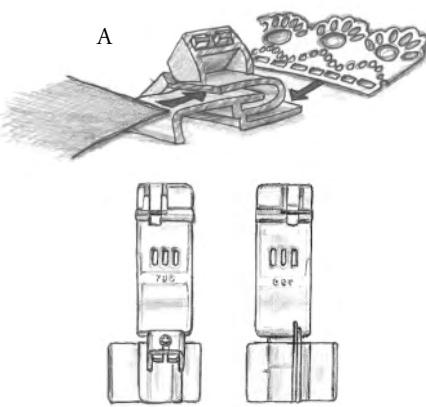

1. Select Coverstitch wide. Set machine for Coverstitch
2. Choose the fabric with the fabric selection button.
3. Raise the presser foot and snap on Flat Edge Lace Foot (790 C).
4. Set tension as advised by the Infodisplay.
5. Insert lace into the right lace guide and slide it 1" (2.5 cm) beyond the needles. (illus. A)
6. Fold the fabric under 1/4" (6 mm). Insert the fabric into left fabric guide with the folded side down. Slide the fabric under the foot to the needles.
7. Lower the presser foot and sew.

Note: Use needle A, E.

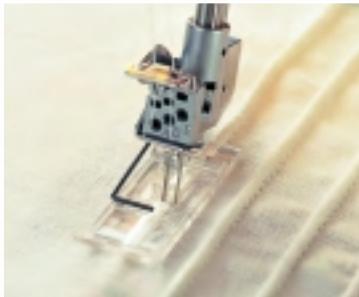

CORDING AND PIPING SET

412671101

For
HUSKYLOCK™ 936 machine.

To sew cording:

1. Press the stitch selection button until "Auto N" "Coverstitch narrow" appears.
Set machine for Coverstitch.
2. Press the fabric selection button until appropriate fabric type appears.
Note: Use needle B & E.
3. Raise the presser foot and snap on cording and piping foot.
4. Snap Cord Guide into hole on front of needle plate.
5. Insert cord into the hole of the cord guide, then traverse through groove of the cording and piping foot.

Note: 1/8"-1/4" (1.5~2.0 mm) cord can be used.

6. Pull the cord tail about 2" (5 cm) behind the foot.
7. Insert fabric between the foot and cord. Slide fabric under foot and up to needles.

Lower presser foot and sew.

Note: Hold cord behind foot when beginning to sew.

To sew piping:

1. Press the stitch selection button until "Auto L" "Chainstitch" appears. Set machine for Chainstitch.
2. Press the fabric selection button until appropriate fabric type appears.

Note: Although SEWING ADVISOR™ feature recommends needle A, use needle B.

3. Raise presser foot and snap on Cording and Piping foot.


Note: The cord guide is not used for this technique.

4. Insert cording through the groove on cording and piping foot.
Pull cord tail behind foot about 2" (5 cm).

Note: 1/8"-1/4" (1-2.0 mm) cord can be used.

5. Wrap fabric around cording in front of foot. Slide fabric under front of foot.
6. Lower presser foot and sew over cord and fabric.

Note: Hold cord behind foot when beginning to sew.

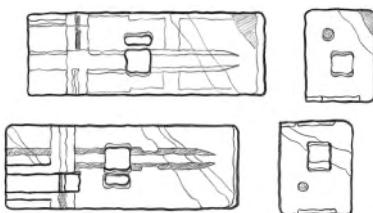




INSPIRA™
NEEDLES



UNIVERSAL NEEDLE

- 620069896: (5 size 60)
- 620069996: (10 size 60)
- 620070096: (5 size 70)
- 620070196: (10 size 70)
- 620070296: (5 size 75)
- 620070396: (5 size 80)
- 620070496: (10 size 80)
- 620070596: (5 size 90)
- 620070696: (10 size 90)
- 620070796: (5 size 100)
- 620070896: (10 size 100)
- 620070996: (5 size 110)
- 620071096: (5 size 120)
- 620071196: (1 size 70, 2 size 80, 2 size 90)
- 620071296: (2 size 70, 6 size 80, 2 size 90)

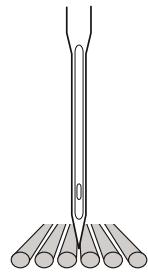


Universal needles (H) have a slightly rounded point and come in a variety of sizes. For general sewing in a variety of fabric types and weights.



TOPSTITCH NEEDLE

- 620071396: (5 size 80)
- 620071496: (5 size 90)
- 620071596: (5 size 100)

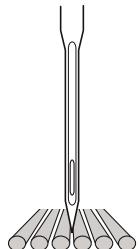

A very large eye on this needle makes it the ideal choice for topstitching with heavier threads. Both the eye and groove are larger, for techniques such as machine tatting or crazy quilt embellishment with silk buttonhole twist, 12 and 30 weight cotton and other decorative threads.




EMBROIDERY NEEDLE

620071696: (3 size 75, 2 size 90)

620071796: (5 size 75)

620071896: (5 size 90)

Embroidery Needles (H-E) have a special scarf, a slightly rounded point, and slightly larger eye to avoid damage to thread and materials. Use with metallic and other specialty threads for embroidery and decorative sewing.

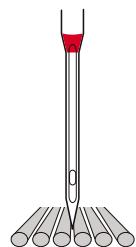

DENIM NEEDLE

620071996: (2 size 90, 2 size 100, 1 size 110)

620072096: (5 size 70)


620072196: (5 size 80)

620072296: (5 size 90)

620072396: (5 size 100)

620072496: (5 size 110)

Denim needles (H-J) have a sharp point to penetrate tightly woven fabrics without deflecting the needle. For canvas, denim, microfibers.

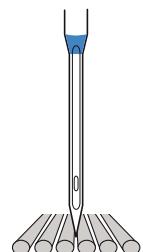


QUILTING NEEDLE

620072696: (3 size 75, 2 size 90)

620072796: (5 size 75)

620072896: (5 size 90)

Quilting Needles (H-Q) have a special tapered point and light ballpoint to sew through layers and batting with ease.

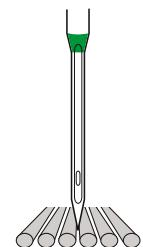




STRETCH NEEDLE

620072996: (5 size 75)

620073096: (5 size 90)

Stretch Needles (H-S) have a special scarf to eliminate skipped stitches when there is flex in the fabric. For knits, swimwear, fleece, synthetic suedes and leathers.

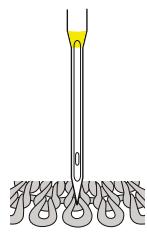

MICROTEX NEEDLE

620073196: (2 size 60, 2 size 70, 1 size 80)


620073296: (5 size 60)

620073396: (5 size 70)

620073496: (5 size 80)

620073596: (5 size 90)

Microtex or sharp needles (H-M) have a sharp point like Denim needles but are available in smaller sizes. Use for microfiber to topstitch lightweight tightly woven fabrics.

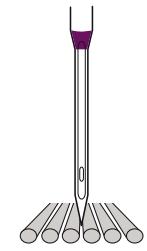


WING NEEDLE

620075296: (1 size 100)

620075396: (1 size 120)

The Wing Needle has wide wings on the side of the needle to poke holes in the fabric when sewing entredeux and other hemstitches on natural fiber fabrics.

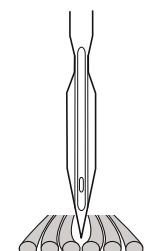



TWIN NEEDLE

- 620073696: (1 size 70. 1.6 mm)
- 620073796: (1 size 80. 1.6 mm)
- 620073896: (1 size 80. 2 mm)
- 620073996: (1 size 80. 2.5 mm)
- 620074096: (1 size 80. 4 mm)
- 620074196: (1 size 90. 3 mm)
- 620074296: (1 size 90. 4 mm)
- 620074396: (1 size 100. 4 mm)



The Twin needle (Double needle) has two separate needles mounted onto one shank. Use for decorative sewing, top stitching and twin needle tucks. Available in sizes (70, 80, 90) and types (universal, denim, embroidery) and distances between the two needles in mm (1.6, 2.0, 2.5, 3.0, 4.0). The larger the number the wider the space between the needle. Use the 4.0 for straight stitch only.



TWIN NEEDLE - SPECIAL

- 620074696: (1 size 100. 4 mm) twin denim needle
- 620074796: (1 size 75. 2 mm) twin embroidery needle
- 620074896: (1 size 75. 2.5 mm) twin stretch needle
- 620074996: (1 size 75. 4 mm) twin stretch needle



BALL POINT NEEDLE

- 620075596: (5 size 70)
- 620075696: (5 size 80)
- 620075796: (5 size 90)
- 620075896: (5 size 100)
- 620075996: (1 size 70, 2 size 80, 2 size 90)

Ballpoint Needles (H-SUK) have a more rounded point that will not run or snag specialty knits because it enters the fabric between the knit fibers.



LEATHER NEEDLES

- 620076096: (5 size 80)
- 620076196: (5 size 90)
- 620076296: (5 size 100)
- 620076396: (5 size 110)

TITANIUM NEEDLE

- 620084796: Quilt (5 size 75)
- 620084896: Quilt (5 size 90)
- 620084996: embroidery (5 size 80)
- 620085096: embroidery (5 size 90)
- 620085196: universal (5 size 80)
- 620085296: universal (5 size 90)

OVERLOCK NEEDLE

- 620079596: (5 size 80)
- 620079696: (5 size 90)



Visit Us At: **Viking Sewing Center**
1232 Lincoln Ave. - San Jose, CA 95125
Ph: 408.298.5696
Website: www.SewViking.com

© 2014 KSIN Luxembourg, S.ar.l. All rights reserved.

HUSQVARNA, VIKING, DESIGNER DIAMOND Royale, DESIGNER DIAMOND deLuxe, DESIGNER DIAMOND, DESIGNER RUBY Royale, DESIGNER RUBY deLuxe, DESIGNER RUBY, DESIGNER TOPAZ, DESIGNER, SAPPHIRE, OPAL, PLATINUM, PRELUDE, SCANDINAVIA, IRIS, ROSE, ORCHIDEA, EMERALD, LILY, FREESIA, 6D, TRUEMBROIDERY and INSPIRA are trademarks of KSIN LUXEMBOURG II, S.ar.l.

HUSQVARNA and the "crowned H-mark" are trademarks of Husqvarna AB.

All trademarks are used under license by VSM Group AB.